 



OWNER'S MANUAL

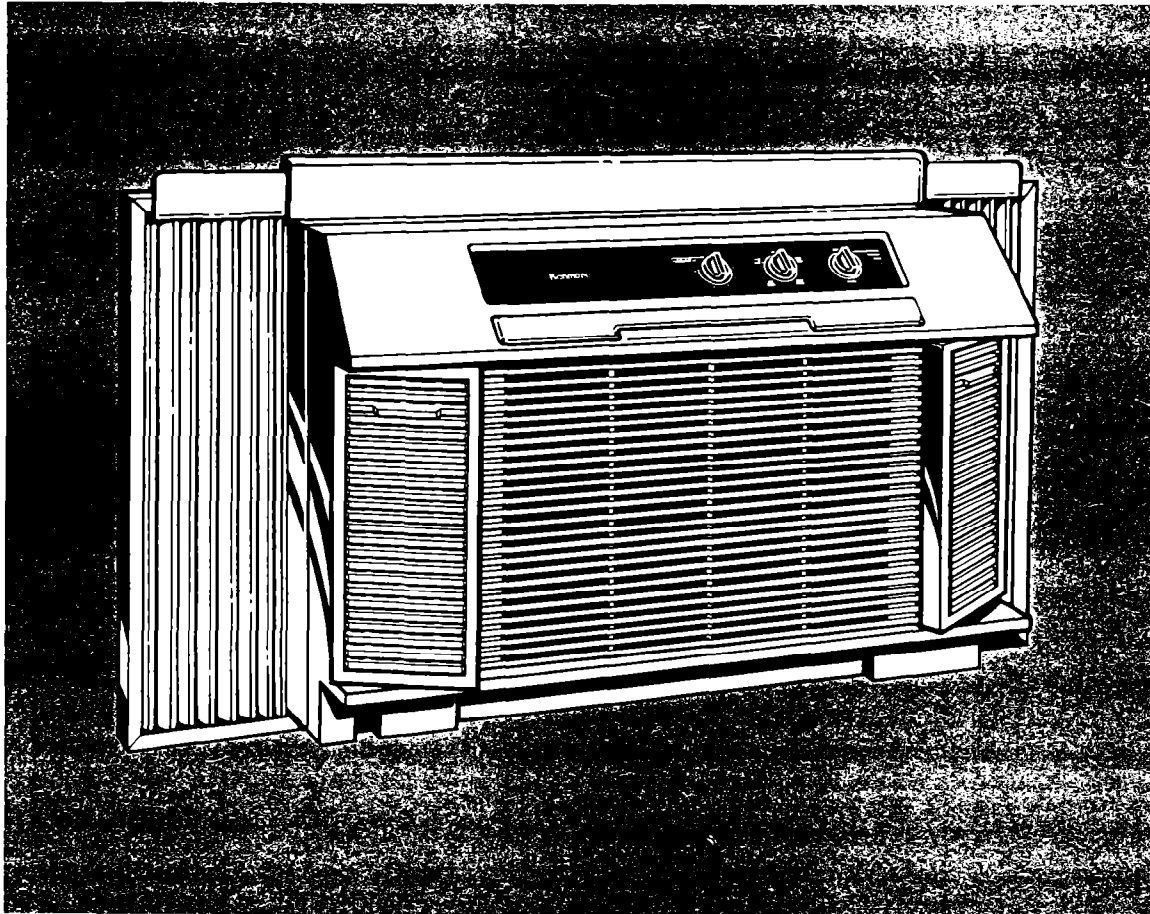

AIR CONDITIONERS

	Page
Safety instructions.....	2
Operating instructions.....	2
Starting your air conditioner.....	2
The exhaust vent control.....	3
Changing air direction.....	3
Cleaning and caring for your air conditioner.....	3
Cleaning front panel.....	3
Cleaning air conditioner filter.....	4
Annual maintenance for your air conditioner.....	4
If you need service or assistance.....	5
Sears Kenmore automatic air conditioner warranty.....	5
We service what we sell.....	5

 ©1989 Sears and Roebuck Co.

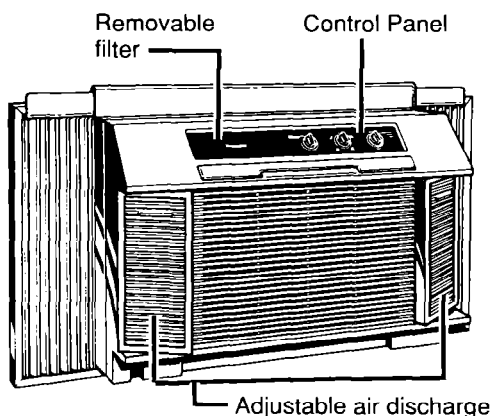

Safety instructions

⚠ WARNING

To reduce the risk of fire, electrical shock or personal injury when using your air conditioner, follow these basic precautions:

- Read all instructions before using your air conditioner.
- Complete the installation requirements as described in the Installation Instructions.
- Never allow children to operate or play with the air conditioner.
- Do Not operate the air conditioner with the front panel removed.
- Never clean air conditioner parts with flammable fluids. The fumes can create a fire hazard or explosion.

• FOR YOUR SAFETY •

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. THE FUMES CAN CREATE A FIRE HAZARD OR EXPLOSION.

It is your responsibility to be sure your air conditioner:

- Is installed in a window that will hold the weight, and is secured according to the Installation Instructions.
- Is connected only to the proper kind of outlet, with the correct electrical supply and grounding. (See Installation Instructions.)
- Is the right size for the area you want to cool.
- Is used only to do what window air conditioners are designed to do.
- Is not used by anyone unable to operate it properly.
- Is properly maintained.
- Also, remove the Energy Label and Things To Know Letter. Use a damp cloth to take off any glue residue. Do not use sharp instruments, flammable fluids or abrasive cleaners. These can damage the material.

- SAVE THESE INSTRUCTIONS -

 
Starting your air conditioner

⚠ WARNING


Electrical Shock Hazard

- Plug unit only into grounded electrical outlet.
- Do not use an extension cord.
- Do not operate unit with front removed.

Failure to follow the above precautions could result in electrical shock or personal injury.

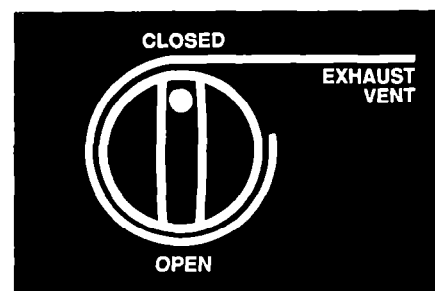


 1. Set Exhaust Vent Control to CLOSED for maximum cooling.

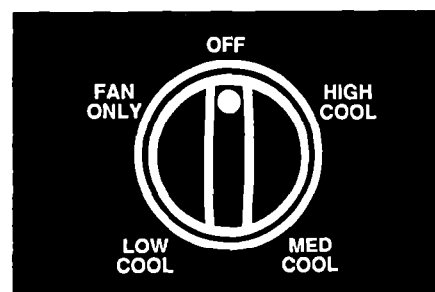

2. Set Fan Speed Control to the desired setting.

 LOW COOL..... for sleeping comfort
MED COOL..... for normal cooling
HIGH COOL..... for maximum cooling
FAN ONLY..... for circulating room air when no cooling is desired

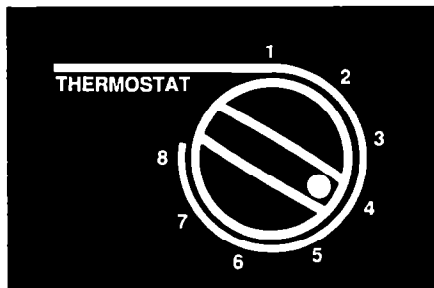


3. Turn the thermostat control to number 4 (mid-setting). You can adjust the air conditioner's cooling performance by resetting the thermostat control to a higher number for maximum cooling. Lower the number setting for less cooling. You will need to experiment to find the setting which suits you best.

NOTE: If you turn your air conditioner off or if the compressor shuts off, wait at least three (3) minutes before turning it back on or you may blow a fuse or trip a circuit breaker.


The exhaust vent control

 The Exhaust Vent Control setting draws stale or smoky air from the room.

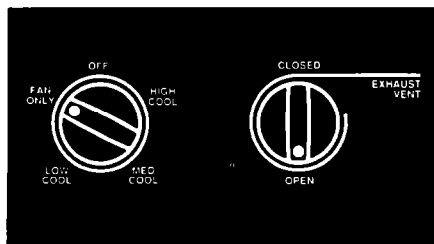

1. To exhaust room air

 Set Exhaust Vent Control to OPEN. For cooling, set Fan Speed Control to one of the COOL settings. If no cooling is desired, use FAN ONLY setting.

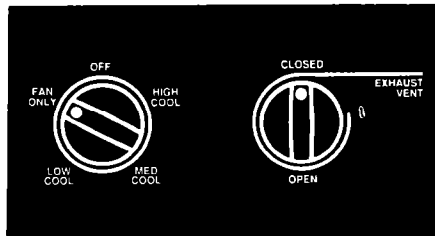


2. To circulate room air

Set Exhaust Vent Control to CLOSED. For cooling, set Fan Speed Control to one of the COOL settings. If no cooling is desired, use FAN ONLY setting.

NOTE: For maximum performance, the Exhaust Vent Control must be in the CLOSED position when cooling or room air circulation is desired.

 Changing air direction

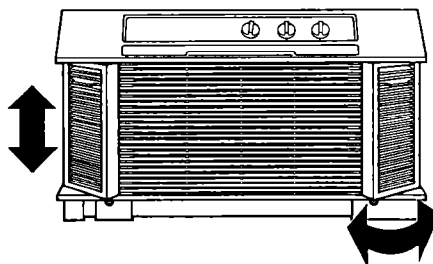

The air direction cartridges on both sides of the unit control the direction of the cooled air. The air direction cartridge may be rotated to direct the air straight ahead or to the side of the unit.

The louvers in each air direction cartridge are operated by a tab. The tab may be used to direct the air up, down or straight ahead.

 
Proper use and care of your air conditioner will help ensure longer life of the unit and lower operating costs. Follow these instructions carefully. Call your local Sears store for an annual checkup.

Cleaning front panel

WARNING


Electrical Shock and Fire Hazard

- Unplug power cord from receptacle before cleaning unit. Failure to do so could result in electrical shock or personal injury.
- Do not use flammable fluids, solvents, abrasive cleaners, or strong detergents. Fire or product damage could result.

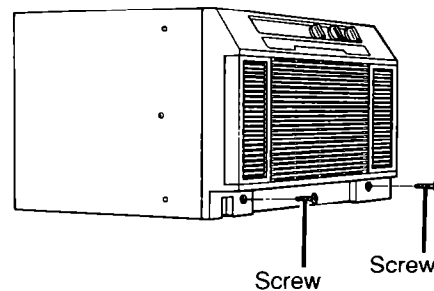

1. Unplug power cord.
2. Remove the front panel from unit when cleaning. Remove two screws from bottom edge of front panel.
3. Lift the front panel up and toward you.
4. Remove slide-out filter and clean separately. (See "Cleaning air conditioner filter" on page 4.)
NOTE: Front does not have to be removed to clean filter.
5. Clean front panel with warm water and mild soap or detergent. Use a soft cloth. Rinse and dry. Replace front panel.
6. Wipe control panel clean with a soft dry cloth.

 Cleaning air conditioner filter

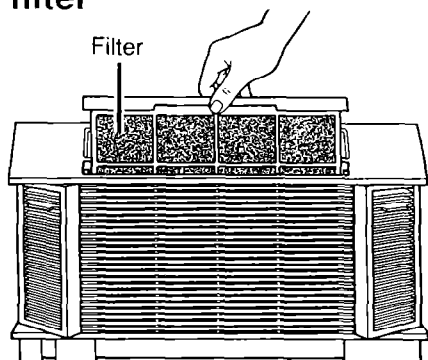

The filter is cleanable. A clean filter helps remove dust, lint and other particles from the air. Check every two weeks to see if filter needs cleaning.

1. Remove filter by sliding the filter up and out the top of front panel.
2. Clean filter, using a vacuum cleaner.
- OR-
3. If very dirty, wash filter with warm water and mild detergent. Air dry thoroughly before replacing.
4. Replace filter by sliding it back down into opening at the top of front panel.

Annual maintenance for your air conditioner

Your air conditioner needs annual maintenance to help ensure steady, top performance throughout the year.

Call your local Sears store to:

- Inspect and clean the coils and condensate water passages.
- Check fan and fan motor.

The compressor and fan motor are sealed and need no oiling. Expense of annual inspection is customer's responsibility.

 
-OR-

If you are familiar with electrical appliances, you can do the cleaning and maintenance yourself. If you choose to do so, follow these steps:

⚠ WARNING

Electrical Shock and Product Damage Hazard

- Unplug power cord from receptacle before performing any maintenance. Be sure no liquid gets into the motor, electrical control box or compressor electrical terminals. Failure to follow the above precautions could result in electrical shock or personal injury.
- Do not lift, push, or pull on any white beaded foam (expanded polystyrene) parts. Damage may occur.

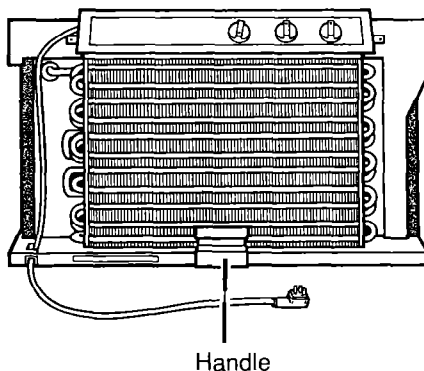

1. Unplug power cord.
2. Remove front panel. (See page 3.)
3. Slide unit out of cabinet by using the handle in the center of the base flange.
4. Wrap the motor, connector plug, electrical control box and compressor terminal box in plastic film and make sure no water or other liquid gets inside any of these parts. It could damage the insulation and cause serious mechanical problems.
5. Carefully clean and hose out the base, condenser coil and condensate pans. Clean at least once a year or more often if the condenser coil and pan collects dirt, sand, leaves, insects or algae. Also, clean if you detect an odor coming from the air conditioner.

6. Remove plastic film from motor and electrical parts.
7. Replace unit in cabinet.
8. Replace front panel.
9. Reconnect power supply.

NOTE: It is a good idea to wait 24 hours before starting the unit again. This allows time for all areas to dry out.

⚠ WARNING

Personal Injury Hazard

- Because your air conditioner weighs from 80 to 110 pounds, it is recommended that you have someone help you when you remove and re-install your unit and that you both use proper lifting techniques.
- Handle the air conditioner with care. Watch out for the sharp metal fins on the front and rear coils.
- Do not use the collected water for drinking purposes. It is not sanitary. Failure to follow the above precautions could result in personal injury.

If you need service or assistance

We suggest you follow these steps:

1. Before calling for assistance...

Performance problems often result from little things you can find and fix yourself without tools of any kind.

Air conditioner won't run:

- Is unit plugged into a live circuit with proper voltage?
- Is switch turned on?
- Is thermostat set correctly?
- Has a fuse blown or a circuit breaker tripped?
- Has the local power failed?

Unit blows fuses or trips circuit breaker:

- Are time-delay fuses being used?
- Is an extension cord being used?

(Do not use an extension cord to run your air conditioner.)

- Are you waiting three minutes after turning cooling circuit off before trying to restart unit?

Unit turns on and off, or does not cool room:

- Is filter clean?
- Are coils clean (both evaporator [inside] and condenser [outside])?
- Is there excessive moisture or heat (open vessel cooking, showers, etc.)?
- Try setting fan to higher speed.
- Try setting thermostat to a cooler setting.

Operating sounds:

- When your room air conditioner is operating normally, you will hear sounds such as:
 - Droplets of water hitting the

condenser, causing a "pinging" or "clicking" sound. Water droplets help to cool the condenser.

- Air movement from the fan, especially on high fan speed setting.
- Clicks from the thermostat cycle.
- Sounds also may be caused by house construction—such as vibration of the unit due to wall construction or unsteady window mounting area.

2. If you need assistance*...

Call your local Sears store.

When requesting assistance, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request.

SEARS Kenmore automatic air conditioner warranty

FULL ONE YEAR WARRANTY ON AIR CONDITIONER

For one year from date of purchase, when this Air Conditioner is operated and maintained for normal room cooling according to owner's instructions attached to or furnished with the product, Sears will repair this Air Conditioner free of charge, if defective in material or workmanship.

FULL FIVE YEAR WARRANTY ON SEALED REFRIGERATION SYSTEM

For five years from the date of purchase, when this Air Conditioner is operated and maintained for normal room cooling according to owner's instructions attached to or furnished with the product, Sears will repair the sealed system (consisting of refrigerant, connecting tubing and compressor motor) free of charge, if defective in material or workmanship.

WARRANTY SERVICE IS AVAILABLE BY CONTACTING THE NEAREST SEARS STORE OR SERVICE CENTER THROUGHOUT THE UNITED STATES.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

SEARS, ROEBUCK AND CO., Dept. 698/731A, Sears Tower, Chicago, IL 60684

We service what we sell

"We Service What We Sell" is our assurance to you that you can depend on Sears for service, and Sears service is nationwide.

Your Kenmore has added value when you consider that Sears has a service unit near you, staffed by Sears trained technicians...professional

technicians specifically trained on Sears appliances, having the parts, tools and equipment to ensure that we meet our pledge to you..."We Service What We Sell."

To further add to the value of your air conditioner, buy a Sears maintenance agreement.

Sears air conditioners are designed, made and tested for years of dependable operation. Yet, any modern appliance may require service from time to time. The Sears warranty plus the Sears maintenance agreement provides protection from unexpected repair bills.

