





Use and Care Manual
Grill Cover
Models CAG3500 & CAX3500 Series

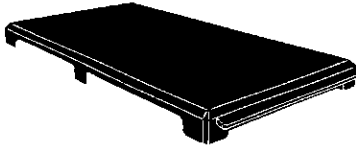

Model CAG3500

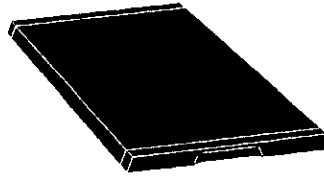

Model CAX3500

USE:

The texture steel grill cover makes an attractive cover for the grill section of the cooktop when it is not in use.

DO NOT place the grill cover over a heated grill. Let the grill cool before putting the cover in place.

REMOVE cover - always - before heating grill! Since a heated grill cover would not appear hot, this could create accidental burns should it be touched. Heating the grill cover could also damage the finish.

Note CAG3500 Owners: USE cover over the grill grates only. **DO NOT** place cover over the griddle or surface burner grates.

CLEANING:

Your grill cover may be easily cleaned with a damp cloth and mild detergent or liquid household cleanser. Rinse and dry thoroughly. **DO NOT** clean in dishwasher.

Note: Although the finish is very durable, care should be taken to avoid setting utensils or other items on the surface that could cause scratches. **DO NOT set extremely hot containers on the surface**, including handles, since these could mar or discolor the cover. It is an attractive cover and proper care will keep it that way!