


use & care guide

The Whirlpool logo, consisting of a stylized swirl icon above the word "Whirlpool" in a serif font, all enclosed within a black rectangular box.

AUTOMATIC WASHER

**Super Capacity
Model
GLA5580XS**

Microwave Ovens, Trash Compactors, Room Air Conditioners, Dehumidifiers, Automatic Washers, Clothes Dryers, Freezers, Refrigerator-F

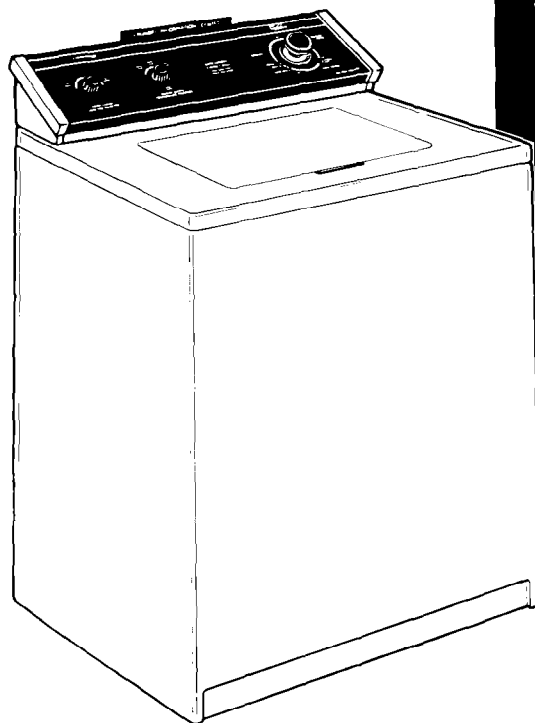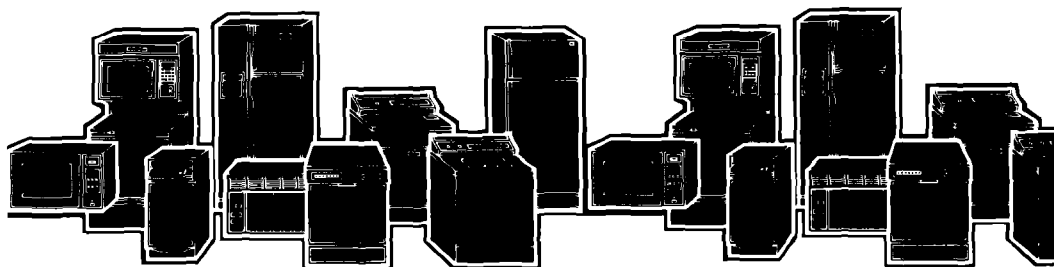


Contents

	Page		Page
PARTS AND FEATURES	2	For a Rinse and Spin	10
IMPORTANT SAFETY		For a Drain and Spin	10
INSTRUCTIONS	3	MAGIC CLEAN® Lint Filter	10
OPERATING INSTRUCTIONS	4	CARING FOR YOUR WASHER ..	11
Starting Your Washer	4	Winterizing	12
What Happens in Each Cycle ..	6	IF YOU NEED SERVICE OR	
OTHER OPERATING		ASSISTANCE	13
INSTRUCTIONS	10	WASHER WARRANTY	16

©1990 Whirlpool Corporation

Parts and features

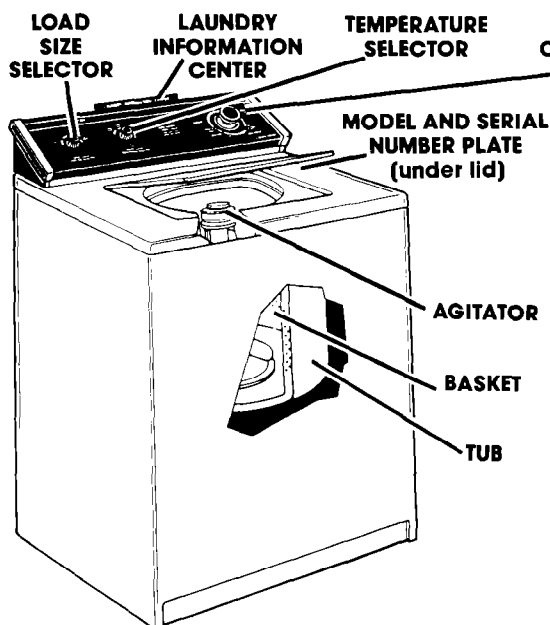

If your washer has a Consumer Buy Guide label, remove it. It will be easier to remove before the washer is used. To remove any remaining glue:

- Rub briskly with thumb to make a ball, then remove.
- or
- Soak area with liquid hand dishwashing detergent before removing glue as described above.

Do not use sharp instruments, rubbing alcohol, flammable fluids or abrasive cleaners. These can damage the finish. See "Important Safety Instructions" on page 3.

Thank you for buying a Whirlpool appliance. Please complete and mail the Owner Registration Card provided with this product. Then complete the form below. Have this information ready if you need service or call with a question.

- Copy Model and Serial Numbers from plate (under lid near hinge) and the purchase date from the sales slip.
- Keep this book, your Laundry Guide and your sales slip in the Laundry Information Center.

Model Number

Serial Number

Purchase Date

Service Company Phone Number

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electrical shock, or injury to persons when using your washer, follow basic precautions, including the following:

- **Read all instructions before using the washer.**
- **NEVER** wash items cleaned, washed, soaked in or spotted with wax, paint, gasoline, or flammable fluids in the washer. The fumes can create a **FIRE HAZARD** or **EXPLOSION**. **ALWAYS** hand launder and air dry fabrics containing these materials.
- **NEVER** allow children to operate, play with, or crawl inside the washer. Close supervision of children is necessary when the washer is used near children.
- When discarding an old washer, **ALWAYS** remove the lid to prevent accidental entrapment.
- **NEVER** put your hands into the washer until all motion stops. If the lid is opened while the basket is spinning, the basket will automatically stop in a few seconds.
- **DO NOT** tamper with controls.
- **NEVER** use or store flammable fluids (dry-cleaning solvents, kerosene) in or near your washer. **DO NOT** add flammable fluids to the wash water. These substances give off vapors that can create a **FIRE HAZARD** or **EXPLOSION**.
- If hot water has not been used recently (usually 2 weeks or longer), hydrogen gases may build up in the water heater and the hot water pipes. **HYDROGEN GAS IS EXPLOSIVE**. To prevent injury or damage, before using your washer, turn on all hot water faucets and allow water to run for several minutes. This will allow gases to escape. **DO NOT** smoke or use any open flame near the faucet while it is open.
- **You are responsible for making sure that your washer:**
 - is installed, repaired, and has parts replaced by a qualified person.
 - is properly installed and leveled on a floor that can support the weight.*
 - is connected to the correct 3-prong outlet, electric supply, water supply and drain.*
 - is properly grounded.*
 - is properly maintained.*
 - is protected from the weather and kept where the temperature will not fall below freezing.

*See the Installation Instructions.

– **SAVE THESE INSTRUCTIONS** –

Additional safety instructions and your responsibilities

- **ALWAYS** store detergent, laundry aids and other materials in a cool, dry place where children can't reach them – in a locked cabinet if possible.
- **ALWAYS** read and follow instructions on packages of detergent and laundry aids – especially warnings and precautions.
- **HAZARDOUS FUMES** can be formed if chlorine bleach is used in the same wash as ammonia or acids such as vinegar or rust remover.
- **ALWAYS** unplug the power supply cord before attempting to service the washer.
- **DO NOT** machine wash glass fiber materials. Small particles can stick to fabrics washed in following loads and cause skin irritation.
- **You are responsible for making sure that your washer:**
 - is used only for jobs normally expected of home automatic washers.
 - is not run by children or anyone unable to operate it properly.

Operating instructions


Starting Your Washer



Be sure to measure and add detergent, then place a sorted load in the washer before starting it.




1. Select a LOAD SIZE

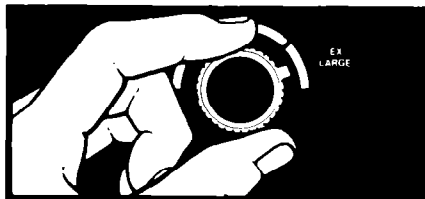

- Turn the knob to point at a setting that describes the size of load you want to wash.
- Set the knob anywhere on or between EX SMALL (a few small items) and EX LARGE (a full load).

NOTE: Use the EX LARGE water level for best permanent press results.

2. Select WATER TEMPERATURES

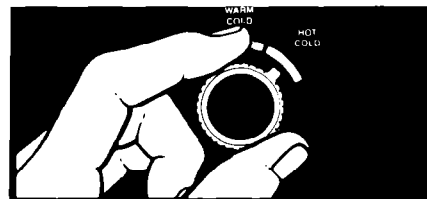

- Match the wash and rinse water temperature to the type of fabrics and soils being washed.
- All rinses are cold. Cold rinses save energy and help prevent wrinkles from setting into fabrics.


Recommended wash temperatures can be found in your Laundry Guide.

NOTE: Use warm water with the PERM'T PRESS or KNITS GENTLE cycles. For heavily soiled permanent press or knit clothes, pre-wash or pre-soak before washing in warm water.


NOTE: For best washing results, items should move freely in the washer. Do not overload the washer or choose a water level that is too low for your wash load.

For best results with permanent press clothes, use the EX LARGE water level.


Reduce wash time when using EX SMALL or SMALL water level settings. Loads with only a few small items need less wash time for best results.

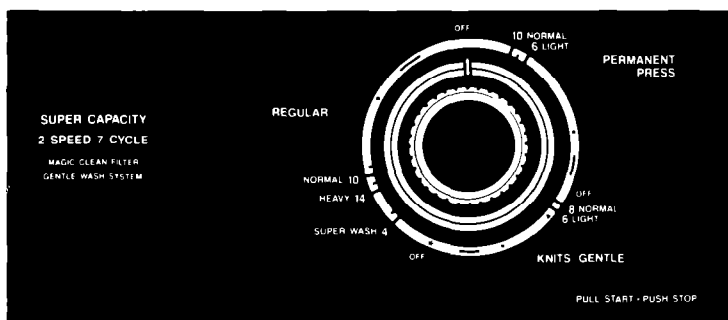


3. Select CYCLE and WASH TIME; Start the washer

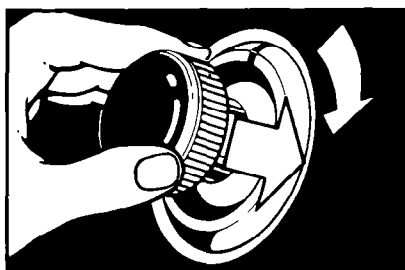


A. Push in the Control Knob and turn it clockwise.

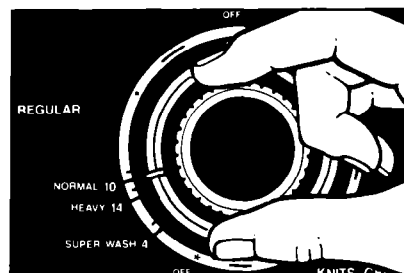

B. Stop when the indicator on the knob's outer ring points to the number in the wash cycle you want. The numbers are minutes of wash time.

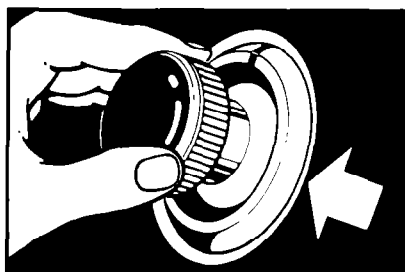

C. Start the washer by pulling out the Control Knob. The washer will fill to the selected water level with the selected wash water temperature. After filling, the washer will agitate for the selected number of minutes.

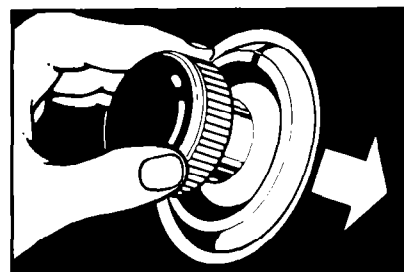



D. To stop the washer at any time, push in the Control Knob. To restart the washer, pull out the Cycle Control Knob.

What Happens in Each Cycle

Each cycle has different agitation and spin speeds designed for different kinds of fabrics. Numbers on the dial in each cycle are the minutes of WASH agitation time.



When the Cycle Control Knob is set to a number and pulled out, the washer fills before agitation and timing starts. After agitation starts, the knob turns clock-wise until it points to OFF and the cycle ends.

REGULAR HEAVY Cycle

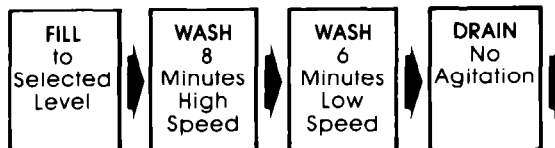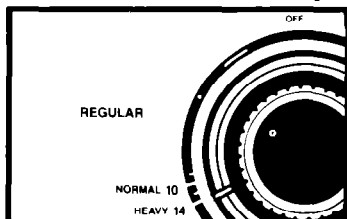



A cycle for sturdily constructed fabrics that are heavily soiled.

REGULAR NORMAL Cycle

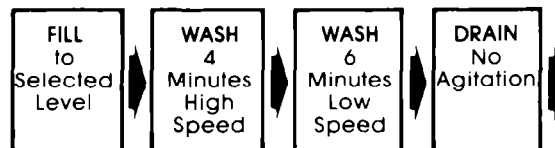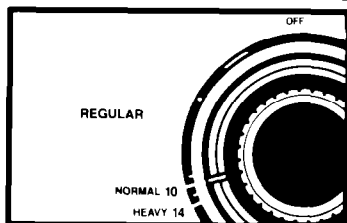

A cycle for regular loads of fabrics that are moderately soiled.

PERMANENT PRESS NORMAL Cycle


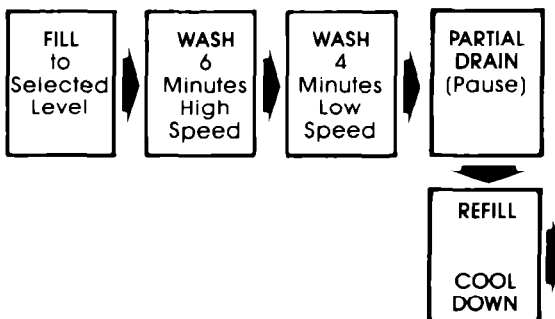
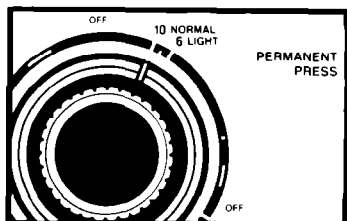


A cycle designed for moderately soiled permanent press and some synthetic fabrics. The **cool-down** rinse helps keep wrinkles from setting into these items.

NOTE: You may hear the sound of water spraying during the spin parts of some cycles. In some cycles, water is sprayed on the spinning load to help with the rinsing.


Gentle Wash System

For better fabric care in the REGULAR and PERMANENT PRESS cycles, the agitation speed is reduced during the last few minutes of wash time.

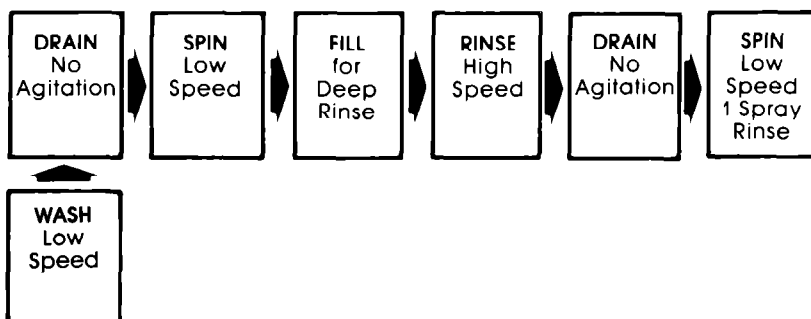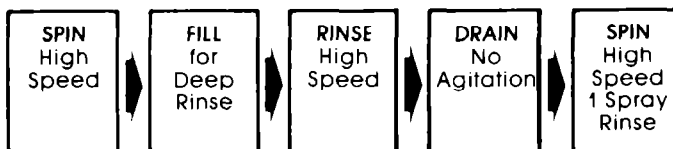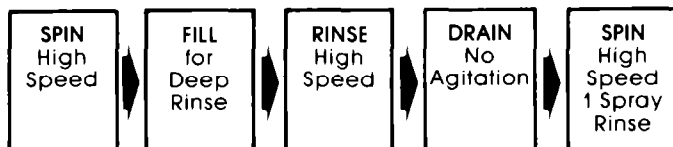


NOTE: THE WASHER WILL PAUSE BRIEFLY THROUGHOUT EACH CYCLE. These pauses are normal. They allow for the reversing of the motor, normal washer operation, and the cool-down portion of the PERMANENT PRESS Cycle.


PERMANENT PRESS LIGHT Cycle

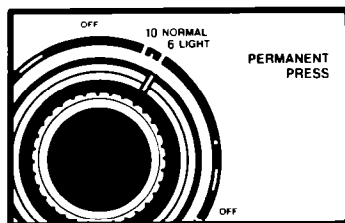


A cycle designed for lightly soiled permanent press and some synthetic fabrics. The **cool-down** rinse helps keep wrinkles from setting into these items.

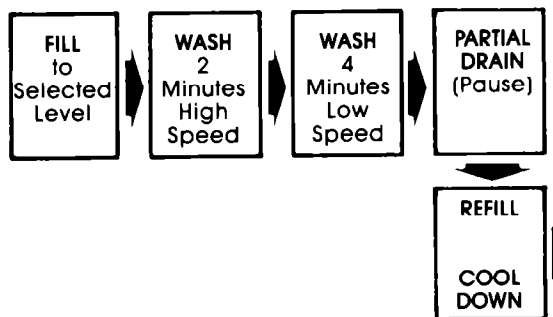

KNITS GENTLE NORMAL Cycle

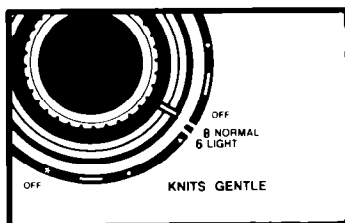


A cycle that gently washes and spins moderately soiled delicate items and washable knits.

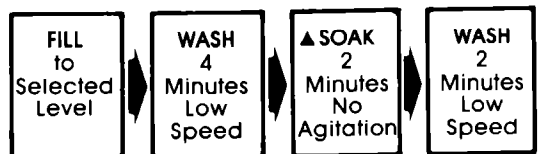


▲ Indicates the machine is pausing for a brief soak period.

KNITS GENTLE LIGHT Cycle

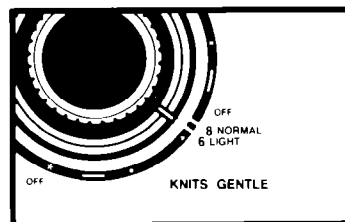


A cycle that gently washes and spins lightly soiled delicate items and washable knits.

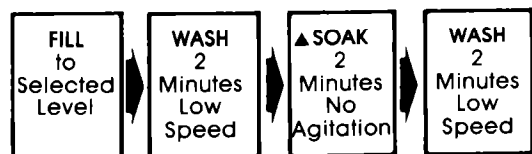






▲ Indicates the machine is pausing for a brief soak period.

SUPER WASH Cycle

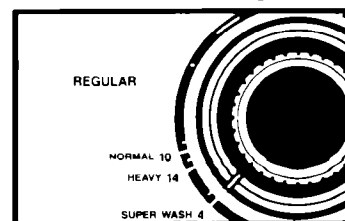


Use for washing heavily soiled loads that require maximum soil removal. **Double the amount of detergent recommended when using the SUPER WASH Cycle.**

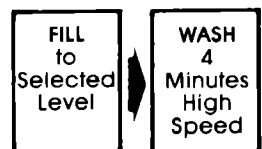

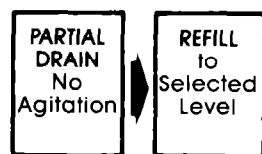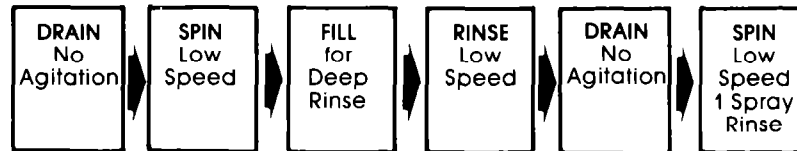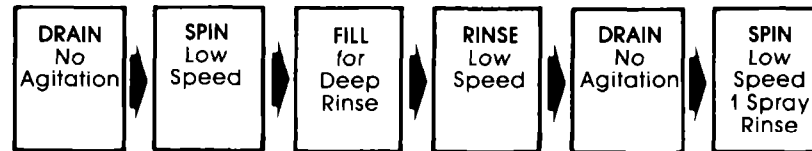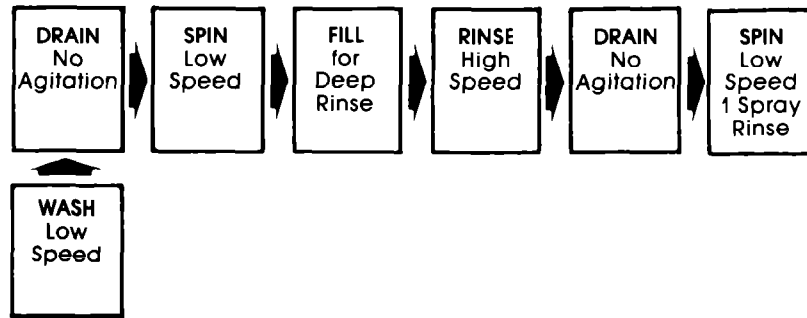

The washer will proceed to the REGULAR/HEAVY Cycle. If you want a different cycle to follow SUPER WASH, push in the cycle control knob, turn to the cycle and time you want, pull knob out to start.


Other operating instructions

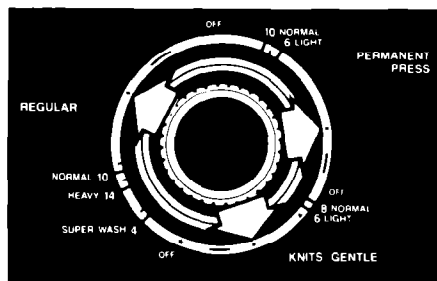

For a rinse and spin

When using extra detergent for heavily soiled clothes, or washing special-care items, you may want an extra rinse and spin.

1. Push Control Knob in.
2. Turn clockwise to one of the dots on the dial, as illustrated.
3. Pull Control Knob out. The washer will fill to selected level, agitate 2 minutes, drain and spin.

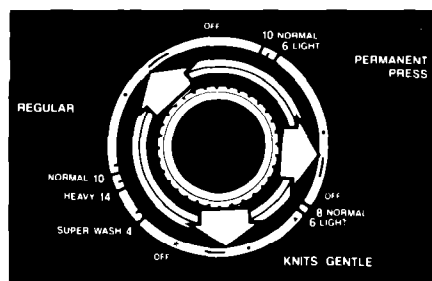


For a drain and spin

A drain and spin may help shorten drying times for some heavy fabrics or special-care items by removing excess water.

1. Push Control Knob in.
2. Turn clockwise to any bar just before an OFF area on the dial, as illustrated.
3. Pull Control Knob out. The washer will drain and spin.

For agitation and spin speeds in each cycle, see pages 6-9.


MAGIC CLEAN® lint filter

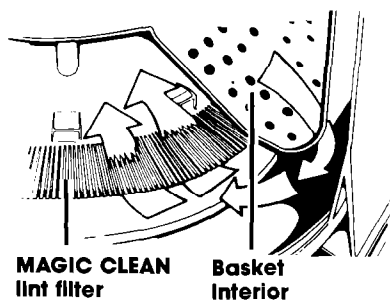


The lint filter at the bottom of the washer basket cleans itself. During agitation, wash and rinse water pass over the filter, separating lint from water. The collected particles of lint are then continuously spun away from the filter and washed out of the system at the end of the wash cycle.

If your washer drains into a tub, remove any lint collected in the tub or strainer.


Caring for your washer

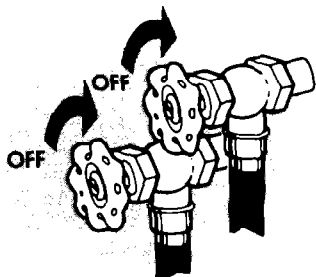


WHEN NOT WASHING, keep both water faucets turned off, this takes the pressure off the water inlet valve and hoses.

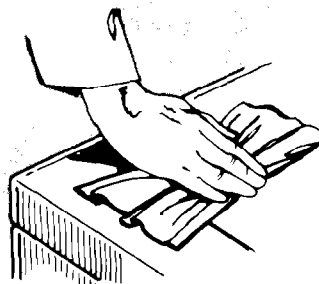

WIPE UP SPILLS with a soft damp cloth as soon as they occur. This will help keep your washer looking like new.

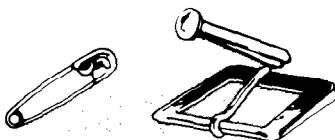

REMOVE SHARP OBJECTS such as pins, buckles, etc., from clothes before washing. Close metal zippers.


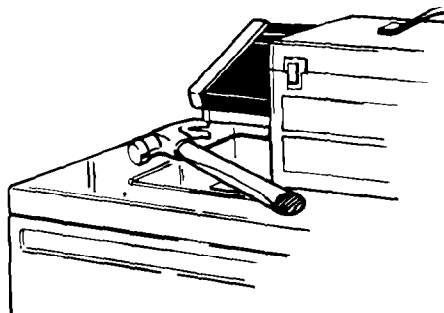


SHARP OR HEAVY OBJECTS should never be put on or in the washer. Check pocket for bolts, nuts, tools, etc.



Service or performance problems caused by the use of any product not manufactured by Whirlpool Corporation are the responsibility of the manufacturer of that product.

Winterizing

Because some water stays in the washer, freezing can cause a lot of damage. If your washer is **stored or moved** during the cold weather...

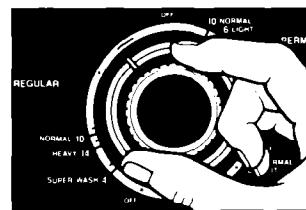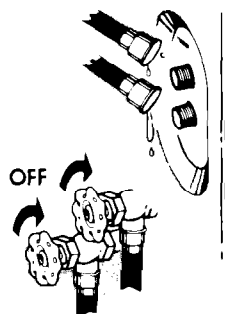

1. Shut off both water faucets. Disconnect and drain water inlet hoses.
2. Put a quart of R.V. type antifreeze in the basket.
3. Set the washer for a DRAIN and SPIN (see page 10). Let it run for about 30 seconds to mix the antifreeze and water.

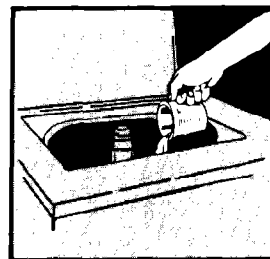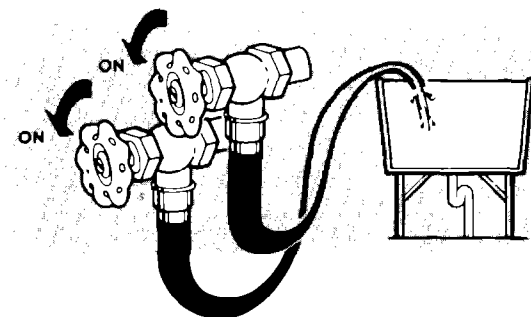

To use the washer again...

1. Flush water pipes and hoses.
2. Connect hoses to the washer
3. Turn on the water faucets.

4. Run the washer through a complete cycle with one cup of detergent to clean out the antifreeze.

If you need service or assistance, we suggest you follow these steps:

1. Before calling for assistance...

Performance problems often result from little things you can find and fix yourself without tools of any kind.

If your washer does not fill:

- Is the power supply cord plugged into a live circuit with the proper voltage?
- Are both water faucets open?
- Have you checked your home's main fuses or circuit breaker box?
- Are the water supply hoses kinked?
- Is the Cycle Control Knob set and pulled out?

If your washer does not spin:

- Is the lid closed?
- Is the power supply cord plugged into a live circuit with the proper voltage?
- Have you checked your home's main fuses or circuit breaker box?

If your washer stops during a cycle:

- Remember, the washer pauses briefly at different times in each cycle. These pauses are normal.

If your washer fills and drains without running:

- Make sure that the Cycle Control Knob is pointing to a number in the cycle.

Make sure the drain hose is higher than the water level in the washer. If it isn't:

- The washer may seem to be draining during wash and rinse cycles.
- Water can siphon out. (See Installation Instructions.)

2. If you need assistance or service overseas*...

Contact your Military Exchange or Whirlpool distributor.

Migratory Policy

We realize that you're purchasing a Whirlpool appliance for what may be a temporary stay in a particular area. If you are transferred to the United States and find that your Whirlpool appliance requires service within the warranty period, simply contact a Whirlpool authorized dealer or service agent. All he'll require is proof of the purchase date of the appliance. Service will be supplied at no charge.

NOTE:

The parts to convert this machine to 120 volt, 60 Hz operation are included in the console of the machine. These parts must be installed by an authorized Whirlpool service agent.

3. If you need assistance in the U.S.*...

Call Whirlpool COOL-LINE® service assistance telephone number. Dial free from anywhere in the U.S.: 1-800-253-1301

and talk with one of our trained consultants. The consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

If you prefer, write to:

Mr. Donald Skinner
Director of Consumer Relations
Whirlpool Corporation
2000 M-63
Benton Harbor, MI 49022

Please include a daytime phone number in your correspondence.

4. If you need service in the U.S.*...



Whirlpool has a nationwide network of authorized WhirlpoolSM service companies. Whirlpool service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate the authorized Whirlpool service company in your area, call our COOL-LINE[®] service assistance telephone number (see Step 3) or look in your telephone directory Yellow Pages under:

APPLIANCES - HOUSEHOLD - ELECTRICAL APPLIANCES -
MAJOR - SERVICE & REPAIR MAJOR - REPAIRING & PARTS
OR
WASHING MACHINES, DRYERS
& IRONERS - SERVICING
WHIRLPOOL APPLIANCES
AUTHORIZED WHIRLPOOL SERVICE
SERVICE COMPANIES
XYZ SERVICE CO
123 MAPLE . . . 999-9999

5. If you need FSP[®] replacement parts in the U.S.*...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.

To locate FSP replacement parts in your area, refer to Step 4 above or call the Whirlpool COOL-LINE service assistance number in Step 3.

6. If you are not satisfied with how the problem was solved*...

- Contact the Major Appliance Consumer Action Panel (MACAP). MACAP is a group of independent consumer experts that voices consumer views at the highest levels of the major appliance industry.
- Contact MACAP only when the dealer, authorized servicer or Whirlpool have failed to resolve your problem.

Major Appliance Consumer
Action Panel
20 North Wacker Drive
Chicago, IL 60606

- MACAP will in turn inform us of your action.

*When requesting assistance, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

WHIRLPOOL® AUTOMATIC WASHER WARRANTY

AW007


LENGTH OF WARRANTY	WHIRLPOOL WILL PAY FOR
FULL ONE-YEAR WARRANTY From Date of Purchase	FSP® replacement parts and repair labor to correct defects in materials (including top and lid rust) or workmanship. Service must be provided by an authorized Whirlpool® service company.
LIMITED FIVE-YEAR WARRANTY From Date of Purchase	FSP replacement parts for any part of gearcase assembly if defective in materials or workmanship. The gearcase assembly is shown below. FSP replacement parts for any top and lid rust.
LIMITED TEN-YEAR WARRANTY From Date of Purchase	FSP replacement of outer tub should it crack, or fail to contain water, due to defective materials or workmanship.
WHIRLPOOL WILL NOT PAY FOR	
A. Service calls to: 1. Correct the installation of the washer. 2. Instruct you how to use the washer. 3. Replace house fuses or correct house wiring or plumbing. B. Repairs when washer is used in other than normal, single-family household use. C. Pick up and delivery. This product is designed to be repaired in the home. D. Damage to washer caused by accident, misuse, fire, flood, acts of God or use of products not approved by Whirlpool. E. Any labor costs during the limited warranties.	

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may apply. For details, please contact your authorized Whirlpool distributor or military exchange.

If you need service, first see the "Service and Assistance" section of this book. After checking "Service and Assistance," additional help can be found by calling our COOL-LINE® service assistance telephone number, **1-800-253-1301**, from anywhere in the U.S.

**GEARCASE ASSEMBLY
COVERED BY YOUR
WARRANTY**

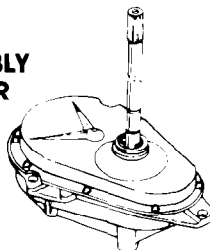

®Registered Trademark/SM Service Mark of Whirlpool Corporation

Part No. 3349148 Rev. A
©1990 Whirlpool Corporation

Printed in U.S.A.