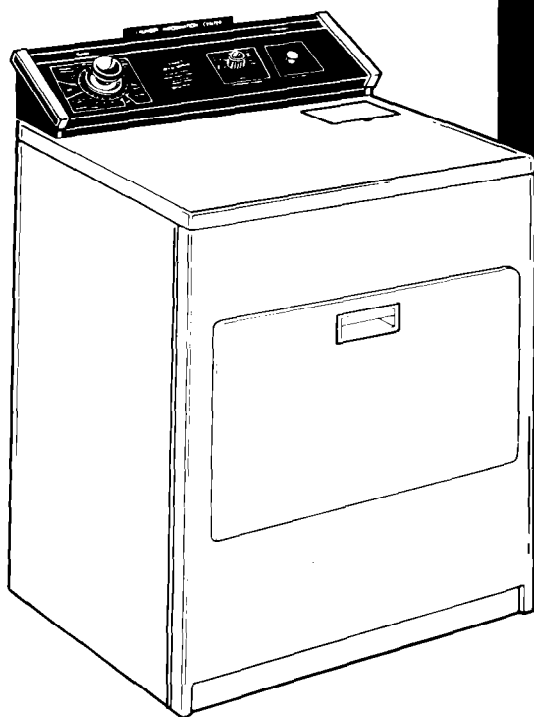 


use & care guide


The Whirlpool logo, consisting of a stylized swirl icon above the word "Whirlpool" in a serif font, all enclosed within a black rectangular box.

Estate SERIES

AUTOMATIC DRYERS

**Electric Model
LE6685XP
and
Gas Model
LG6686XP**

 Microwave Ovens, Trash Compactors, Room Air Conditioners, Dehumidifiers, Automatic Washers, Clothes Dryers, Freezers, Refrigerator-F

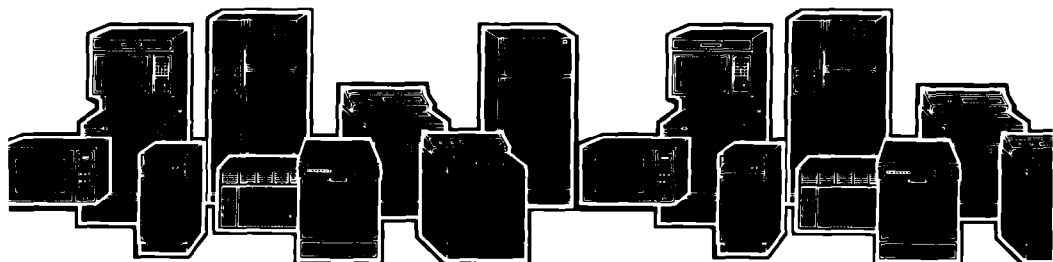

Parts and features

CYCLE CONTROL KNOB

LAUNDRY INFORMATION CENTER

TEMPERATURE SELECTOR

 
START BUTTON

LINT SCREEN

MODEL
AND SERIAL
NUMBER PLATE

DRYER DRUM

LOADING DOOR

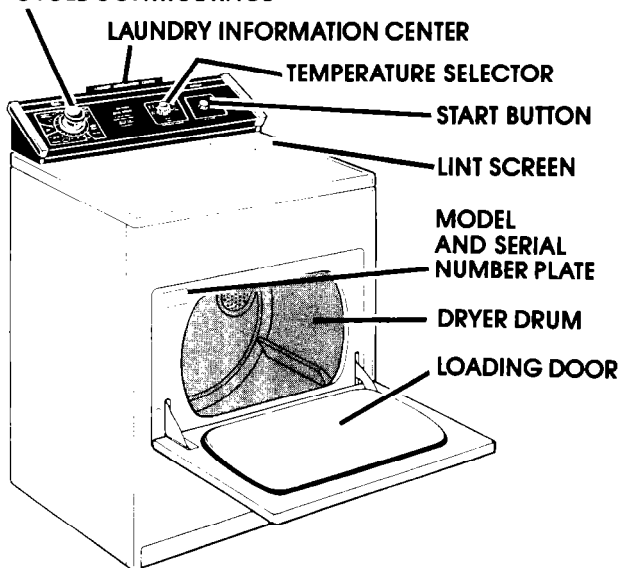

Remove the Consumer Buy Guide label before using your dryer. It will be easier to remove.

Wipe out the dryer drum with a damp cloth to remove dust from storing or shipping.

Copy your Model and Serial Numbers here

When you need service or call with a question, have this information ready:

1. **Complete** Model and Serial Numbers (from the plate located as shown).
2. Purchase date from sales slip.

Copy this information in these spaces. Keep this book in the Laundry Information Center with your "Dryer Guide," sales slip and warranty.

Please complete and mail the Owner Registration Card furnished with this product.

Model Number

Serial Number

Purchase Date

Service Company
Telephone Number

Contents

	Page		Page
PARTS AND FEATURES	2	LINT SCREEN	9
YOUR RESPONSIBILITIES	3	LINT REMOVAL	9
SAFETY FIRST	3	CARING FOR YOUR DRYER ...	10
SELECTING A CYCLE AND		Cleaning Dryer Interior	10
STARTING YOUR DRYER	4	Vacation Care	10
OPERATING INSTRUCTIONS ..	6	Changing the Drum Light ..	11
The Automatic Cycles	6	IF YOU NEED SERVICE OR	
Timed Drying	6	ASSISTANCE	12
DRYING TIPS	7	1. Before Calling for	
FLUFF AIR Setting	7	Assistance	12
TUMBLE PRESS® Setting	7	2. If You Need Assistance ..	13
Drying Times	8	3. If You Need Service	13
Mixed Loads	8	4. If You Have a Problem ...	13
End-of-Cycle Signal	8		

Your Responsibilities

Read this "Use and Care Guide" and your "Dryer Guide" carefully for important use and safety information.

You are personally responsible for making sure that your dryer...

- is installed by a qualified installer.
- is properly maintained.
- is installed in an area protected from the weather.
- is properly installed and leveled in a well ventilated room* on a floor that can support the weight.
- is located in an area where the temperature is above 45°F (7.2°C).
- is connected to the right kind of outlet, electric supply and grounding.*
- is properly connected to fuel and exhaust systems.*
- is used only for jobs normally expected of home clothes dryers
- is not run where there may be explosives fumes.
- is not used by children or anyone unable to operate it properly

*See the "Installation Instructions" for complete information.

Safety first

ALWAYS unplug the power supply cord or turn off electrical power before attempting to service the dryer. Shut off the **GAS VALVE** if yours is a gas dryer.

ALWAYS shut off the gas valve before leaving on vacation.

NEVER use flammable fluids (dry-cleaning solvents, gasoline, kerosene) in or near your dryer.

ALWAYS hand launder or air dry fabrics treated with flammable fluids before putting them into your dryer.

NEVER dry items containing wax or paint in the dryer. The fumes can create a **FIRE HAZARD**.

FIRE HAZARD and **DAMAGE** to some materials can result from:

- drying heat-sensitive materials with heat (see page 4).
- operating the dryer with the lint screen loose, damaged or missing.
- allowing lint to build up inside the dryer (see page 9).

NEVER allow children to operate, play with, or crawl inside the dryer.

NEVER operate the dryer if...

- it is not working right.
- it is damaged.
- parts are missing.
- all panels are not in place.

DO NOT let dust, lint, paper, rags, chemicals, etc., pile up around or under the dryer. **DO NOT** install against drapes or curtains.

• FOR YOUR SAFETY • IF YOU SMELL GAS:

1. OPEN WINDOWS.
2. DON'T TOUCH ELECTRICAL SWITCHES.
3. EXTINGUISH ANY OPEN FLAME.
4. IMMEDIATELY CALL YOUR GAS SUPPLIER.

 
• FOR YOUR SAFETY •

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

• SAVE THESE INSTRUCTIONS •

Selecting a cycle and starting your dryer

Before starting your dryer, be sure laundry is sorted and loaded properly (see your "Dryer Guide"). Be sure the door is tightly closed.

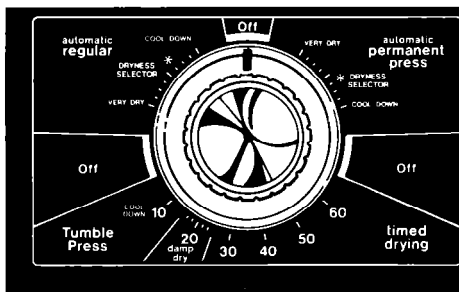

TYPE OF LOAD

SUGGESTED CYCLE

SUGGESTED TEMPERATURE

COTTONS – LINENS

EXTRA HEAVY – Bedspreads, mattress pads, quilts

HEAVY
HIGH

HEAVYWEIGHT FABRICS – Towels, jeans, corduroys, work clothes

AUTOMATIC
REGULAR

PERM'T PRESS
MED

MEDIUMWEIGHT COTTONS – Sheets, pillowcases, cotton underwear, diapers

KNITS GENTLE
LOW

LIGHTWEIGHT COTTONS – Batistes, organdies, lingerie

PERMANENT PRESS, SYNTHETICS AND BLENDS

HEAVYWEIGHT FABRICS – Work clothes, jackets, raincoats

PERM'T PRESS
MED

MEDIUMWEIGHT FABRICS – Shirts, play clothes, sheets, slacks

AUTOMATIC
PERMANENT
PRESS

KNITS GENTLE
LOW

LIGHTWEIGHT FABRICS – Lingerie, blouses, dresses

KNITS

HEAVYWEIGHT – Cottons, rayons, blends, T-shirts, slacks, shirts

PERM'T PRESS
MED

LIGHTWEIGHT – Synthetics (polyester, acrylic, etc.) and blends, lingerie, blouses, dresses

AUTOMATIC
PERMANENT
PRESS

KNITS GENTLE
LOW

LIGHTWEIGHT AND DELICATE FABRICS

Sheer Curtains (2 or 3 panels)

AUTOMATIC
PERMANENT
PRESS

KNITS GENTLE
LOW

Gauze, lace, etc.

RUBBER, PLASTIC, HEAT-SENSITIVE FABRICS

TIMED
DRYING

FOAM RUBBER – Pillows, bras, stuffed toys

20-30 MINS.

PLASTIC – Shower curtains, tablecloths

20-30 MINS.

FLUFF
AIR

RUBBER-BACKED RUGS

40-50 MINS.

OLEFIN, POLYPROPYLENE, SHEER NYLON ...

 
15-20 MINS.



WARNING: Drying these and other heat-sensitive materials with heat can damage them or be a FIRE HAZARD.

ENERGY EFFICIENT

5 CYCLE 4 TEMP
Dry-Mixer Control
Energy Efficient System
Permanent Press
COOL DOWN Care
End-Of-Cycle Signal

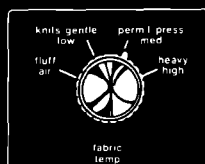


temperature selector




push to start

 1. Select a CYCLE

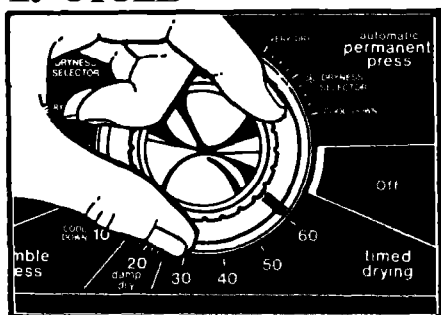


Turn the Control Knob either way to point to the cycle and setting you want. See page 6 for information on the cycles.

 2. Set TEMPERATURE SELECTOR

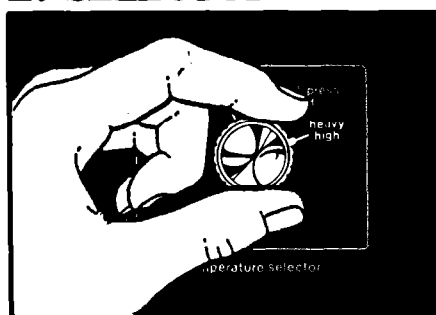

Turn the Temperature Selector to the needed drying temperature

 
3. Push the START Button

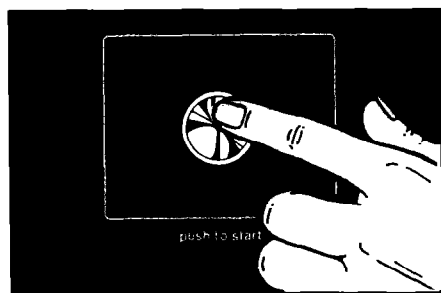

The dryer will start tumbling when you push the START button.

If the START button is pushed when the control knob is pointing to an OFF area, the End-of-Cycle Signal will sound. Dryer will not start.

 To stop and restart the dryer

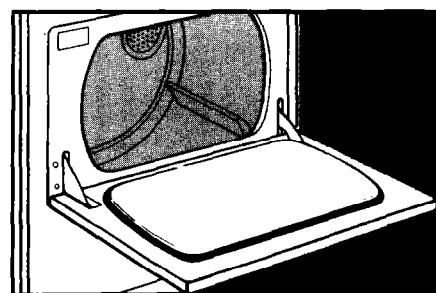

To stop the dryer, open the door (or turn the Control Knob to OFF).

To restart the dryer, close the door, select cycle, if necessary, and push START.

The Cycle Control Knob should point to OFF when the dryer is not in use.

Operating instructions

The automatic cycles

 
The automatic cycles allow you to select the degree of dryness you prefer for the clothes being dried.

The Control Knob moves and stops several times until the load reaches the dryness setting you selected. Then the knob automatically moves to OFF and tumbling stops.




Use **AUTOMATIC REGULAR** to dry heavy and medium-

weight cotton items. **The load tumbles without heat during the last 5 minutes.** This helps make the load easier to handle.

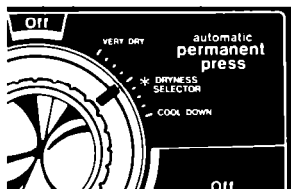


Use **AUTOMATIC PERMANENT PRESS** to dry permanent

 
press, knits and other synthetic fabrics. **The load tumbles without heat during the last 10 minutes.** This helps keep wrinkles from setting in.

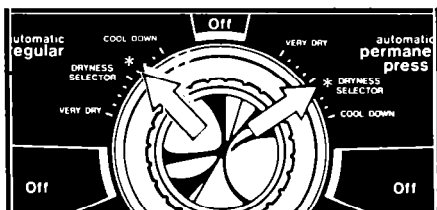

 For the first few loads, set the Control Knob to point to an * in either automatic cycle. When the dryer stops, feel the dried items.

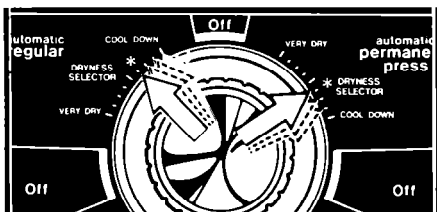

 - If items are drier than you like, use a setting to the right of the * the next time you dry a similar load.

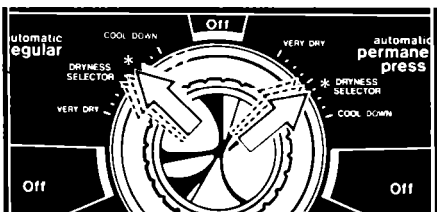


- If items are not as dry as you like, use a setting to the left of the * the next time you dry a similar load.

OVERDRYING CAN CAUSE SHRINKAGE, STATIC CLING AND DAMAGE TO SOME FABRICS.

Timed drying


Use the **TIMED DRYING** Cycle for any load you want to dry by time. For example: small loads, large bulky items, items to be fluffed or dusted with the **FLUFF AIR** heat setting.

 - Turn the Control Knob to the number of minutes you want – from 10 to 60.
- The last 5 minutes of this cycle are without heat – a cool-down time. This helps make the load easier to handle.

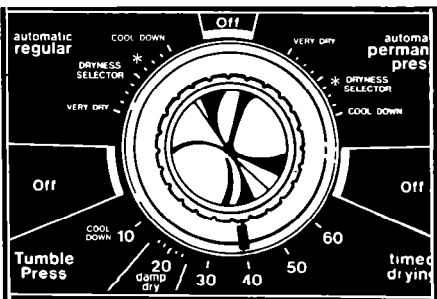

Drying tips

 FLUFF AIR

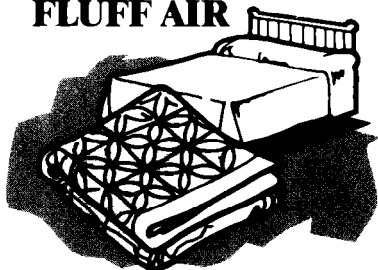


The dryer does not heat when the Temperature Selector is set on FLUFF AIR. This setting can be used to fluff bedding, plastic tablecloths, foam rubber pillows, stuffed toys, sneakers, etc.




WARNING: Drying plastic or rubber items with heat may damage the items or be a **FIRE HAZARD**.

1. Turn Temperature Selector to FLUFF AIR.
2. Turn Control Knob to the number of minutes you want in the TIMED DRYING CYCLE.
3. Push START Button.

 TUMBLE PRESS® Setting

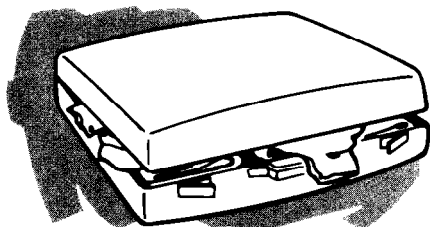

 The TUMBLE PRESS setting removes wrinkles from dry clothing such as items that may have been packed in a suitcase, closet, or items not removed from the dryer.

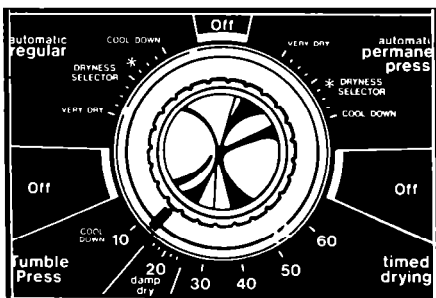

1. Set Control Knob to TUMBLE PRESS.
2. Set Temperature Selector to PERM'T PRESS/MED.
3. Push START Button.

The load will tumble in heated air for 10 minutes. The heat shuts off and the dryer continues to tumble the load for 5 more minutes.

For best results, TUMBLE PRESS only a few items at a time. Put them on hangers or fold them as soon as the dryer stops.

Drying times

 


Drying times will vary depending on:

- amount of moisture in the clothes.
- type and weight of the fabric.
- size of the load.
- room temperature around the dryer.
- temperature of the wash/rinse water.
- amount of lint in the lint screen.
- dryer temperature selection.

See page 6 in your "Dryer Guide" for more information.


Mixed loads

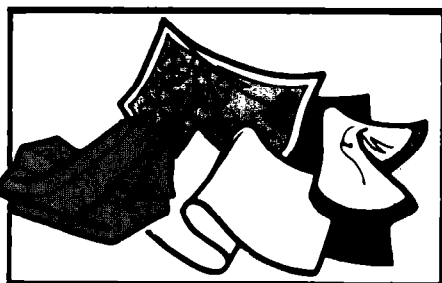

When drying a load with different kinds and weights of fabrics, use the cycle suggested for the lightest fabrics. When the dryer stops, remove dry items and reset the control.

To reduce wrinkling, take the load from dryer as soon as tumbling stops. This is important for permanent press, knits and synthetic fabrics.

 End-of-cycle signal

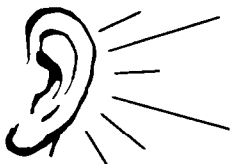


The dryer sounds a signal to let you know when the cycle is finished. The signal cannot be turned off and is not adjustable.


The signal is helpful when you are drying permanent press, synthetics and other items that should be taken out as soon as the dryer stops.

Lint screen

 Clean the lint screen before each load. A screen blocked by lint can increase drying time and may be a FIRE HAZARD.

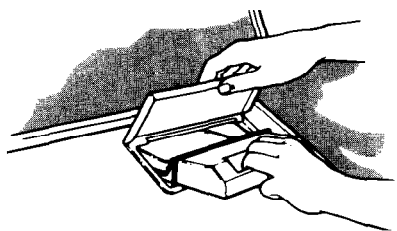

 Open the lid and pull the lint screen straight out.

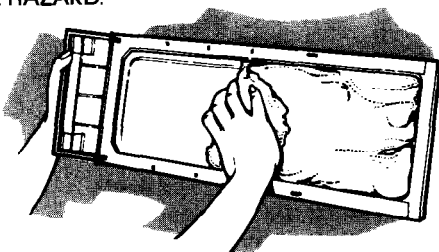


ROLL the lint off the screen with your fingers.

DO NOT rinse or wash the screen. Push the screen firmly back into place.


WARNING: DO NOT run the dryer with the lint screen loose, damaged or missing. Doing so can cause overheating, can damage fabrics and can be a **FIRE HAZARD**.

Lint removal

 Lint can gather inside the dryer and create a fire hazard. **This lint should be removed every 2 to 3 years, or more often, depending on dryer usage.**

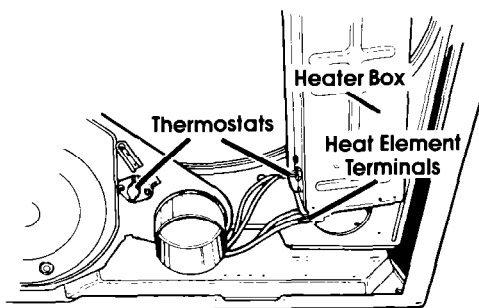

ELECTRIC DRYERS

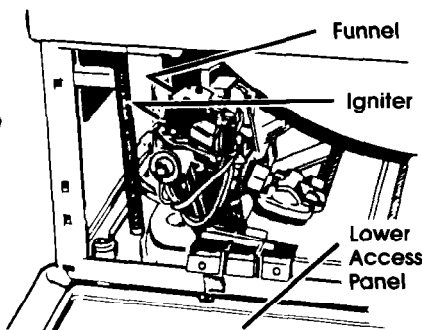 

GAS DRYERS

Cleaning should be done only by a qualified person.

WARNING:



 
- **Avoid electrical shock hazard – unplug power supply cord or turn off electrical power.**
- **Avoid injury or damage – do not put hands inside cabinet.**
- **Make sure dryer is cool.**

1. Remove back panel (electric) or lower access panel (gas).
2. Avoid damaging wires, thermostats, funnel or igniter.
3. Remove lint from shaded area – see art – with a soft brush or vacuum cleaner.
4. Replace panel; reconnect and re-level dryer.

Caring for your dryer




Remove loose and sharp objects from pockets and cuffs before drying – pins, buckles, etc. **Close metal zippers.**

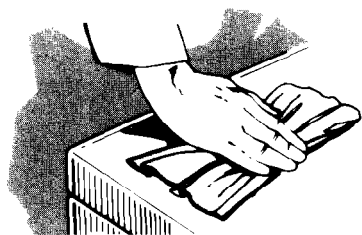


Wipe off all spills with a damp, soft cloth. Spills allowed to remain may dull or damage the finish.



 
Never leave wet or damp laundry in your dryer.

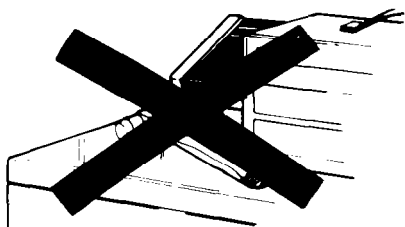

 Sharp or heavy objects should never be put on or in the dryer. Check pockets for bolts, nuts etc.

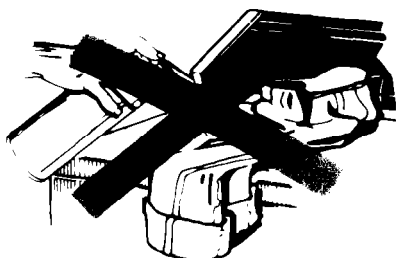

 Some pretreatment products can damage dials, consoles and finish. Do not use these products on or near your dryer.

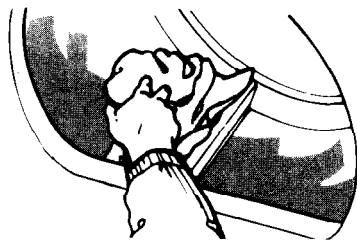

Cleaning dryer interior



WARNING: Before cleaning interior, unplug power supply cord or, turn off electrical power to avoid electrical shock hazard.

Garments which contain unstable dyes, such as denim blue jeans or brightly colored cotton items, may discolor the dryer interior. If the interior is discolored, clean with one of the following methods to avoid staining later load items.

Powdered laundry detergent and very warm water

Make a paste with detergent and very warm water. Apply paste to a soft cloth and scrub area until all excess dye is removed. Wipe thoroughly with a damp cloth. Tumble a load of rags. —OR—

Liquid spray household cleaner

Spray on stained area. Rub with a cloth until all excess dye is removed. Tumble a load or rags.

 
Vacation care

- Unplug power cord or turn off electrical power.
- For gas dryers, close gas valve.
- Clean lint screen.


Changing the drum light




WARNING: Unplug the dryer to avoid possible electric shock.

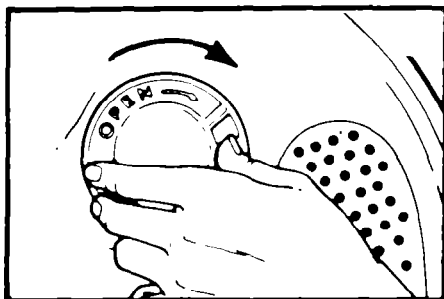

 
1. Open the dryer door and remove light bulb cover by turning it clockwise.

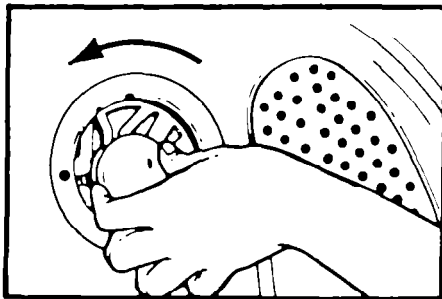

 2. Remove the light bulb by turning it counterclockwise.

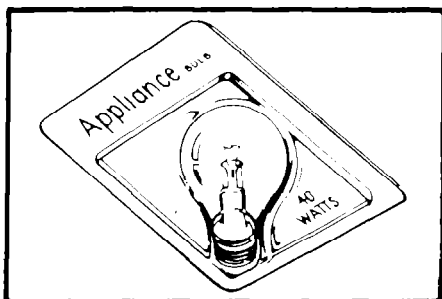

 3. Replace the bulb only with a **40-watt appliance bulb** from most hardware, grocery or variety stores.

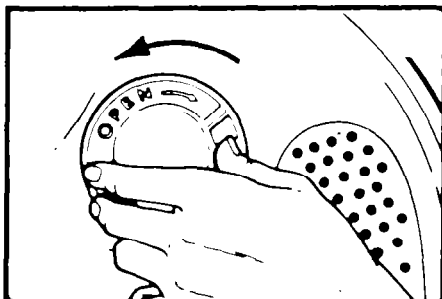


4. Replace the light bulb cover and lock it in place by turning counterclockwise.

CAUTION: The bulb cover must be securely in place during dryer operation to prevent overheating and possible damage to fabrics. Operating the dryer with the bulb cover removed can cause the dryer to fail or create a **FIRE HAZARD**.


If you need service or assistance, we suggest you follow these four steps:

1. Before calling for assistance...

 
Performance problems often result from little things you can find and fix yourself without tools of any kind.

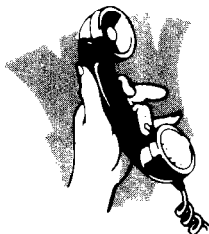

If your dryer does not run:

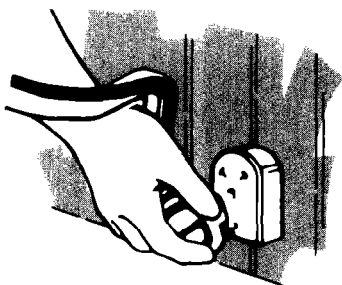 

 
- Is the power supply cord plugged into a live circuit with the proper voltage?
- Is the door closed tightly?
- Do you push the START Button?

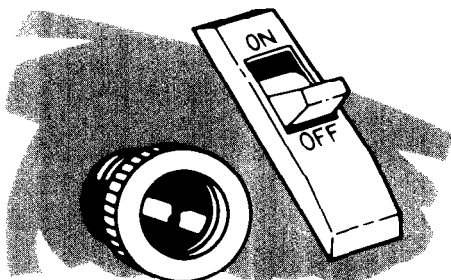

- Have you checked your home's main fuses or circuit breaker box?


If your dryer does not heat:

 - The AIR setting is without heat.
- The last minutes of heat settings are without heat.

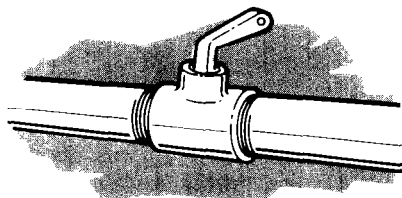

- Is the gas turned on? If not, turn the Control Knob to OFF. Turn on gas. Wait 5 minutes. Reset controls and start.
- An electric dryer uses a circuit breaker or 2 fuses. If one fuse is blown, the dryer may run, but not heat.

 If drying time seems long:

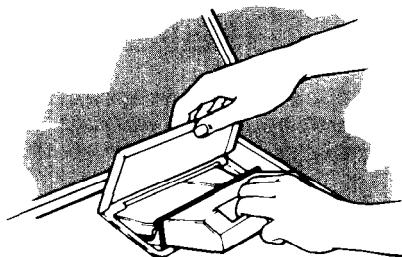

- Is the lint screen clean?
- See page 7 of this book and page 6 of your "Dryer Guide."

2. If you need assistance*...

Call Whirlpool **COOL-LINE®** service assistance telephone number. Dial free from:

Continental U.S. (800) 253-1301
Michigan (800) 632-2243
Alaska & Hawaii ... (800) 253-1121

and talk with one of our trained Consultants. The Consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

3. If you need service*...



Whirlpool has a nationwide network of franchised **TECH-CARE®** Service Companies. **TECH-CARE** service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate **TECH-CARE** service in your area, call our **COOL-LINE** service assistance telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

APPLIANCES - HOUSEHOLD -
MAJOR - SERVICE & REPAIR

WHIRLPOOL APPLIANCES
FRANCHISED TECH-CARE SERVICE

SERVICE COMPANIES
XYZ SERVICE CO
123 MAPLE 999-9999

OR

ELECTRICAL APPLIANCES -
MAJOR - REPAIRING & PARTS

WHIRLPOOL APPLIANCES
FRANCHISED TECH-CARE SERVICE

SERVICE COMPANIES
XYZ SERVICE CO
123 MAPLE 999-9999

OR

WASHING MACHINES, DRYERS
& IRONERS - SERVICING

WHIRLPOOL APPLIANCES
FRANCHISED TECH-CARE SERVICE

SERVICE COMPANIES
XYZ SERVICE CO
123 MAPLE 999-9999

4. If you have a problem*...

Call our **COOL-LINE** service assistance telephone number (see Step 2) and talk with one of our Consultants, or if you prefer, write to:

Mr. Robert Stanley
Division Vice President
Whirlpool Corporation
2000 US-33, North
Benton Harbor, MI 49022

*If you must call or write, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.



FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance.

FSP replacement parts

will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.

[illegible]



Making your world a little easier.

Part No. 3387068
©1986 Whirlpool Corporation

Printed in U.S.A.

Automatic Washers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-In Ovens and Surface Units, Ranges

