

use & care guide

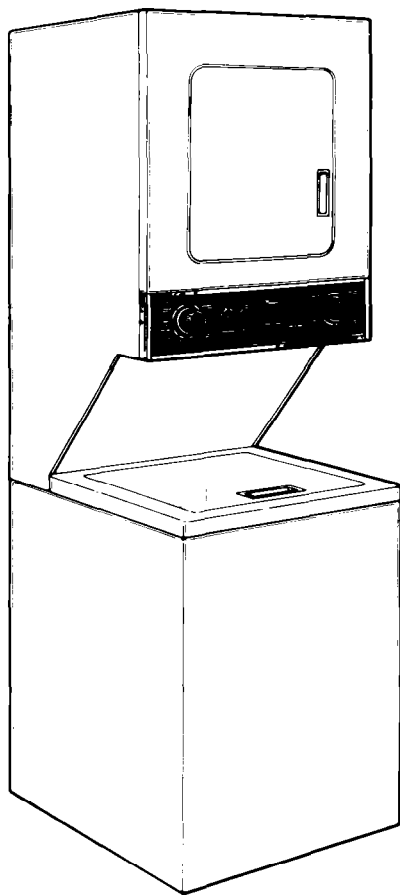

thin
twin

WASHER • DRYER

Electric Models

LT5000XS

LT5004XS


Gas Model

LT5100XS

Microwave Ovens, Trash Compactors, Room Air Conditioners, Dehumidifiers, Automatic Washers, Clothes Dryers, Freezers, Refrigerat



Parts and features

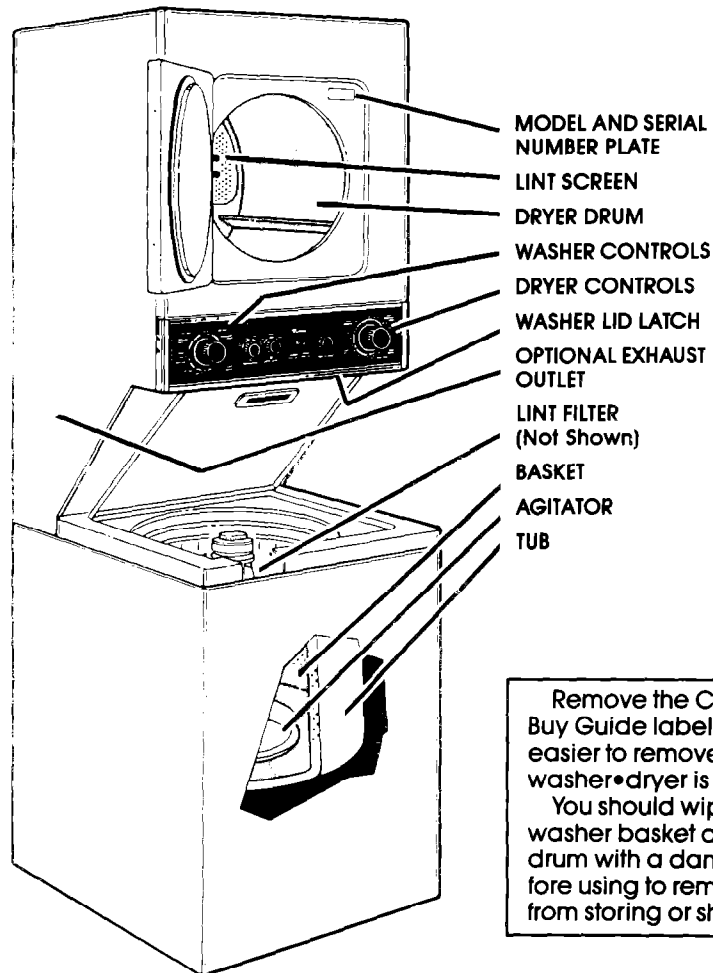

Remove the Consumer Buy Guide label. It will be easier to remove before the washer•dryer is used.

You should wipe out the washer basket and dryer drum with a damp cloth before using to remove dust from storing or shipping.

Copy your Model and Serial Numbers here

When you need service or call with a question, have this information ready:

- 1. Complete** Model and Serial Numbers (from the plate located as shown).
- 2. Purchase date** from sales slip.

Copy this information in these spaces. Keep this book, your warranty and sales slip together in a handy place.

Please complete and mail the Owner Registration Card furnished with this product.

Model Number

Serial Number

Purchase Date

Service Company Phone Number

Contents		Page	Page
PARTS AND FEATURES	2	Timed Drying	15
BEFORE USING YOUR		Selecting a Cycle	15
WASHER-DRYER	3	Gentle Heat	15
IMPORTANT SAFETY		DRYING TIPS	16
INSTRUCTIONS	4	FLUFF AIR Setting	16
WASHER OPERATING		TUMBLE PRESS® Setting	16
INSTRUCTIONS	6	Mixed Loads	16
Starting Your Washer	6	Drying Times	16
What Happens in Each		Automatic DRI-MISER®	
Cycle	8	Control	16
OTHER OPERATING		LINT SCREEN	17
INSTRUCTIONS	12	LINT REMOVAL	17
For a Rinse and Spin	12	CARING FOR YOUR	
For a Drain and Spin	12	WASHER-DRYER	18
For a Soak or Pre-Wash	12	Cleaning Dryer Interior	18
Cleaning the Lint Filter	13	Vacation Care	19
DRYER OPERATING		Winterizing	19
INSTRUCTIONS	13	IF YOU NEED SERVICE OR	
Starting Your Dryer	13	ASSISTANCE	20
Automatic Cycles	14	WASHER WARRANTY	24

©1987 Whirlpool Corporation

Before using your **THIN TWIN*** washer•dryer

For best washing and drying results, you must take some very important steps before, during and after each load:

1. Prepare and sort each load for washing, (see your "Laundry Guide").
2. Measure and add detergent or soap to washer, (see your "Laundry Guide").
3. Load the washer properly, (see your "Laundry Guide").
4. Select the water temperature, load size and cycle recommended for the fabrics before starting the washer, (see pages 6 and 7).
5. Add other laundry aids to the washer according to instructions, (see your "Laundry Guide").
6. Properly sort the load for drying, (see your "Laundry Guide").
7. Select the right drying cycle and time for the fabrics, (see pages 14-16).
8. Remove and hang or fold items **immediately** after drying.

Service or performance problems caused by the user of any product not manufactured by Whirlpool Corporation are the responsibility of the manufacturer of that product.

*Tmk.

Important safety instructions



WARNING – To reduce the risk of fire, electric shock, or injury to persons when using your washer/dryer, follow basic precautions, including the following:

Read these Laundry Instructions for important use and safety information before using your washer/dryer.

NEVER wash or dry items cleaned, washed, soaked in or spotted with wax, paint, gasoline, or flammable fluids in the washer. The fumes can create a **FIRE HAZARD** or **EXPLOSION**. **ALWAYS** hand launder and air dry fabrics containing these materials.

NEVER allow children to operate, play with, or crawl inside the washer/dryer. Close supervision of children is necessary when the washer/dryer is used near children.

When discarding an old washer/dryer, **ALWAYS** remove the lid and door to prevent accidental entrapment.

NEVER reach into the washer/dryer until all the motion stops. If the lid is opened while the washer basket is spinning, the basket will automatically stop in a few seconds.

DO NOT install or store washer/dryer where it will be exposed to the weather.

DO NOT tamper with the controls.

You are personally responsible for making sure that your washer/dryer is installed, repaired and parts replaced by a qualified person.

NEVER use or store flammable fluids (dry cleaning solvents, gasoline, kerosene) in or near your washer/dryer. Do not add flammable fluids to the wash water. The substances give off vapors that can create a **FIRE HAZARD** or **EXPLOSION**.

Use only dryer fabric softeners specifically labeled as not being harmful to the dryer.

FIRE HAZARD and **DAMAGE** to materials can result from:

- drying rubber, rubber-like and heat sensitive materials with heat.
- allowing lint to build-up inside the dryer or exhaust system – cleaning should be done by a qualified person.

Clean lint screen before or after each load.

WARNING: If hot water has not been used recently (usually two weeks or longer), hydrogen gases may build up in the water heater and the hot water pipes. **HYDROGEN GAS IS EXPLOSIVE.** To prevent injury or damage, before using your washer, turn on all hot water faucets and allow water to run for several minutes. This will allow gases to escape. Do not smoke or use any open flame near the faucet while it is open.

DO NOT let dust, paper, rags, chemicals, etc. pile up around or under the washer/dryer.

The washer/dryer must be electrically grounded. See the "Installation Instructions."

– SAVE THESE INSTRUCTIONS –

Additional Safety Instructions and Your Responsibilities

ALWAYS shut off the gas valve before leaving on vacation.

ALWAYS unplug the power supply cord before attempting to service the washer/dryer. Shut off **GAS VALVE** if yours is a gas dryer.

• FOR YOUR SAFETY •

IF YOU SMELL GAS:

1. OPEN WINDOWS.
2. DON'T TOUCH ELECTRICAL SWITCHES.
3. EXTINGUISH ANY OPEN FLAME.
4. IMMEDIATELY CALL YOUR GAS SUPPLIER.

DO NOT machine wash glass fiber materials. Small particles can stick to fabrics washed in following loads and cause skin irritation.

HAZARDOUS FUMES can be formed if chlorine bleach is used in the same wash as ammonia or acids such as vinegar or rust remover.

ALWAYS store detergent, laundry aids and other materials in a cool, dry place where children can't reach them – in a locked cabinet if possible.

ALWAYS read and follow instructions on packages of detergent and laundry aids – especially warnings and precautions.

NEVER operate the washer/dryer if...

- it is not working right.
- it is damaged.
- parts are missing.
- all panels are not in place.

You are personally responsible for making sure that your washer/dryer:

- is properly maintained.
- is properly installed and leveled in a well ventilated room on a floor that can support the weight.*
- is located in an area where the temperature is above 45°F (7.2°C) because...
 - the dryer will not operate properly at cold temperatures.
 - freezing temperatures can damage the washer.
- is connected to the proper electrical supply, outlet, water supply, plumbing fixtures, drain, and dryer exhausting system.*
- is not installed against drapes or curtains.*
- is used only for jobs normally expected of home automatic washer/dryers.


*Refer to the "Installation Instructions" for complete information.

Washer operating instructions


Starting Your Washer



Be sure to measure and add detergent, then place a sorted load in the washer before starting it.

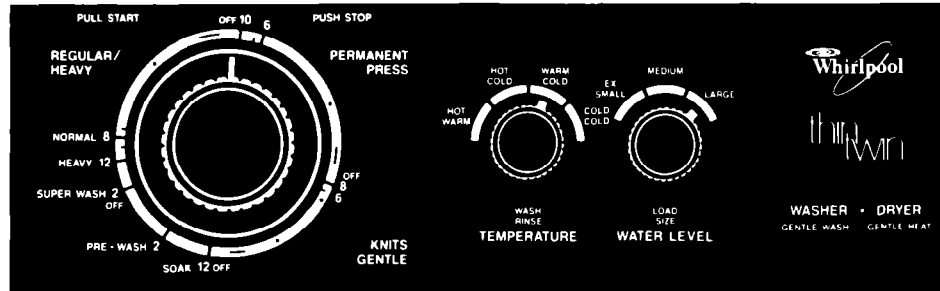


1. Select a LOAD SIZE

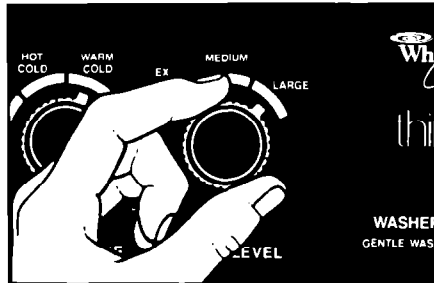

- Turn the knob to point at a setting that describes the size of load you want to wash.
- The washer can be set for EX SMALL, MEDIUM or LARGE loads. Select the water level that matches the load size.

See your "Laundry Guide" for details on load sizes.

2. Select WATER TEMPERATURES

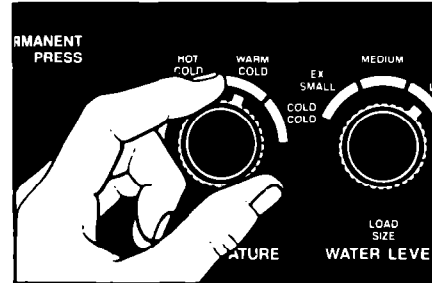

- Match the wash water temperature to the type of fabrics and soils being washed.

Recommended wash temperatures can be found in your "Laundry Guide."


LOAD SIZES AND WATER LEVELS

For best cleaning results, the load must be able to move freely in the water. Too big a load or too little water can cause wear or tearing of load items.



**CAUTION:
DO NOT
OVERLOAD WASHER**



LARGE
(11.3 gal./42.7 L)*
MED
(8.5 gal./32.1 L)*
EX SMALL
(5.6 gal./21.2 L)*

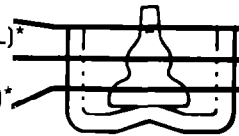


*Approximate fill with load.

To hold the washer lid up, lift the lid until it snaps past the latch.


To release the lid, push the lid latch up.

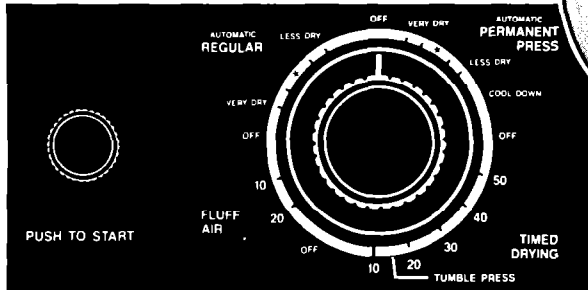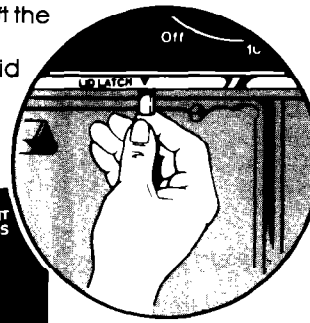


3. Select CYCLE and WASH TIME; Start the washer

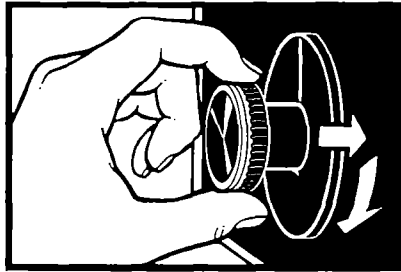


A. Push in the Control Knob and turn it to the right. It must be pushed in and turned only clockwise.

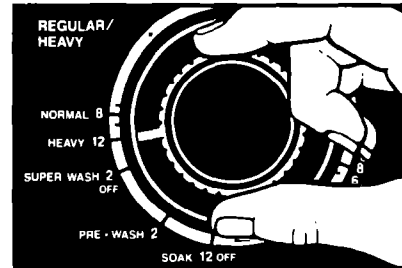

B. Stop on a number in the cycle you want. The numbers are minutes of wash time. The drawing shows 8 minutes of agitation in the REGULAR NORMAL Cycle.

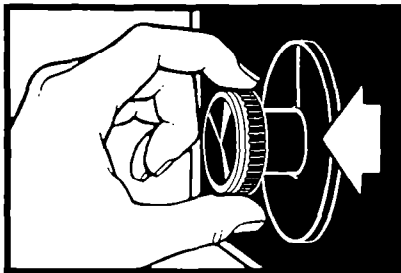

C. Start the washer by pulling out the control knob. The washer will fill to the level you set with wash water of the selected temperature. After filling, the washer will agitate for the selected number of minutes.

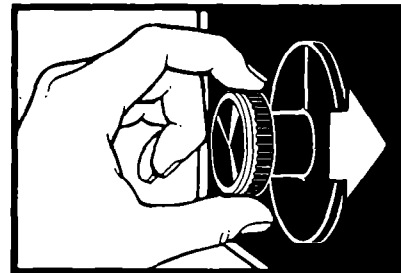



D. To stop the washer at any time, push in the Control Knob. To restart the washer, pull out the Control Knob.

What Happens in Each Cycle*

Each cycle has different agitation and spin speeds designed for different kinds of fabrics. Numbers on the dial in each cycle are the minutes of WASH agitation time.



When the Cycle Control Knob is set to a number and pulled out, the washer fills before agitation and timing starts. After agitation starts, the knob

REGULAR HEAVY Cycle

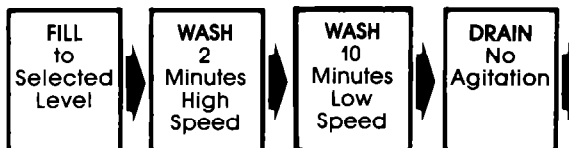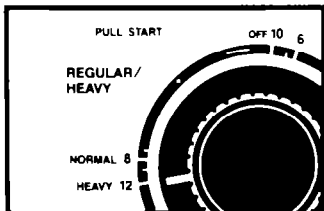



A cycle for sturdily constructed fabrics that are heavily soiled.

REGULAR NORMAL Cycle

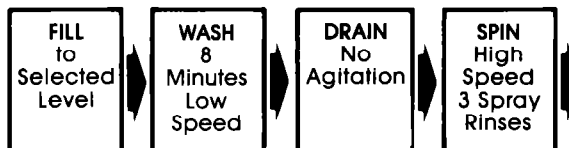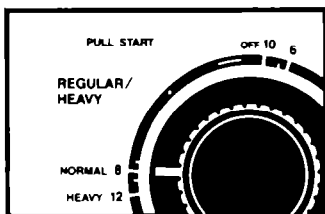

A cycle for sturdily constructed fabrics that are moderately soiled.

PERMANENT PRESS Cycle

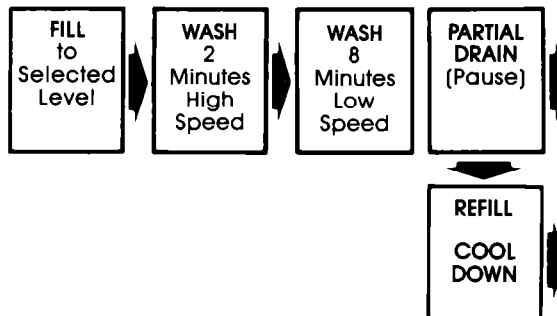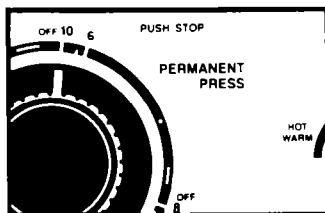





A special cycle with the necessary **cool-down** rinse which helps keep wrinkles from setting into Permanent Press and some synthetic fabrics.

turns clockwise until it points to OFF and the cycle ends.

NOTE: You may hear the sound of water spraying during the spin parts of some cycles. In some cycles, cold water is sprayed on the spinning load to help with the rinsing.


Gentle Wash System

 For better fabric care in the REGULAR and PERMANENT PRESS cycles, the agitation speed is reduced during the last few minutes of wash time.

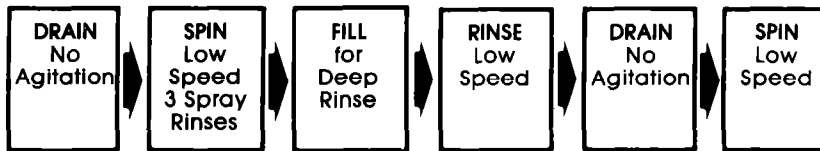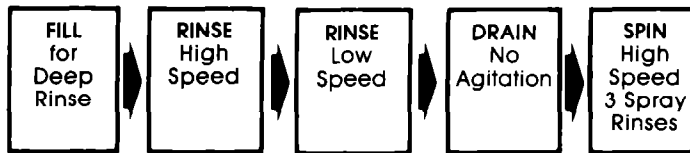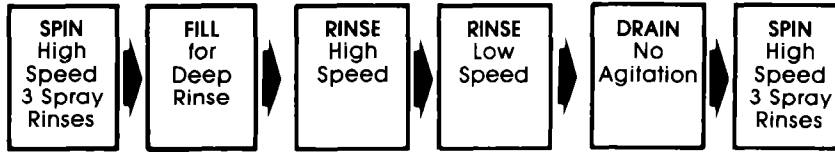


NOTE: Always use **cold rinse water** for permanent press fabrics.

KNITS/GENTLE Cycle

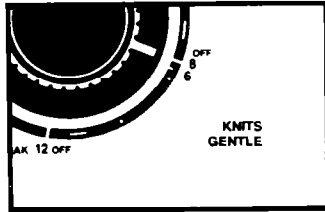


A cycle that gently washes and spins delicate items and washable knits.

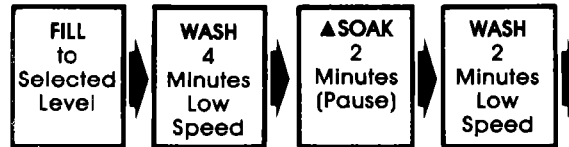


▲Indicates the machine is pausing for a brief soak period.

SOAK and PRE-WASH Cycles

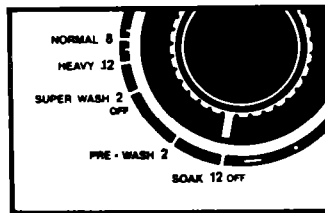


Brief periods of agitation and soak time help remove heavy soils and certain stains that need extra pretreatment. Use recommended amount of detergent. **The SOAK Cycle should always be followed by a Wash Cycle.**

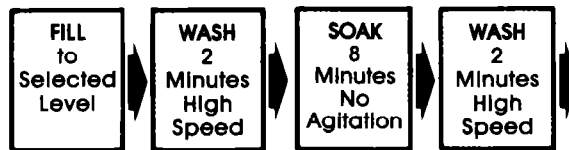




← Pre-wash setting begins here.
(See page 12).

SUPER WASH Cycle

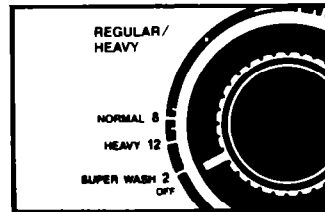

Use for washing heavily soiled loads that require maximum soil removal. **Double the amount of detergent recommended when using the SUPER WASH Cycle.**

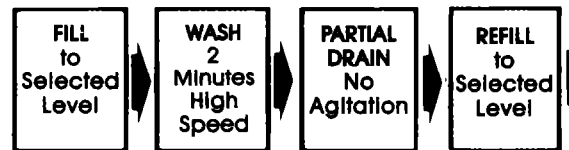

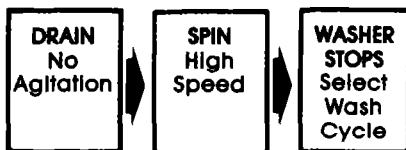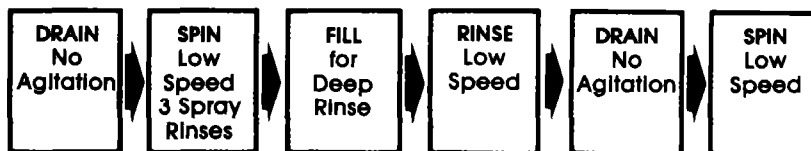


Special care is needed when soaking or pre-washing laundry. See your "Laundry Guide" for proper use of this cycle.

After the Partial Drain, the washer automatically refills and goes in the REGULAR/HEAVY Cycle. **Be sure to use enough detergent for the double wash.**

*** IMPORTANT: THE WASHER WILL PAUSE BRIEFLY THROUGHOUT EACH CYCLE. These pauses are normal. They allow for the reversing of the motor, normal washer operation, and the cool down portion of the PERMANENT PRESS Cycle.**


Other operating instructions

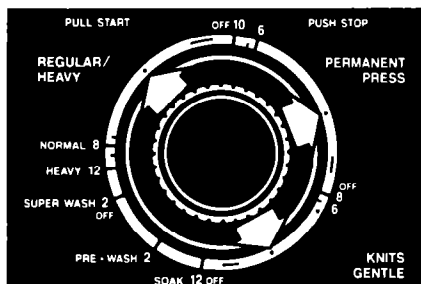

For a rinse and spin

You may need an extra rinse and spin for heavily soiled loads which need more detergent. (Extra detergent can require an extra rinse.)

1. Push Control Knob in.
2. Turn clockwise to any • on the dial. **See above drawing.**
3. Pull Control Knob out. The washer will fill to selected level; agitate 2 minutes; drain and spin.

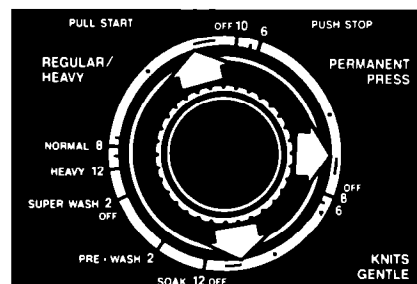

For a drain and spin

Your washer can be set to drain and spin out water.


1. Push Control Knob in.
2. Turn clockwise to the bar just before the OFF area in any cycle. **See above drawing.**
3. Pull Control Knob out. The washer will drain and spin.

For agitation and spin speeds in each cycle, see pages 8-11.

For a soak or pre-wash

For best results, use warm water for soaking or pre-washing stained laundry. **Hot water can set stains.**

1. Use recommended amount of detergent or pre-soak product.

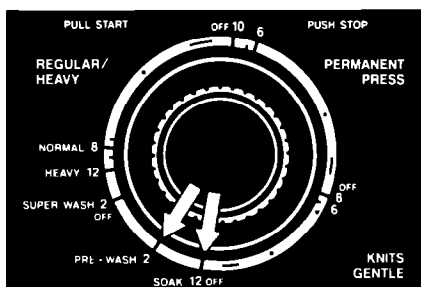

2. Push Control Knob in.
3. Turn clockwise to point at a **number** in the SOAK or PRE-WASH Cycle.
4. Pull Control Knob out. The washer will start.
5. When the cycle is over, add detergent for the next selected wash cycle. **The SOAK Cycle should always be followed by a Wash Cycle.**

Important: See additional care information in your "Laundry Guide."


To start the soak or pre-wash with agitation, the Cycle Control Knob must point to a number.

Cleaning the lint filter

Clean filter after every load for best filtering results. **NOTE: The load type will vary the amount of lint build-up.**

To clean:


1. Lift off the agitator barrel.
2. Wash or wipe the filter clean in the bottom of the agitator barrel. **The filter is not removable.**
3. Replace the agitator barrel and snap into place.

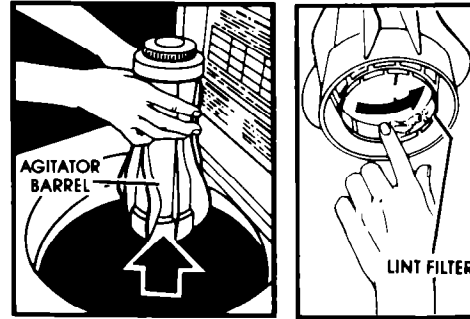


Dryer operating instructions

Starting Your Dryer

Before starting your dryer, be sure laundry is sorted and loaded properly, (see your "Laundry Guide"). **Be sure the door is tightly closed.**

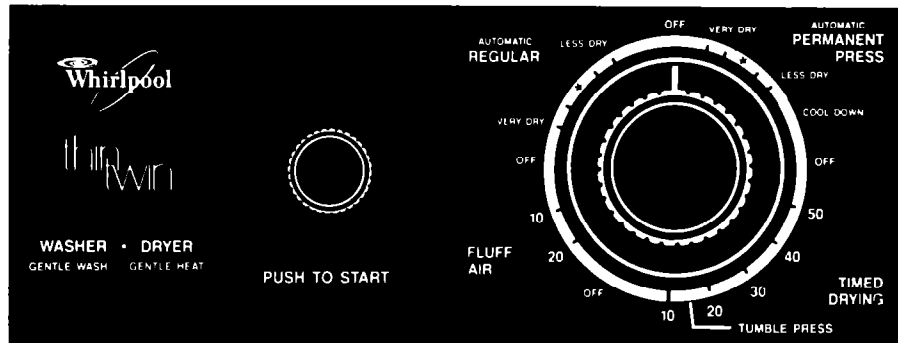


1. Select CYCLE and TIME

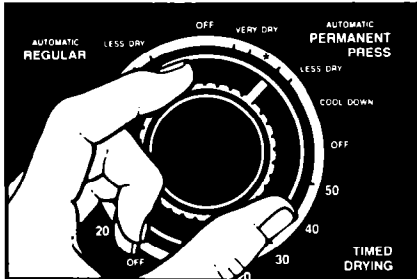

Turn the Control Knob either way to point to the time setting you want in the cycle you want.


2. Push the START Button

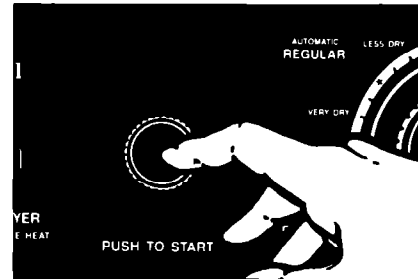

The dryer will start tumbling when you push the START Button.

continued on next page

3. To Stop and Restart the Dryer

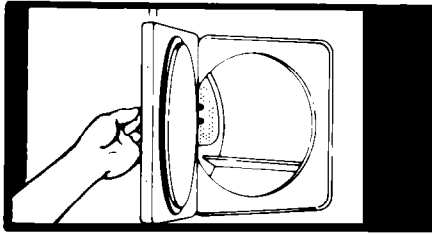

To stop, open the door (or turn the Control Knob to the OFF area).

To restart, close the door and push the START Button.

4. Changing the Setting


The setting can be changed at any time by turning the Control Knob to a new setting.

The Cycle Control Knob should point to an OFF area when the dryer is not in use. If the dryer is stopped before the cycle is finished, turn the Cycle Control Knob to an OFF area.

The automatic cycles


The automatic cycles allow you to select the degree of dryness you prefer for the clothes being dried.

The Cycle Control Knob will not move until the clothes load is almost dry, or the COOL-DOWN portion of the cycle has been reached. After COOL-DOWN, the knob automatically moves to an OFF area and tumbling stops.

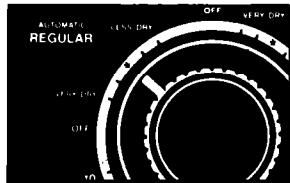


Use **AUTOMATIC REGULAR** to dry heavy and medium-

weight cotton items. **The load tumbles without heat during the last 5 minutes.** This helps make the load easier to handle.

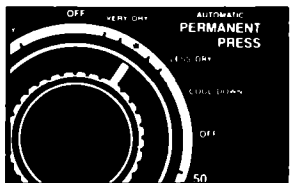


Use **AUTOMATIC PERMANENT PRESS** to dry permanent


press, knits and other synthetic fabrics. **The load tumbles without heat during the last 10 minutes.** This helps keep wrinkles from setting in, and makes the load easier to handle.

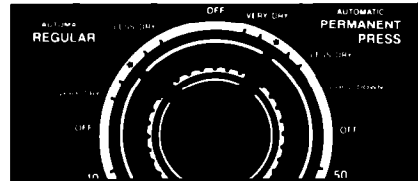

For the first few loads, set the Control Knob to point to an * in either automatic cycle. When the dryer stops, feel the dried items.

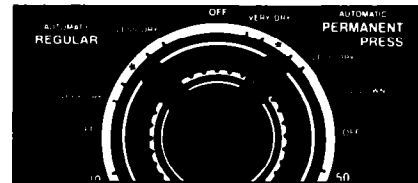

- If items are drier than you like, use a setting to the right of the * the next time you dry a similar load.

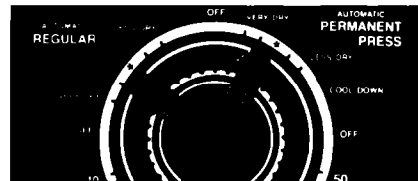


- If items are not as dry as you like, use a setting to the left of the * the next time you dry a similar load.

OVERDRYING CAN CAUSE SHRINKAGE, STATIC CLING AND DAMAGE TO SOME FABRICS.

Timed drying


Use the TIMED DRYING Cycles for any load you want to dry by time.

- Turn the Control Knob to the number of minutes you want – from 10 to 50.
- The last 10 minutes of this cycle are without heat – a cool-down time. This helps make the load easier to handle.

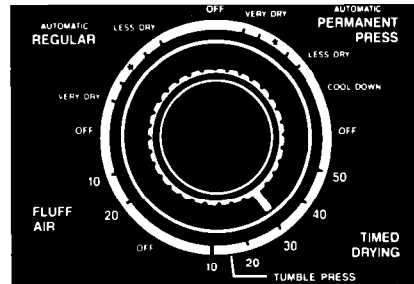

Selecting a Cycle

TYPE OF LOAD	SUGGESTED CYCLE
COTTON – Linens	
EXTRA HEAVY – Bedspreads, mattress pads, quilts	AUTOMATIC REGULAR
HEAVYWEIGHT FABRICS – Towels, jeans, corduroys, work clothes	
MEDIUMWEIGHT COTTONS – Sheets, pillowcases, cotton underwear, diapers	
LIGHTWEIGHT COTTONS – Batistes, organdies, lingerie	
PERMANENT PRESS, SYNTHETICS AND BLENDS	
HEAVYWEIGHT FABRICS – Work clothes, jackets, raincoats	AUTOMATIC PERMANENT PRESS
MEDIUMWEIGHT FABRICS – Shirts, play clothes, sheets, slacks	
LIGHTWEIGHT FABRICS – Lingerie, blouses, dresses	
KNITS	
HEAVYWEIGHT – Cottons, rayons, blends, T-shirts, slacks, shirts	AUTOMATIC PERMANENT PRESS
LIGHTWEIGHT – Synthetics (polyester, acrylic, etc.) and blends, lingerie, blouses, dresses	
LIGHTWEIGHT AND DELICATE FABRICS	
Sheer Curtains (2 or 3 panels)	AUTOMATIC PERMANENT PRESS
Gauze, lace, etc.	
RUBBER, PLASTIC, HEAT-SENSITIVE FABRICS	
FOAM RUBBER – Pillows, bras, stuffed toys	FLUFF AIR 20 MIN.
PLASTIC – Shower curtains, tablecloths	20 MIN.
OLEFIN, POLYPROPYLENE, SHEER NYLON	15-20 MIN.




WARNING: Drying these and other heat-sensitive materials with heat can damage them or be a FIRE HAZARD.

Gentle Heat

The dryer automatically reduces the heating settings in the automatic cycles. During the last few minutes of these cycles the dryer gradually reduces to a lower heat setting. This helps prevent overdrying.

Drying tips

FLUFF AIR

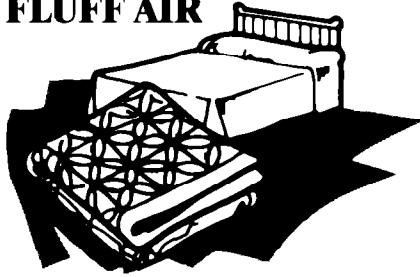


The dryer does not heat when the Control Knob is set on FLUFF AIR. This setting can be used to fluff bedding, plastic tablecloths, foam rubber pillows, stuffed toys, sneakers, etc.



WARNING: Drying plastic or rubber items with heat may damage the items or be a FIRE HAZARD.

Mixed loads

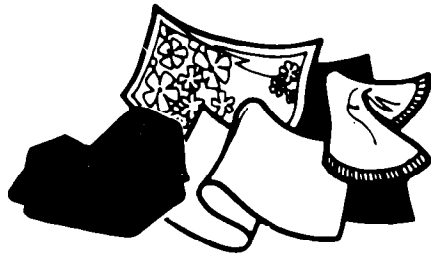


When drying a load with different kinds and weights of fabrics, use the cycle suggested for the lightest fabrics. When the dryer stops, remove dry items and reset the control.

To help reduce wrinkles, take the load from the dryer **as soon as tumbling stops**. This is very important for permanent press, knits and other synthetic fabrics.

Automatic DRY-MISER® Control

The thermostat senses the air temperature. The dryer automatically shuts off when the selected dryness is reached.

TUMBLE PRESS® Setting

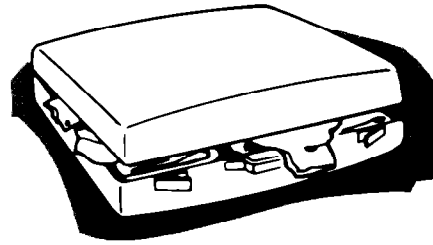


The TUMBLE PRESS setting removes wrinkles from dry clothing such as items that may have been packed in a suitcase, closet, or items not removed from the dryer.

The load will tumble in heated air for 10 minutes. The heat shuts off and the dryer continues to tumble the load for 5 more minutes.

For best results, TUMBLE PRESS only a few items at a time. Put them on hangers or fold them as soon as the dryer stops.

Drying times

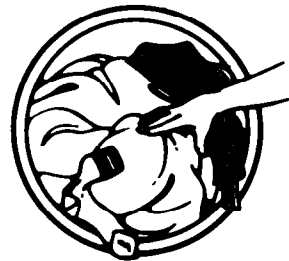

Drying times will vary depending on:

- amount of moisture in the clothes.
- type and weight of the fabric.
- size of the load.
- room temperature around the dryer.
- temperature of the wash rinse water.
- amount of lint in the lint screen.
- dryer temperature selection.


See your "Laundry Guide" for more information.

Lint screen


Clean the lint screen before each load. A screen blocked by lint can increase drying time and may be a FIRE HAZARD.

The lint screen is inside the dryer drum, on the back wall.

1. Use the finger holes to pull the lint screen straight out.

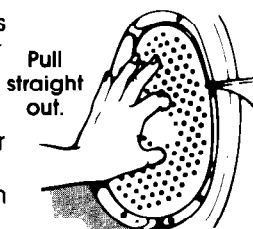

2. Lightly squeeze the body, as shown, while pulling the cover off.

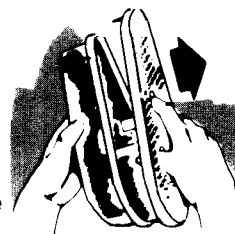

3. Roll lint off the screen with your fingers. **DO NOT rinse or wash the screen. Wet lint is hard to remove.**
4. Replace the cover on the body of the lint screen.
5. Push the lint screen straight back in until it clicks into place.


Squeeze body; pull cover off.




WARNING: DO NOT run the dryer with the lint screen loose, damaged, blocked or missing. Doing so can cause overheating, damage fabrics and be a FIRE HAZARD.

Lint removal

Lint can gather inside the dryer and create a **FIRE HAZARD**. This lint should be removed at least every 2 to 3 years, or more often, depending on dryer usage.

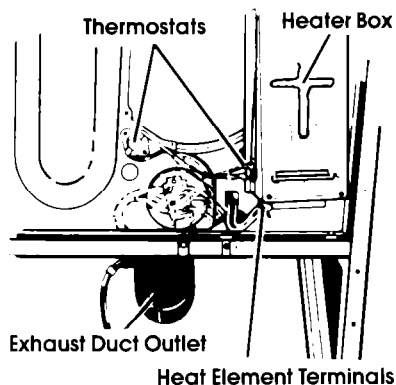

ELECTRIC DRYERS

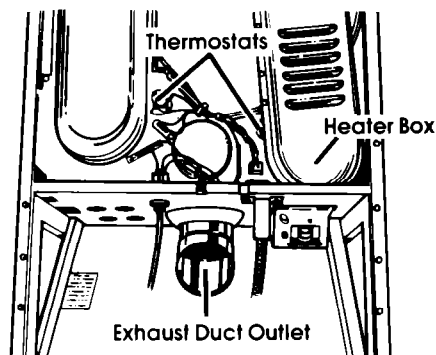

GAS DRYERS

Cleaning should be done only by a qualified person.




WARNING:


- Avoid electrical shock hazard – unplug power supply cord or turn off electrical power.
- Avoid Injury or damage – do not put hands inside cabinet.
- Make sure dryer is cool.

1. Remove back panel from dryer.
2. Avoid touching wires and thermostats.
3. Remove lint from shaded area – see art – with a soft brush or vacuum cleaner.
4. Replace back panel, reconnect and relevel the washer/dryer.

Caring for your washer•dryer

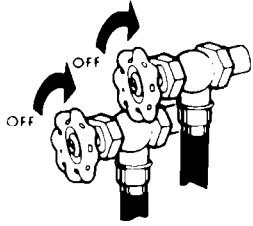


When not washing, keep both water faucets turned off. This takes the pressure off the water inlet valve and hoses.

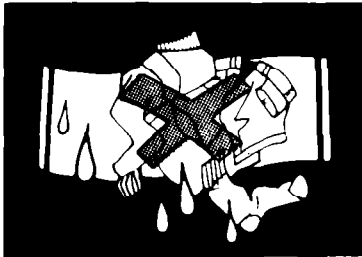

Never use the washer to...

- soak for more than 2 hours.
- soak with chlorine bleach.
- soak with vinegar or other acids.
- soak or store urine soaked clothes.


Never leave or store wet, damp or dry laundry in your washer or dryer.

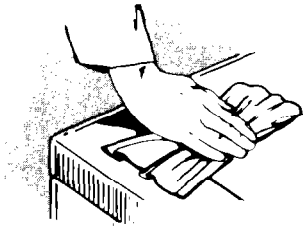


After washing, use a soft dry cloth to wipe the outside and inside dry. Leave washer lid up until the basket is dry. **Wipe up all spills.** Spills allowed to remain may dull or damage the finish.

Remove loose and sharp objects from pockets and cuffs before washing or drying – pins, buckles, etc. **Close metal zippers.**

Sharp or heavy objects should never be put on or in the washer or dryer. Check pockets for bolts, nuts, etc.

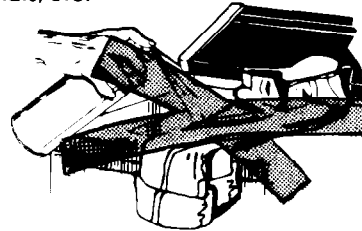

Some pretreatment products can damage dials, consoles and finish. Do not use these products on or near your washer or dryer.

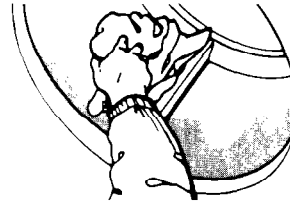

Cleaning dryer interior



WARNING: Before cleaning interior, unplug power supply cord or, turn off electrical power to avoid electrical shock hazard.

Garments which contain unstable dyes, such as denim blue jeans or brightly colored cotton items, may discolor the dryer interior. If the interior is discolored, clean with one of the following methods to avoid staining later load items.


Powdered laundry detergent and very warm water

Make a paste with detergent and very warm water. Apply paste to a soft cloth and scrub area until all excess dye is removed. Wipe thoroughly with a damp cloth. Tumble a load of rags – **OR–**

Liquid spray household cleaner

Spray on stained area. Rub with a cloth until all excess dye is removed. Tumble a load of rags.



Vacation care

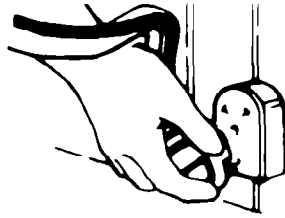



1. Turn off both water faucets to take pressure off inlet valves and hoses.
2. Unplug power supply cord or turn off electrical power supply.
3. Clean lint screen and lint filter.

Winterizing

Install and store your washer/dryer where it won't freeze. Because some water stays in the washer, freezing can damage it. If your washer/dryer is stored **or moved** during freezing weather, winterize it.

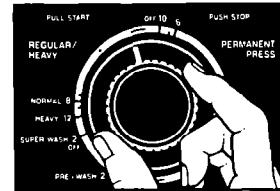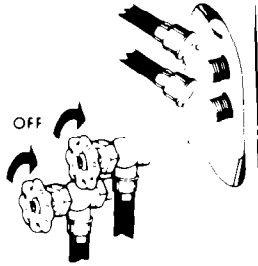

1. Shut off both water faucets. Disconnect and drain water inlet hoses.
2. Put a quart of R.V. or automobile type antifreeze in the basket.
3. Run washer on a drain and spin setting (see page 12) for about 30 seconds to mix antifreeze and water.

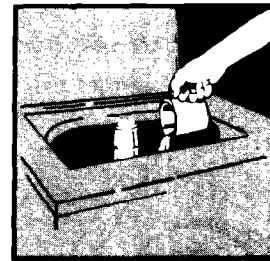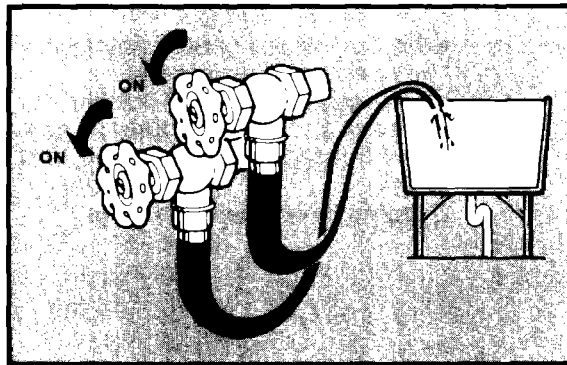


To use the washer again...

1. Flush water pipes and hoses.
 2. Reconnect water inlet hoses.
 3. Turn on both water faucets.
4. Run the washer through a complete cycle with one cup of detergent to clean out the anti-freeze.

If you need service or assistance, we suggest you follow these five steps:

1. Before calling for assistance...

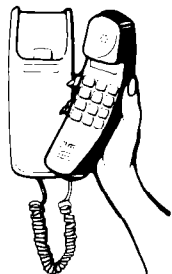


Performance problems often result from little things you can find and fix yourself without tools of any kind.

If your washer does not fill:

- Is the power supply cord plugged into a live circuit with the proper voltage?
- Are both water faucets open?
- Have you checked your home's main fuses or circuit breaker box?
- Are the water supply hoses kinked?
- Is the Cycle Control Knob set and pulled out?

If your washer does not spin:

- Is the lid closed?
- Is the power supply cord plugged into a live circuit with the proper voltage?

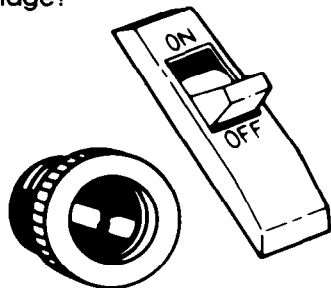

- Have you checked your home's main fuses or circuit breaker box?

If your washer drains at the wrong time:

- The drain hose should be at least 28 inches above the floor and secured.

- The drain hose should not fit tightly in the drain pipe.
- Make sure that the Cycle Control Knob is pointing to a number in the cycle.

Make sure the drain hose is higher than the water level in the washer. If it isn't...

- The washer may seem to be draining during wash and rinse cycles.
- Water can siphon out. (See "Installation Instructions.")


If your washer stops during a cycle:

- Remember, the washer pauses briefly at different times in each cycle. These pauses are normal.

If your dryer does not run or heat:

- Is the power supply cord plugged into a live circuit with the proper voltage?
- Is the door closed tightly?
- Did you push START?
- Have you checked your home's main fuses or circuit breaker box?
- The FLUFF AIR setting is without heat.
- The last minutes of heat settings are without heat. See page 14.
- Is the gas turned on? If not, turn the Control Knob to OFF. Turn on gas. Wait 5 minutes. Reset controls and start.

If drying times seem too long:

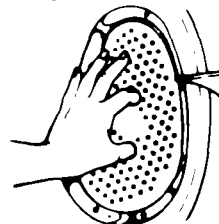

- Is the lint screen clean? See page 17 of this book for cleaning instructions.
- See page 16 of this book and your "Laundry Guide."

2. If you need assistance*...

Call Whirlpool COOL-LINE® service assistance telephone number. Dial free from anywhere in the U.S.:
1-800-253-1301

and talk with one of our trained Consultants. The Consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

3. If you need service*...



Whirlpool has a nationwide network of franchised TECH-CARE® Service Companies, TECH-CARE service technicians

are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate TECH-CARE service in your area, call our COOL-LINE service assistance telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

APPLIANCES - HOUSEHOLD -
MAJOR - SERVICE & REPAIR

ELECTRICAL APPLIANCES -
MAJOR - REPAIRING & PARTS

OR

WHIRLPOOL APPLIANCES
FRANCHISED TECH-CARE SERVICE

WHIRLPOOL APPLIANCES
FRANCHISED TECH-CARE SERVICE

SERVICE COMPANIES

XYZ SERVICE CO
123 MAPLE

999-9999

SERVICE COMPANIES

XYZ SERVICE CO
123 MAPLE

999-9999

OR

WASHING MACHINES, DRYERS
& IRONERS - SERVICING

WHIRLPOOL APPLIANCES
FRANCHISED TECH-CARE SERVICE

SERVICE COMPANIES

XYZ SERVICE CO
123 MAPLE

999-9999

4. If you have a problem*...

Call our COOL-LINE service assistance telephone number (see Step 2) and talk with one of our Consultants, or if you prefer, write to:

Mr. Robert Stanley
Division Vice President
Whirlpool Corporation
2000 M-63
Benton Harbor, MI 49022

5. If you need FSP® replacement parts*...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.

*If you must call or write, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.


WHIRLPOOL® "THIN TWIN" WARRANTY

LENGTH OF WARRANTY	WHIRLPOOL WILL PAY FOR
FULL ONE-YEAR WARRANTY From Date of Purchase	FSP® replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by a franchised TECH-CARE® service company.
LIMITED FOUR-YEAR WARRANTY Second Through Fifth Year From Date of Purchase	FSP® replacement parts for any part of gearcase assembly if defective in materials or workmanship. The gearcase assembly is shown below.
WHIRLPOOL WILL NOT PAY FOR	
<p>A. Service calls to:</p> <ol style="list-style-type: none"> 1. Correct the installation of the washer/dryer. 2. Instruct you how to use the washer/dryer. 3. Replace house fuses or correct house wiring or plumbing. 4. Replace light bulbs. <p>B. Repairs when washer/dryer is used in other than normal, single-family household use.</p> <p>C. Pick up and delivery. This product is designed to be repaired in the home.</p> <p>D. Damage to washer/dryer caused by accident, misuse, fire, flood, acts of God or use of products not approved by Whirlpool.</p> <p>E. Any labor costs during the limited warranty.</p>	

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may apply. For details, please contact your authorized Whirlpool distributor or military exchange.

**GEARCASE ASSEMBLY
COVERED BY YOUR
WARRANTY**

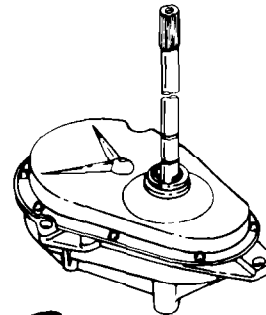

Part No. 3388935
©1987 Whirlpool Corporation

Printed in U.S.A.