




Speed Queen

Use and Care Guide Home Laundry Automatic Washer

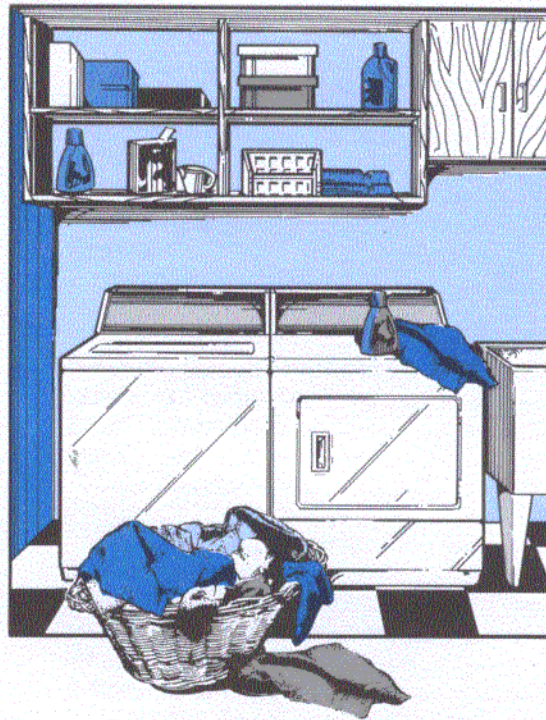

Model:
AWM290W/L2

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. (If the washer changes ownership, be sure this manual accompanies the washer.)

How To Use Your Washer . . .

Operation Instructions

▲ WARNING

To reduce the risk of fire, electric shock, serious injury or death, read the **IMPORTANT SAFETY INSTRUCTIONS, Pages 2 and 3, before operating the washer.**

Determine Proper Cycle

Regular

Use for sturdy items, like play or work clothes, towels, T-shirts, etc. The wash time selection will depend on the type of fabric and the amount of soil. For the best results when cleaning heavily soiled items, use a longer wash time (15 minutes maximum). Lightly soiled items require less wash time.

There are three settings in the Regular cycle - heavy, normal and light. The number shown next to these settings is the length of agitation in minutes. (For example: setting the timer on Heavy will be a 15-minute agitation).

Permanent Press

Use for permanent press items and synthetics. The wash time selection will depend upon the type of fabric and amount of soil.

There are two settings in the Permanent Press cycle - normal and light. The number shown next to these settings is the length of agitation in minutes. (For example: setting the timer on Normal will be a nine-minute agitation).

The PERMANENT PRESS cycle automatically cools the temperature of the fibers before the spin. After wash the agitation stops, the washtub spins slowly, partially drains and then stops. Cold water will then be automatically added to the washtub until the proper water level is reached. This happens one or two times, depending on the size of the load and type of drain connection. When the COOL DOWN is complete, the washer will pause for approximately one minute before continuing the cycle.

To Wash Clothes

IMPORTANT: Before using your new washer, make sure the washer cord is plugged into a 120 Volt electrical outlet that has the proper grounding and polarity. Make sure the washer hoses are connected to the hot and cold water faucets, and that the faucets are turned on. Be sure the drain hose is not kinked and is inserted into a drain. See the **INSTALLATION INSTRUCTIONS** for details of proper washer installation.

IMPORTANT: Before using the washer for the first time, wipe out the inside of the washtub with a sudsy cloth.


1. Get the clothes ready for washing. Empty pockets and cuffs. Sort items into separate loads. Pretreat stains and heavily soiled areas.
2. Measure and add detergent to the washtub.
3. Add clothes loosely into the washtub. The bulk of the clothes rather than the weight will determine load size.
4. Close the loading door. The washer will not agitate or spin with the loading door open.

▲ WARNING

To reduce the risk of serious injury, **DO NOT** by-pass the loading door switch by permitting the washer to agitate or spin with the loading door open.

5. Set WASH/RINSE temperatures.

WASH/RINSE TEMP

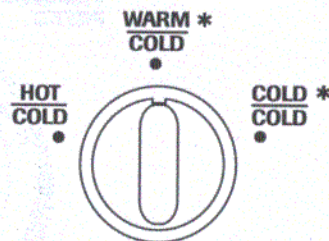

*ENERGY SAVER

CPW40-IN-1

