



Speed Queen

Use and Care Guide Home Laundry Automatic Washer



Model:
AWM190W2

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. (If the washer changes ownership, be sure this manual accompanies the washer.)

How To Use Your Washer . . .

Operation Instructions

▲ WARNING

To reduce the risk of fire, electric shock, serious injury or death, read the **IMPORTANT SAFETY INSTRUCTIONS, Pages 2 and 3, before operating the washer.**

Determine Proper Cycle

Regular

Use for sturdy items, like play or work clothes, towels, T-shirts, etc. The wash time selection will depend on the type of fabric and the amount of soil. For the best results when cleaning heavily soiled items, use a longer wash time (15 minutes maximum). Lightly soiled items require less wash time.

There are two settings in the Regular cycle — normal and light. The number shown next to these settings is the length of agitation in minutes. (For example: setting the timer on Normal will be a nine minute agitation).

Short Wash

Use for permanent press items and synthetics. The wash time selection will depend upon the type of fabric and amount of soil.

There are two settings in the short wash cycle — normal and light. The number shown next to these settings is the length of agitation in minutes. (For example: setting the timer on Normal will be a nine minute agitation).

The **SHORT WASH** cycle automatically cools the temperature of the fibers before the spin. After wash the agitation stops, the washtub spins slowly, partially drains and then stops. Cold water will then be automatically added to the washtub until the proper water level is reached. This happens one or two times, depending on the size of the load and type of drain connection. When the **COOL DOWN** is complete, the washer will pause for approximately one minute before continuing the cycle.

To Wash Clothes

IMPORTANT: Before using your new washer, make sure the washer cord is plugged into a 120 Volt electrical outlet that has the proper grounding and polarity. Make sure the washer hoses are connected to the hot and cold water faucets, and that the faucets are turned on. Be sure the drain hose is not kinked and is inserted into a drain. See the **INSTALLATION INSTRUCTIONS** for details of proper washer installation.


IMPORTANT: Before using the washer for the first time, wipe out the inside of the washtub with a sudsy cloth.

1. Get the clothes ready for washing. Empty pockets and cuffs. Sort items into separate loads. Pretreat stains and heavily soiled areas.
2. Measure and add detergent to the washtub.
3. Add clothes loosely into the washtub. The bulk of the clothes rather than the weight will determine load size.
4. Close the loading door. The washer will not agitate or spin with the loading door open.

▲ WARNING

To reduce the risk of serious injury, **DO NOT** by-pass the loading door switch and permit the washer to agitate or spin with the loading door open. **Do not use the washer if it does not stop when loading door is open or starts without pulling the timer knob out.**

- Select the cycle. Push the timer knob in and turn clockwise to the desired cycle and wash time.

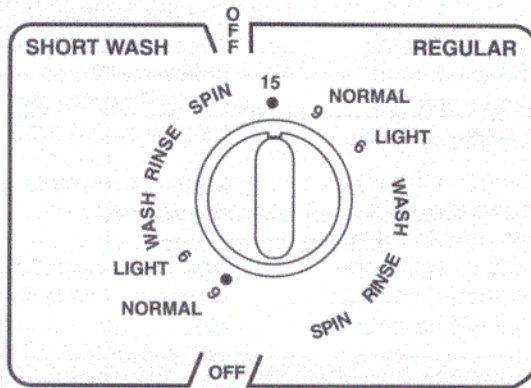

CPW49-1K-1

- Pull the timer knob out to start the water fill. Agitation will begin when the water reaches the proper level.

The washer will stop (pause) for approximately two minutes before the wash and rinse spins. Do not turn the timer through these pauses. They are part of the cycle.

Timer

Although the washer cycles are automatic, the timer may be reset to lengthen, shorten, or repeat a portion of a cycle.

To set or reset the timer, push timer knob in to stop the washer. Hold timer knob in firmly while turning it clockwise to the setting desired. Pull timer knob out to start the washer.

Soaking

Set the timer knob in the center of the word "RINSE" or the washer may spin without first filling with water. Place the soaking product and clothes load in the washtub. Pull timer knob out to start water fill. After fill is completed and agitation has started, push the timer knob in. This will stop the washer. When the clothes have soaked the desired length of time, TURN THE TIMER KNOB TO THE START OF THE LAST SPIN, then pull the timer out to start the spin.

Cold Soak

Set the timer to the beginning of the regular rinse cycle. Pull timer knob out to start water fill. After this is completed and agitation has started, push the timer knob in. This will stop the washer. When the clothes have soaked the desired length of time, TURN THE TIMER KNOB TO THE START OF THE LAST SPIN, then pull the timer knob out to start the spin.

Warm Soak

Set timer knob to the beginning of the regular cycle. Pull timer knob out to start water fill. After fill is completed and agitation has started, push the timer knob in. This will stop the washer. When the clothes have soaked the desired length of time, TURN THE TIMER KNOB TO THE START OF THE LAST SPIN, then pull the timer knob out to start the spin.

Fabric Softener

Add most fabric softener to the rinse water only, with no other laundry product. Most liquid fabric softeners must be diluted before they are added to the washtub. If not diluted, some fabric softeners will stain items. See label instructions before using.