


Models LA7800XK;
LA7805XK
Super Capacity

Whirlpool AUTOMATIC WASHER

Use & Care Guide

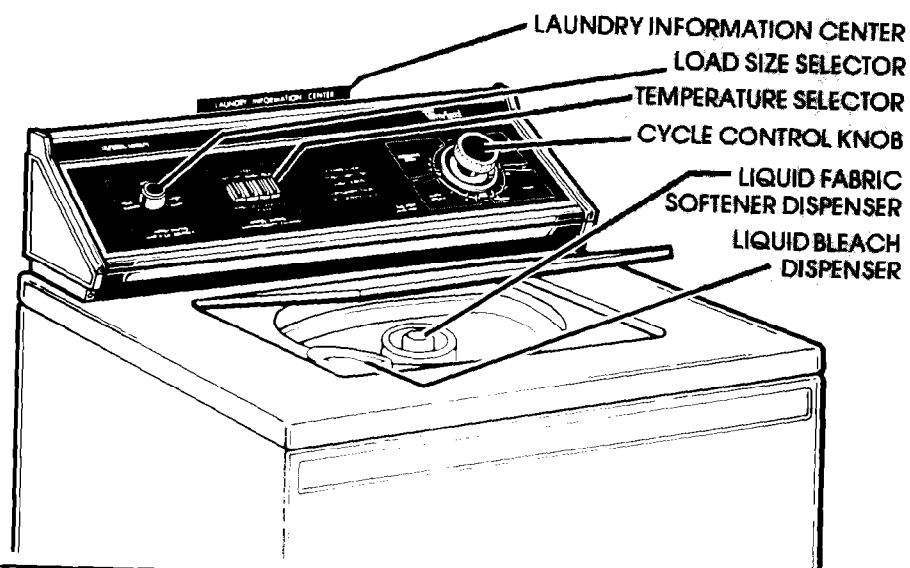

Copy Your Model and Serial Numbers Here

When you need service, or call with a question, have this information ready:

1. **Complete** Model and Serial Numbers (from the plate under the lid near the hinge).
2. Purchase date from sales slip (or date installed).

Copy this information in these spaces. Keep this book in the Laundry Information Center with your *Laundry Guide*, sales slip and warranty.

Model Number

Serial Number

Purchase/Installation Date

Service Company and Phone Number

Before using your Washer

Please read this booklet to be sure your washer is installed and used properly. It will help you get the best results and longest life your washer was designed to give.

You are personally responsible for making sure that your washer...

- Is installed by a qualified installer.
- Is properly installed and leveled on a floor that can support the weight.*
- Is connected to the right kind of outlet, electric supply, water supply and drain.*
- Is properly electrically grounded.*
- Is used only for jobs normally expected of home automatic washers.
- Is properly maintained.
- Is protected from the weather.
- Is not run by children or anyone unable to operate it properly.

Remove the Consumer Buy Guide label. It will be easier to remove before the washer is used.

You may want to wipe out the basket with a damp cloth before using to remove dust from storing or shipping.

SPECIAL INSTRUCTIONS: See the Laundry Guide for tips on detergents, other laundry aids and instructions for washing special items.

*See the Installation Instructions for complete information.

SAFETY FIRST

Do not permit children to operate or play with the washer.

CAUTION: Store laundry detergent and additives in a cool, dry place where children can't reach them.

SPINNING SAFETY

If the lid is opened while the basket is spinning, the basket will automatically stop in a few seconds. **DO NOT ADD OR REMOVE ITEMS UNTIL THE BASKET STOPS COMPLETELY.**

SPECIAL CAUTION

Flammable gases may build up in hot water pipes and heater. This can happen when hot water hasn't been used for a while (usually two weeks or more).

To prevent injury or damage, allow any gases to escape by running hot water from the faucet nearest the washer for several minutes. Don't smoke near the faucet while it is open, and turn off any open flame.

Contents

Before Using Your Washer	2
Loading Your Washer	3
Understanding Your Washer	3
Using Your Washer	4
Water Levels and Load Sizes	5
Using the Dispensers	6
Liquid Bleach Dispenser	6
Liquid Fabric Softener Dispenser ..	6
MAGIC-CLEAN® Lint Filter	6
Important Detergent Information	7
Cycle Operation	8
PERMANENT PRESS	8
KNITS GENTLE	8
REGULAR HEAVY	8
SUPER WASH	10
SOAK CYCLE	10
PRE-WASH	10
For Spinning Only	12
For Rinsing Only	12
Using the SUDS-MISER® System	13
If You Need Service or Help	14
1. Before Calling for Service	14
2. If You Need Service	15
3. If You Have a Problem	15

Loading your Washer



For best washing results and energy savings, sort the laundry carefully.

1. Sort the Laundry into Loads.

- Group the laundry into loads that can be washed and dried together. See the Laundry Guide for information and samples of typical loads.
- Try to mix large and small items for best movement in the washer.

2. Measure Detergent; Add to Washer Basket.

- See detergent information on page 7 and in Section IV of the Laundry Guide.
- Add dry bleach or water conditioner (not fabric softener) if used. Follow the package directions carefully.

3. Load the Washer.

- Spread the load evenly. (Don't put all the towels on one side and a few wash cloths on the other.) An unbalanced load can cause the washer to shake during spinning.
- Load without packing so items can move freely for best cleaning and least wrinkling.

4. Pour Liquid Bleach into the Dispenser.

- See page 6 and the "Laundry Aids" section of the Laundry Guide for more information.

5. Add Diluted Fabric Softener to the Dispenser.

- **DO NOT ADD FABRIC SOFTENER TO THE WASH.** Fabric softeners can combine with soap or detergent to make greasy stains on fabrics.

Understanding your Washer

This automatic washer has cycle settings with different agitation and spin speeds for different fabric types. For example, the REGULAR HEAVY Cycle has high agitation and high spin speeds. The PERMANENT PRESS Cycle, has high agitation speeds, but low spin speeds.


The washer has a **LOAD SIZE SELECTOR** that lets you adjust the water level to match the size of the load.

It has a **TEMPERATURE SELECTOR**. You can select the wash and rinse water temperatures best for the amount of soil and fabric type in each load.

Sections in this *Use & Care Guide* go into detail on the "what and why" of each setting. Read this and the *Laundry Guide* carefully to get the best cleaning results.

Using your Washer

IMPERIAL SEVENTY

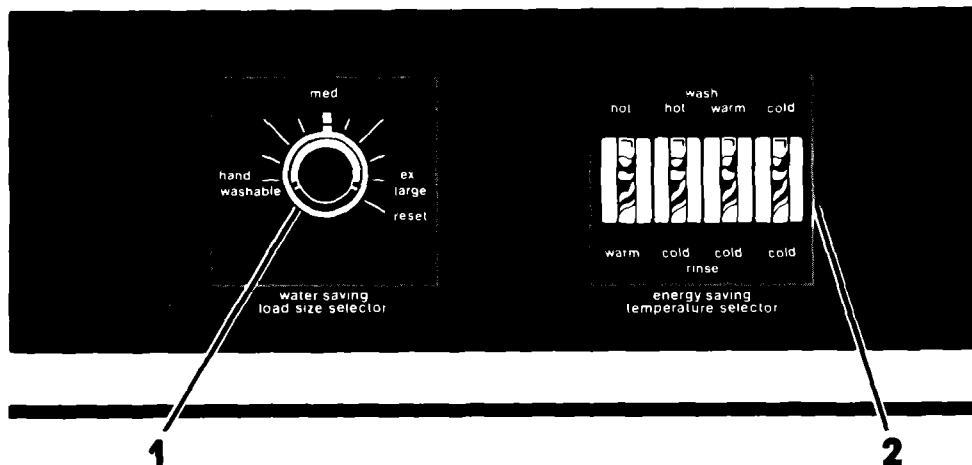

Your automatic washer is easy to use. To make it even easier, read the following steps before starting your first load.

Start your washer after you put in detergent, the load, and any other laundry aids according to information on page 3 and page 6.

1. Set the LOAD SIZE SELECTOR.

- Select the water level that matches the size of the load. See page 5 for more information.
- To change the setting on the **LOAD SIZE SELECTOR**, first move it to **RESET**. Then move it back to the setting you want.

IMPORTANT: For the best cleaning results with the least wrinkling, make sure the load has enough water for items to move freely.

2. Set the TEMPERATURE SELECTOR.

- Match the wash and rinse water temperatures to the type of fabrics and soils being washed. (See the instructions under the washer lid and on page 14 in your *Laundry Guide*.)
- Be sure to use a cold rinse for **PERMANENT PRESS** and **KNITS GENTLE** Cycles.

Cold water rinses save energy and help prevent wrinkles from setting into fabrics.

3. Select a Cycle and Start the Washer.

- Push the Cycle Control Knob in and turn it to the right (clockwise).
- Stop when the pointer is on the *number of minutes* of washing you want in the cycle you want.
- Instructions for which cycles to use for which fabrics are under the lid.
- To start the washer, pull the Cycle Control Knob out. When the cycle is over, the washer will stop.
- **To stop the washer at any time during a cycle, push the Control Knob in.** Pull it out to restart the washer.
- **To change a setting,** push the Control Knob in to stop the washer. Then turn the Control Knob to the right (clockwise) to the setting you want. Pull the knob out to start the washer.
- Pages 8–11 show what happens in each cycle.



Be sure to read pages 11 - 13 in your *Laundry Guide*. You will find more information on loading and load sizes.

IMPORTANT:

- The **HANDWASHABLE** setting is designed for very small loads. It uses very little water. Too big a load in this amount of water may tear some items.
- Water may splash if you use very low water levels with the **REG/HEAVY** Cycle. If this happens, move the **LOAD SIZE SELECTOR** to **RESET**. Then move it to a higher setting.

Setting	Gallons/Liters*
HANDWASHABLE	7.8/29.5
MEDIUM	13.9/52.6
EXTRA LARGE	20.5/77.6

* Approximate fill with load.

For the best cleaning results, the load should move freely in the water. Watch for rollover. An item (like a sock) should sink in the middle and come up later on the outside.

Using the Dispensers


You may want to use liquid bleach and fabric softener in some loads. Your washer has dispensers designed to automatically add these liquid laundry aids at the correct time.

Follow the product package recommendations carefully. Use the dispensers for best results.

Liquid Bleach Dispenser

The bleach dispenser is under the lid of the washer in the front corner. It has the words, LIQUID BLEACH, on it. The dispenser will hold enough liquid bleach for one wash load.

- Before starting the washer, but after loading it, add the bleach.
- Use a measuring cup with a pouring spout to help avoid spilling or spattering the bleach.
- Follow the directions on the bottle for the amount to use. **Never use more than 1 cup (250 mL) for a full load. Use less with lower water level settings.**

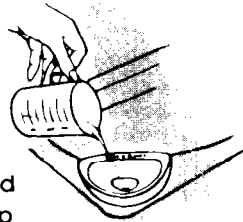


Use a standard measuring cup with a pouring spout to fill dispensers

- **Do not let any bleach run down into the washer basket. Concentrated bleach will damage any fabric.**

Liquid Fabric Softener Dispenser

The dispenser for liquid fabric softener fits over the top of the agitator. The dispenser will hold enough **diluted** fabric softener for one deep rinse.

- After adding the detergent and the load, fit the dispenser over the top of the agitator cap.

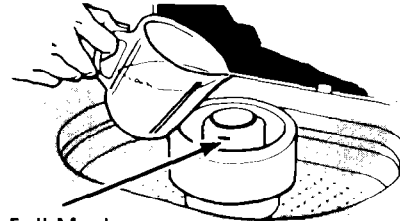

Full Mark

- Following directions on the bottle, add the correct amount of fabric softener. Use a cup with a pouring spout to avoid dripping any on the load.
- **IMPORTANT: Add enough hot or warm water to fill the dispenser to the FULL mark.**
- Diluted fabric softener will be added just before the washer starts filling for the rinse. **NOTE:** Do not stop the washer **during** the first spin (when the wash water is spinning out). If you do, the fabric softener will be added to the wet, soapy load. This can cause stains.
- Clean the dispenser after each use with warm **water only**. Detergent can make softeners sticky and lumpy.

MAGIC CLEAN® Lint Filter

The lint filter is self-cleaning. It filters water used in both the wash and the rinse. When the washer drains, lint collected is flushed away.

If your washer drains into a tub, watch the drain strainer for the lint. A linty load can plug the tub drain and cause an overflow.

Important Detergent Information

Detergents and soaps clean by loosening soil, and by holding it in the water so it drains away. If not enough detergent is used, soil and lint can settle back on the items in the load.

SOAP works best in *soft water* (0-4 grains hardness). In harder water, both the wash and rinse water should be softened. Use enough soap to make about 1½ to 2 inches (3.8 to 5.5 cm) of suds.

DETERGENT works in *hard or soft water*. Package directions are usually based on soft water and washers with normal-size tubs. **Use more detergent...**

1. for hard water.

2. for loads and water levels larger than MEDIUM.
3. for heavy greasy or oily soils.
4. if the detergent is low phosphate.
5. for cold-water washes.

DETERGENT SUDS. There are high, normal and low sudsing powdered detergents. If the recommended amount of detergent makes too much suds, switch to a lower sudsing brand. **DO NOT REDUCE THE AMOUNT** of detergent.

Use the following chart as beginning suggestions for powdered and liquid detergent amounts. **See your Laundry Guide** for more information (pages 14-22).

RECOMMENDED AMOUNT OF DETERGENT * – FULL TUB

	WATER HARDNESS IN GRAINS		
	0-4 Grains	4-10 Grains	10-20 Grains
Powdered Detergents			
Low Suds	1¼ cups (300 mL)	1½ cups (350 mL)	1¾-2 cups (425-475 mL)
Normal Suds	1¾ cups (425 mL)	2½ cups (600 mL)	3 cups (700 mL)
High Suds	2 cups (475 mL)	3 cups (700 mL)	3½ cups (825 mL)
No phosphate	– Follow package recommendations –		
Liquid Detergents	⅓ to 1⅓ cups (80 to 325 mL), depending on the brand and amount of soil. Follow package recommendations.		

* These recommendations do not apply...


- In areas where phosphates are banned.
- In areas with laws limiting (by weight or percentage) the amount of detergent used in a wash load.

Cycle Operation

Your washer has six cycles on the Cycle Control Dial. Each cycle is designed to match the fabric type with pre-set agitation and spin speeds.

The numbers in each cycle are for the number of minutes you want the washer to agitate before it drains and fills for the rinse. You will want longer agitation times for heavily soiled loads. You choose the wash and rinse



WHAT HAPPENS IN EACH CYCLE:

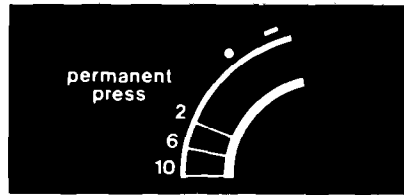

- SET LOAD SIZE
- SET WATER TEMPERATURES
- PUSH IN KNOB, TURN TO CYCLE AND TIME
- PULL OUT TO START

PERMANENT PRESS CYCLE



Use for permanent press fabrics. Cooling of the wash water and low spin speeds help prevent the setting of wrinkles.

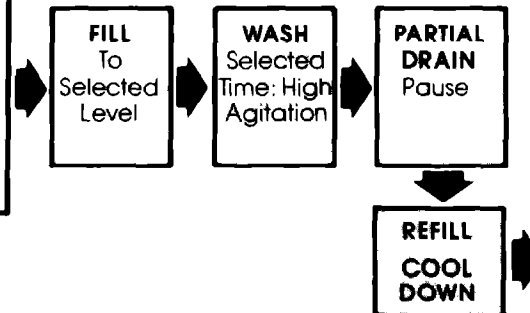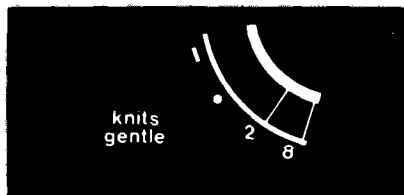- SET LOAD SIZE
- SET WATER TEMPERATURES
- PUSH IN KNOB, TURN TO CYCLE AND TIME
- PULL OUT TO START

KNITS GENTLE CYCLE


Use for delicate items and washable synthetic knits such as polyester, nylon, acrylic. Wash nylon hose or panty hose in a net laundry bag.

- SET LOAD SIZE
- SET WATER TEMPERATURES
- PUSH IN KNOB, TURN TO CYCLE AND TIME
- PULL OUT TO START

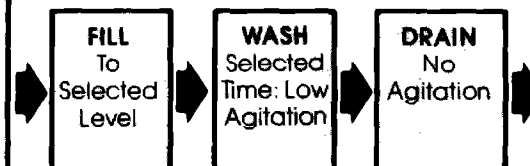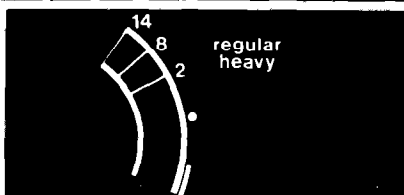REGULAR HEAVY CYCLE

Use for sturdy white and colorfast cottons, and for heavy work clothes. High agitation and spin speeds are pre-set for best cleaning results.

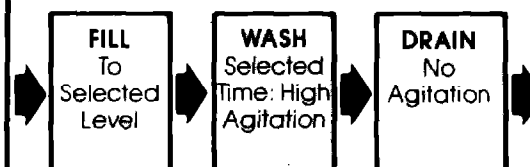

water temperatures you want with the **TEMPERATURE SELECTOR**.



You set the amount of water that fills the tub with the **LOAD SIZE SELECTOR**.

NOTE: You may notice that some of the "SPIN" cycles have **SPRAY**


RINSES. Cold water is sprayed on the spinning load to help rinse and remove detergent residue.


If you turn to a cycle and start the washer, but change your mind, push in on the Cycle Control Knob and turn to the right (clockwise) to the setting you want. Then pull out to start.

CYCLE OPERATION

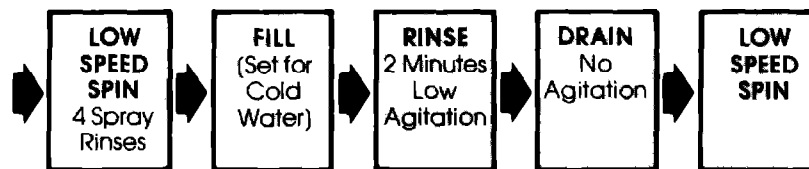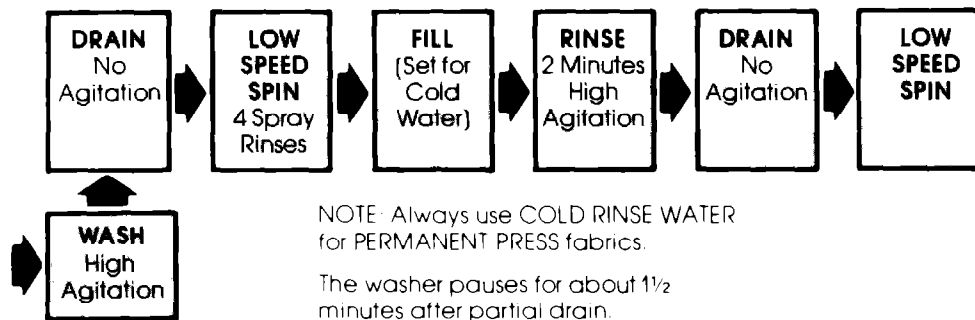



NOTE: Always use COLD RINSE WATER for Knits and Delicate items.

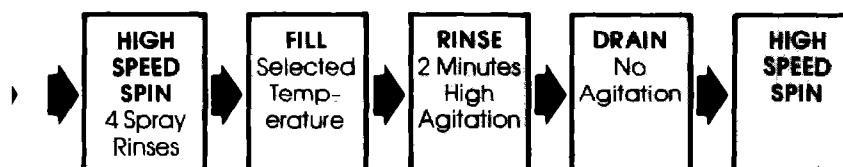

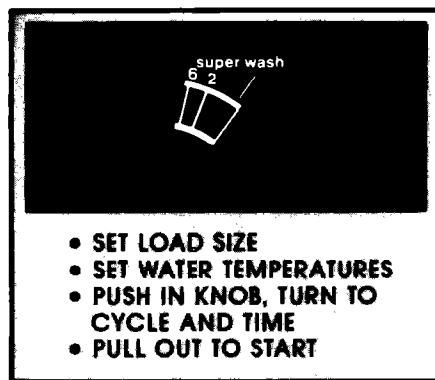



SUPER WASH CYCLE

Use as a double wash for heavily soiled loads. Use enough detergent for two washes (SUPER WASH and REGULAR HEAVY).

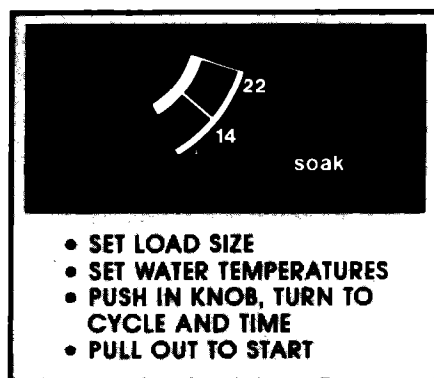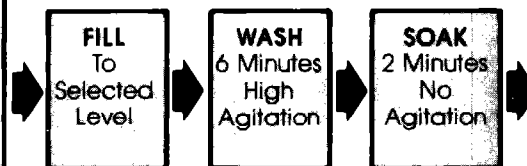


SOAK CYCLE

This cycle is not for washing; it soaks, agitates, spins out the water and stops (no rinse). Use it for stained, yellowed, grey or heavily soiled laundry with a detergent or pre-soak product. Chlorine bleach,* if wanted, should be added to the cycle you use after the SOAK Cycle is over.

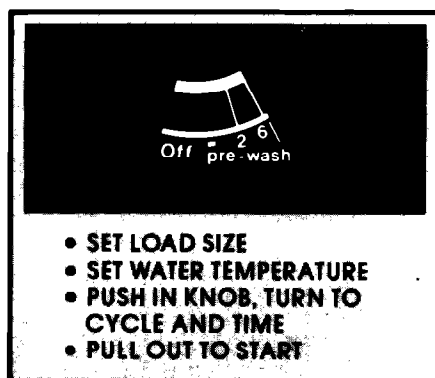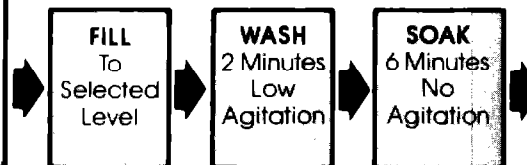


PRE-WASH CYCLE

Use for heavily soiled items that may need two washes. Use enough detergent for a single wash. When the washer stops, add more detergent and select a cycle.*

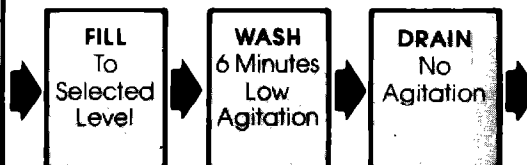


* Dissolve enzyme pre-soak and detergent powders to help prevent spot fading on colored items. If you use chlorine bleach, it **MUST** be diluted with a quart of warm water and added after the washer fills. Do not use bleach dispenser. See *Laundry Guide* for more information.

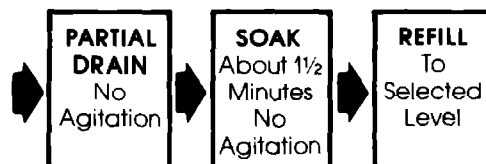


The washer will go on with the REGULAR HEAVY Cycle. If you want a different cycle to follow SUPER WASH, push in the Cycle Control Knob, turn to the cycle and time you want, pull it out.

* Dissolve enzyme pre-soak and detergent powders to help prevent spot fading on colored items. If you use chlorine bleach, it **MUST** be diluted with a quart of warm water and added after the washer fills. Do not use bleach dispenser. See *Laundry Guide* for more information.

Before adding detergent for washing, dissolve in quart of warm water (or use liquid detergent).

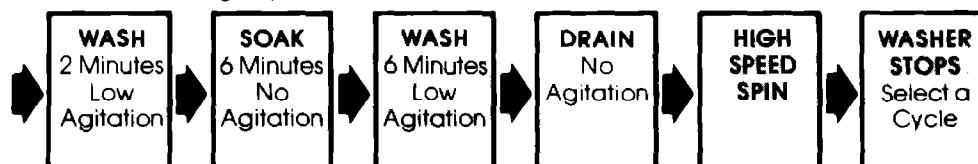


* Dissolve enzyme pre-soak and detergent powders to help prevent spot fading on colored items. If you use chlorine bleach, it **MUST** be diluted with a quart of warm water and added after the washer fills. Do not use bleach dispenser. See *Laundry Guide* for more information.

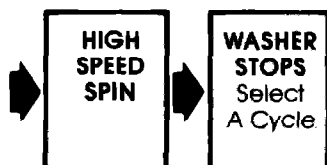

Some stains may need a warm or cold PRE-WASH to help prevent setting.

For Spinning Only

There may be times when you want to drain out all the wash water and start over. To stop the washer at any time, just push in on the Cycle Control Knob.

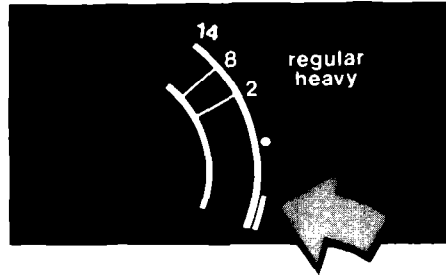

To set the washer so it drains and spins water out of the load, push in on the Control Knob, turn the dial to the right (clockwise) so the pointer is touching the bar just before OFF in any cycle.


The washer will drain, spin out water and stop. If you want a low-speed spin, use the bar on PERMANENT PRESS or KNITS GENTLE. All the other cycle settings have a high-speed spin.



For Rinsing Only

Loads with towels, diapers, jeans or heavily soiled items often need extra detergent. Extra detergent can require an extra rinse.

Your washer can be set to rinse only. Use the setting for an extra rinse, or for laundry that only needs a rinse and spin.

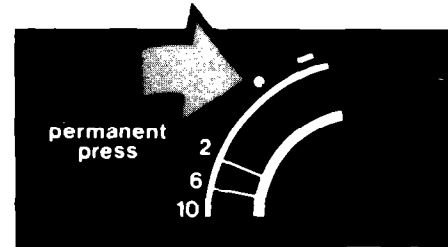

There is a dot just after the numbers in PERMANENT PRESS, REGULAR HEAVY and KNITS GENTLE. If you push in on the Cycle Control Knob, turn the pointer to one of those dots and pull the Control Knob out, the washer will fill, agitate drain and spin.

If you want high agitation and a high-speed spin, use the dot in REGULAR HEAVY. If you want low agitation and a low-speed spin, use the dot in KNITS GENTLE. Use the dot in PERMANENT PRESS if you want high agitation and a low-speed spin.

Using the Suds-Miser® System

If your washer has the SUDS-MISER® System, it has two drain hoses. One hose drains wash water into the storage tub; the other carries rinse water to the drain.

The storage tub should hold at least 20 gallons (76 liters). If you do not want to re-use wash water, leave the stopper out of the storage tub so the water drains away.

The basket in your super capacity washer holds more than 20 gallons (74 liters) when the **LOAD SIZE SELECTOR** is set on EX LARGE. Because so many storage tubs hold only 20 gallons, your washer is designed to save most of the wash water and pump the rest down the drain.

If you have a storage tub big enough to hold about 25 gallons (95 liters), you can have a qualified installer convert your washer to save all the wash water.

To Save Wash Water

Be sure the stopper is in the storage tub. The SUDS-MISER system does not save wash water from the PERMANENT PRESS Cycle.

In the PERMANENT PRESS Cycle, part of the wash water is drained away (with part of the detergent). Then the washer fills again with cold water. This helps keep permanent press fabrics from wrinkling during the spin.

To Re-Use Wash Water

To pump the used wash water back into the washer, push in the Cycle Control Knob. Turn it to the right (clockwise) so it points to **SUDS** just before the time numbers in the SUPER WASH Cycle.

Pull the Control Knob out. The washer will start pumping the used water into the basket. About an inch of water will stay in the storage tub. This water will contain most of the soil that settles out.

When the washer is finished pumping, fresh water will finish filling the basket to the selected level.

When the washer stops filling, push the Cycle Control Knob in. Add about half the recommended amount of detergent. (See page 7.)


Add the load of laundry; pull the Cycle Control Knob out.

IMPORTANT: The SUPER WASH and REGULAR HEAVY Cycles follow **SUDS**. If you don't want to start with SUPER WASH, push the Cycle Control Knob in, turn it to another cycle and pull it out to start the washer.

If You Need Service or Help, We suggest You Follow These Three Steps:


1. Before calling for service* ...

Problems are sometimes caused by little things you can correct without tools. Check this list before you call for service:

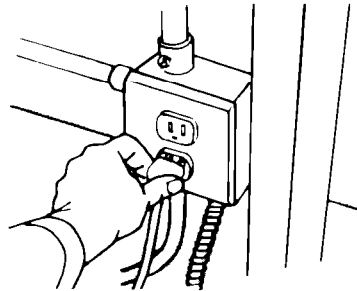

IF YOUR WASHER DOES NOT FILL:

- Is the power supply cord plugged in?
- Are both water faucets open?

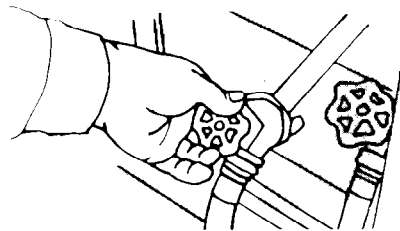

- Is a fuse blown or circuit-breaker tripped?
- Are the water supply hoses kinked?
- Is the Cycle Control Knob set and pulled out?

IF YOUR WASHER DOES NOT SPIN:

- Is the lid closed?
- Is the power supply cord plugged in?
- Is a fuse blown or circuit-breaker tripped?

IF WASHER FILLS AND DRAINS WITHOUT RUNNING:

- Make sure that the Cycle Control Knob is pointing to a number in the cycle.


IF YOUR WASHER STOPS DURING THE PERMANENT PRESS CYCLE:

- Remember, the washer will stop for about 1½ minutes after the partial drain during the cool-down period in this cycle.

MAKE SURE THE DRAIN HOSE IS HIGHER THAN THE WATER LEVEL IN THE WASHER. IF IT ISN'T...

- The washer may seem to be draining during wash and rinse cycles.
- Water can siphon out. (See Installation Instructions.)

2. If you need service :

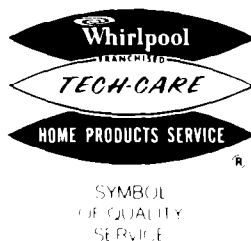

If your WHIRLPOOL® appliance ever needs service anywhere in the United States, help is just a phone call away... to your nearest Whirlpool franchised TECH-CARE® service representative.

Whirlpool maintains a nationwide network of franchised TECH-CARE service companies to fulfill your warranty and provide after-warranty service and maintenance to keep your WHIRLPOOL appliance in peak condition.

You'll find your nearest TECH-CARE service company listed in your local telephone book Yellow Pages under APPLIANCES — HOUSEHOLD — MAJOR SERVICE & REPAIR. **Should you not find a listing, dial free, the Whirlpool COOL-LINE® service assistance telephone number.**

When calling from:

Michigan (800) 632-2243
Alaska &
Hawaii (800) 253-1121
All other
states (800) 253-1301

If you move... To make sure that your appliance is correctly installed and to insure its continued satisfactory operation, please telephone your nearest TECH-CARE® service company for installation or to get the name of a qualified installer. (Installation cost will, of course, be paid by you.)

Helpful hints... You can help your TECH-CARE service representative give you faster service if you include the model and serial number of your appliance when requesting service. Also, retain your sales slip and warranty to verify your warranty status.

Remember... Your TECH-CARE service representative is specially trained in the expert repairing and servicing of your WHIRLPOOL appliances. He can help you maintain the quality originally built into your WHIRLPOOL appliance. So why not take the time, now, to look up his telephone number and jot it down in the space provided on the cover.

3. If you have a problem* :

Call Whirlpool Corporation in Benton Harbor at the COOL-LINE service assistance telephone number (see Step 2) or write:

Mr. Guy Turner, Vice President
Whirlpool Corporation
Administrative Center
2000 U.S. 33 North
Benton Harbor, Michigan 49022

*If you must call or write, please provide: your name, address, telephone number, type of appliance, brand, model, serial number, date of purchase, the dealer's name, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.



FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts

will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.



Benton Harbor, Michigan. Automatic Washers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-in Ovens and Surface Units, Ranges, Microwave Ovens, Compactors, Room Air Conditioners, Dehumidifiers, Central Heating and Air Conditioning Systems.

Quality. Our way of life.