

Amana

A **Raytheon** Company


USE AND CARE GUIDE

Home Laundry Automatic Dryer

MANUEL D'EMPLOI E

D'ENTRETIEN

Mode d'emploi

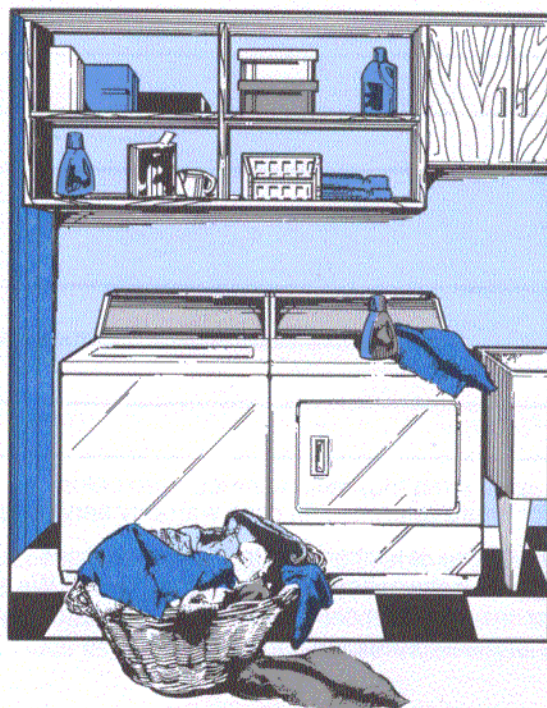

Models:

(Electric Heat)	(Gas Heat)
CE4307	CG8409
CE8407	
CE8507	
CE8427	

Modèles:

(Sécheuses électriques)	(Sécheuses
CE4307	CG840
CE8407	
CE8507	
CE8427	

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. (If the dryer changes ownership, be sure this manual accompanies the dryer.)

CONSERVER CES INSTRUCTIONS. le cas d'un changement de propriétaire s'assurer que ce mode d'emploi accompagne la sécheuse.)

Part No. 500688R2
Amana Part No. 103
Pièce n° 500688R2
Amana n° 10380138

2/94

How To Use Your Dryer . . .

Determine Proper Cycle

Automatic Cycles

The timer knob will not advance with the same regularity in the AUTOMATIC cycle as it does in the TIME cycle.

For example, you may notice the timer knob remains in the same position for 15 minutes before it begins to move. THE TIMER IS NOT MALFUNCTIONING. This only means it took 15 minutes for the load to become dry enough to start advancing the timer knob. The length of time it takes for the timer knob to begin advancing depends on the type and size of load being dried.

Automatic Permanent Press/ Knits

Use this setting for permanent press, polyester knits, heavy and medium weight synthetics that are "no iron".

The COOL TUMBLE portion of this cycle is a cool-down (no heat) period. The end of cycle signal (if selected) will buzz for approximately five minutes after the first seven minutes of tumbling with no heat. If the clothes are not removed at this time, the dryer will continue to tumble with no heat for approximately 12 minutes. During this time the signal will intermittently buzz for approximately 30 seconds until the end of the cycle, or for a total cool-down period of 25 minutes.

Check garment care labels for proper dryer setting. At first, set indicator toward center of drying zone. You may find you will get better results for your loads by setting the indicator to either side. Turn timer knob to a lower setting (clockwise) for less drying, or to a higher setting for more drying.

IMPORTANT: The heat on the DELICATE setting is not sufficient to remove wrinkles from permanent press.

Remove load immediately upon completing cycle. This reduces wrinkling.

AUTOMATIC PERMANENT PRESS/KNITS CYCLE

Load Type	Fabric Selector Setting
Permanent Press Polyester Knits Heavy and Medium Weight Synthetics	Normal/ Permanent Press
Lightweight, Delicates, Sheers and those labeled "Dry With Low Heat"	Delicate

Automatic Regular

This cycle is designed to dry large and average size loads of similar weight fabrics. Uniformity of fabrics is important to ensure that all items will dry in the same length of time. When properly set for the load, the dryer will determine the exact length of drying time based on temperature and moisture, shut the heat off when the clothes are dry and tumble for approximately five minutes with no heat before stopping at the OFF position.

Automatic Delicate

For medium and lightweight fabrics (not permanent press) and delicate items. Use this cycle for sheer and very lightweight cottons and those items labeled "Dry With Low Heat."

Cool-Down Periods

These cycles have a seven minute cool-down period at the end of the cycle. During that time, the load is tumbled with no heat. This helps reduce wrinkling. Setting the timer knob in a COOL-DOWN position will result in the load being tumbled with no heat. Do not remove load until COOL-DOWN period is complete and dryer stops.

Suggested Dryer Settings AUTOMATIC REGULAR/DELICATE Cycle

Load Type	Cycle (Timer Setting)	Fabric Selector Setting
Heavy Cottons Rugs Denim Corduroys	Less Dry	Normal
Cotton Work Clothes Cotton Knits	Delicate	Normal
Dresses Dress Shirts	Less Dry	Normal
Sheer Lightweight Cottons. Items Labeled "Dry With Low Heat"	Delicate	Delicate

Drying Tips

Suggested dryer settings based on load sizes.

Load Size	Automatic Cycle Setting
Small Medium Large	Less Dry Less Dry Between Delicate and Cool-Down

Time Dry Cycle

This cycle will operate the dryer for the number of minutes for which it is set (up to 80). Use for any load desired. Use for items you might want to remove while still damp. Set Fabric Selector knob to desired setting.

Turn the timer knob for the number of minutes required for drying. This cycle has a seven minute cool-down (no heat) period. The dryer will not heat if set for five minutes or less.

Suggested Dryer Settings TIME DRY cycle

Load Type	Minutes (Approximate)	Fabric Selector Setting
Cottons Heavyweight/ Average Load	40 - 60	Normal
Lightweight/ Average Load	20 - 40	Normal
Sheer and Delicates	20 - 30	Delicate
No Heat	20 - 30	Fluff
Pillows	20 - 30	Fluff

The times suggested are approximate. Your loads, installation, and drying requirements will determine the setting you should use.

The time dry cycle can be used as a Fluff Cycle by turning the Fabric Selector switch to FLUFF (no heat). Use it to dry items labeled "Dry With No Heat."

NO HEAT Cycle (Not on all models)

This is a no-heat cycle that tumbles and circulates room temperature air through the load for 15 minutes. Use for fluffing shag rugs, bedspreads, pillows, blankets, mattress pads and other heat sensitive items that should not be dried with heat.

The times suggested are approximate. Your loads, installation and drying requirements will determine the setting you should use.

Operation Instructions for Model CE4307

▲ WARNING

To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS**, Pages 3-5, before operating the dryer.


To Dry Clothes

IMPORTANT: Please read instructions before using dryer. Before using dryer for the first time, wash out the inside of the dryer cylinder with a sudsy cloth, then wipe dry. Install the dryer according to the **INSTALLATION INSTRUCTIONS**. **KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

1. **CLEAN LINT FILTER** after each use.
2. **LOAD DRYER.** Open dryer door. Shake out laundry and place in dryer.
3. **CLOSE DOOR.** Dryer will not operate with the door open.

▲ WARNING

To reduce the risk of serious injury, the dryer will stop tumbling when the door is opened. Do not use the dryer if it does not stop tumbling when the door is opened or start tumbling without turning the **START** mechanism. Remove the dryer from use and call the serviceman.

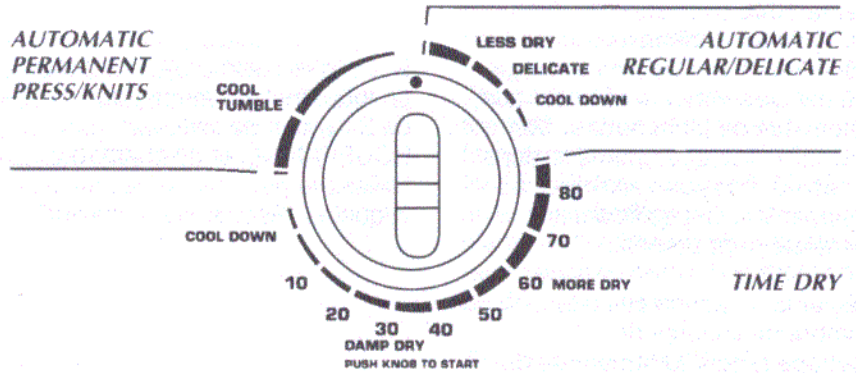


4. **SELECT TIMER SETTING** in cycle desired: **AUTOMATIC PERMANENT PRESS/KNITS**, **AUTOMATIC REGULAR/DELICATE**, or **TIME DRY**. These cycles control the drying time.
6. **START DRYER.** Push the timer knob in.
7. **TO STOP DRYER AT ANY TIME**, open door or turn timer knob to an **OFF** position.

5. **TURN FABRIC SELECTOR** knob to desired setting: **DELICATE**, **FLUFF** or **NORMAL/PERMANENT PRESS**. The **FABRIC SELECTOR** controls the drying temperature.

TO RESTART DRYER, close door, reset timer if necessary, and push the timer knob in. Your dryer is designed so that it will not operate if the door is open.

Set **FABRIC SELECTOR** temperature switch at: **NORMAL/PERMANENT PRESS** for cotton permanent press, wash and wear, knits of man-made fibers such as polyester and heavy weight "synthetics". **DELICATE** for sheer fabrics such as curtains, lingerie and blouses, and for heat sensitive rugs. **FLUFF** (no heat) for items that **should not** be dried with heat. Use for fluffing shag rugs, bedspreads, pillows, blankets and other heat sensitive items.

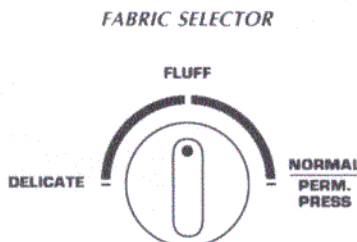

Operation Instructions For Models CE8407, CG8409 and CE8427

▲WARNING

To reduce the risk of fire, electric shock, serious injury or death, to persons, read the **IMPORTANT SAFETY INSTRUCTIONS**, Pages 2 and 3, before operating the dryer.

To Dry Clothes

IMPORTANT: Please read instructions before using dryer. Before using dryer for the first time, wash out the inside of the dryer cylinder with a sudsy cloth, then wipe dry. Install the dryer according to the **INSTALLATION INSTRUCTIONS**. **KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**


1. **CLEAN LINT FILTER** after each use.
2. **LOAD DRYER.** Open dryer door. Shake out laundry and place in dryer.
3. **CLOSE DOOR.** Dryer will not operate with the door open.
4. **SELECT TIMER SETTING** in cycle desired: **AUTOMATIC PERMANENT PRESS/KNITS**, **AUTOMATIC REGULAR**, **AUTOMATIC DELICATE**, **TIME DRY** or **NO HEAT**.

These cycles control the drying time.

5. **TURN FABRIC SELECTOR knob** to desired setting: **DELICATE**, **NO HEAT**, or **REGULAR/PERMANENT PRESS**. The **FABRIC SELECTOR** controls the drying temperature.

Set **FABRIC SELECTOR** temperature switch at: **REGULAR/PERMANENT PRESS** for cotton permanent press, wash and wear, knits of man-made fibers such as polyester and heavyweight "synthetics". **DELICATE** for sheer fabrics such as curtains, lingerie and blouses, and for heat sensitive rugs. **NO HEAT** for items that **should not** be dried with heat. Use for fluffing shag rugs, bedspreads, pillows, blankets and other heat sensitive items.

FABRIC SELECTOR

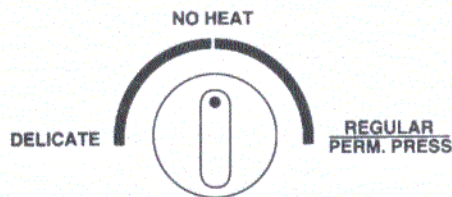

6. **START DRYER:** Push the timer knob in.

TO STOP DRYER AT ANY TIME, open door or turn timer knob to an **OFF** position.

TO RESTART DRYER, close door, reset timer if necessary, and push the timer knob in. Your dryer is designed so that it will not operate if the door is open.

7. **SET SIGNAL CONTROL:** Rotate selector to "loud" (loudest sound) or to "off" (no sound) or to any level in between.


In the **Automatic Permanent Press/Knits** cycle, the signal will buzz continuously for the last 50 seconds of cool down. If clothes are not removed at that time, the timer will advance into the **Cool Tumble** cycle, where the signal will buzz 30 seconds for every five minutes of the 15 minute cycle before dryer stops.

In the **Automatic Regular**, **Automatic Delicate** and **Time Dry** cycles, the signal will buzz continuously for the final 30 seconds of the cool down.

In the **No Heat** cycle, the signal will buzz continuously for the final 30 seconds.

The signal will stop when the door is opened, or when the timer is advanced to an **OFF** position.

SIGNAL

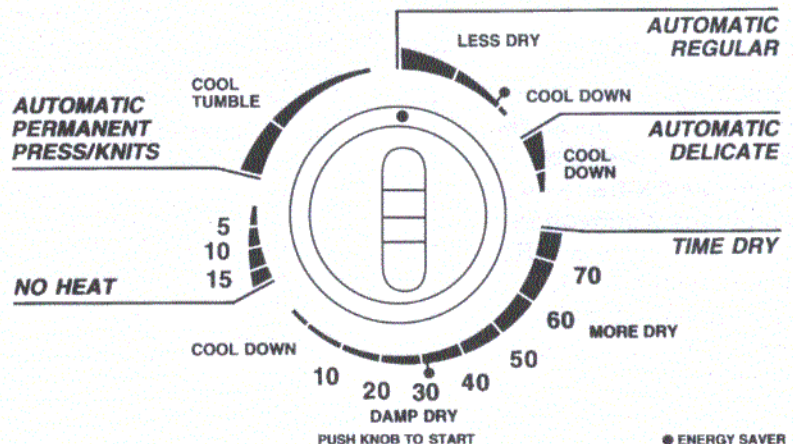

● ENERGY SAVER

Operation Instructions For Model CE8507

▲WARNING

To reduce the risk of fire, electric shock, serious injury or death, to persons, read the **IMPORTANT SAFETY INSTRUCTIONS**, Pages 2 and 3, before operating the dryer.

To Dry Clothes


IMPORTANT: Please read instructions before using dryer. Before using dryer for the first time, wash out the inside of the dryer cylinder with a sudsy cloth, then wipe dry. Install the dryer according to the **INSTALLATION INSTRUCTIONS**. **KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

1. **CLEAN LINT FILTER** after each use.
2. **LOAD DRYER.** Open dryer door. Shake out laundry and place in dryer.
3. **CLOSE DOOR.** Dryer will not operate with the door open.
4. Select **TEMPERATURE/ DRYNESS LEVEL** control.

When using an automatic cycle, set the **DRYNESS LEVEL** control slightly to the right of **NORMAL**. If clothes are damp after drying, turn the control to the right. If clothes are too dry after drying, turn the control to the left.

In the **TIME DRY** cycle, this control adjusts the temperature.

TEMP/DRYNESS CONTROL

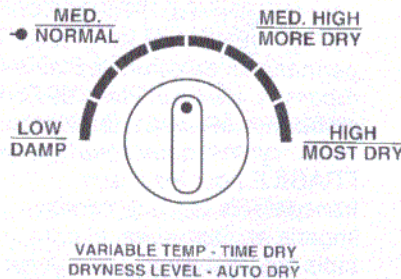

5. **SELECT TIMER SETTING** in cycle desired: **AUTOMATIC PERMANENT PRESS/KNITS**, **AUTOMATIC REGULAR**, **AUTOMATIC DELICATE**, **TIME DRY** or **NO HEAT**.

There will be a definite catch or "feel" at the start of the **AUTOMATIC REGULAR**, **AUTOMATIC DELICATE** and **AUTOMATIC PERM PRESS**. For **NO HEAT** and **TIME DRY** cycles, set the indicator to the cycle time desired.

These cycles control the drying temperature and drying time.

6. **START DRYER:** Push the timer knob in.

TO STOP DRYER AT ANY TIME, open door or turn timer knob to an **OFF** position.

TO RESTART DRYER, close door, reset timer if necessary, and push the timer knob in. Your dryer is designed so that it will not operate if the door is open.

7. **SET SIGNAL CONTROL:** Rotate selector to "loud" (loudest sound) or to "off" (no sound) or to any level in between.

In the **Automatic Permanent Press/Knits** cycle, the signal will buzz continuously for the last 50 seconds of cool down. If clothes are not removed at that time, the timer will advance into the **Cool Tumble** cycle, where the signal will buzz 30 seconds for every five minutes of the 15 minute cycle before dryer stops.

In the **Automatic Regular**, **Automatic Delicate** and **Time Dry** cycles, the signal will buzz continuously for the final 30 seconds of the cool down.

In the **No Heat** cycle, the signal will buzz continuously for the final 30 seconds.

The signal will stop when the door is opened, or when the timer is advanced to an **OFF** position.

SIGNAL

