

AUTOMATIC DRYER OPERATING INSTRUCTIONS

Amana

A **Raytheon** Company

Models:

LE2102

LG2112

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. (If the dryer changes ownership, be sure this manual accompanies the dryer.)

▲ WARNING

FOR YOUR SAFETY

and to reduce the risk of fire or an explosion.

If you smell gas:

- 1. Open windows.**
- 2. Don't touch electrical switches.**
- 3. Extinguish any open flames.**
- 4. Immediately call your gas supplier.**

FOR YOUR SAFETY

and to reduce the risk of fire or an explosion, do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

B83874-1

Amana Refrigeration, Inc.
Amana, Iowa 52204

62388

9/90

Operating Instructions


To Dry Clothes

IMPORTANT: Please read instructions before using dryer. Before using dryer for the first time, wash out the inside of the dryer cylinder with a sudsy cloth, then wipe dry. Install the dryer according to the **INSTALLATION INSTRUCTIONS**. **KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**


- 1 **CLEAN LINT FILTER:** Before each use.
- 2 **LOAD DRYER:** Open dryer door. Shake out laundry and place in dryer.
- 3 **CLOSE DOOR:** Dryer will not operate with the door open.

▲ WARNING To reduce the risk of bodily injury, the dryer will stop tumbling when the door is opened. Do not use the dryer if it does not stop tumbling when the door is opened or starts tumbling without pressing the **START** pad. Remove the dryer from use and call the serviceman.

- 4 **SELECT DRYING TEMPERATURE:** The **FABRIC SELECTOR** controls the drying temperature.

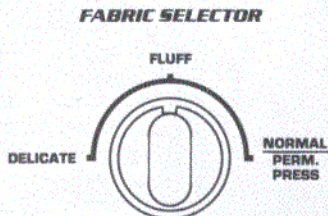

- 5 SELECT DRYING TIME:** The numbers on the timer dial (0 to 110) represents the minutes of drying time. The **PERMANENT PRESS** cycle starts at "30" as a reminder that these fabrics will dry in a shorter time than regular fabrics. Fabrics dried on the **REGULAR** cycle generally hold more moisture and need a longer drying time.

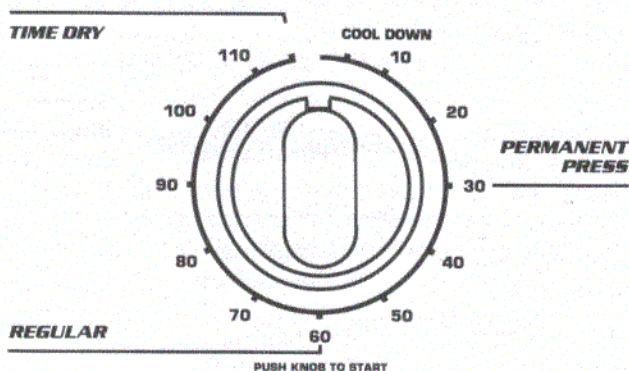

See **SUGGESTED DRYER SETTINGS**. The timer setting may be changed at any time during the drying period.

The last five minutes of the cycle is an automatic cool-down (no-heat) period to condition the clothes and to lessen wrinkling for permanent press loads. Dryer will not heat if set for five minutes or less.

- 6 START DRYER:** Push the timer knob in.

TO STOP DRYER AT ANY TIME: Open dryer door or turn timer knob to OFF position.

TO RESTART DRYER: Close door, reset timer if necessary and push the timer knob in. The dryer will not operate if the door is open.