

# AUTOMATIC DRYER OPERATING INSTRUCTIONS

---

## ***Amana***

A **Raytheon** Company

---

### **Models:**

**LE 3402**

**LG 3412**

---

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. (If the dryer changes ownership, be sure this manual accompanies the dryer.)

---

### **▲ WARNING**

#### **FOR YOUR SAFETY**

**and to reduce the risk of fire or an explosion.**

**If you smell gas:**

- 1. Open windows.**
- 2. Don't touch electrical switches.**
- 3. Extinguish any open flames.**
- 4. Immediately call your gas supplier.**

#### **FOR YOUR SAFETY**

**and to reduce the risk of fire or an explosion, do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.**

**B83874-8**

**Amana Refrigeration, Inc.  
Amana, Iowa 52204**

**62389**

**9/90**

# Operating Instructions


## To Dry Clothes

**IMPORTANT:** Please read instructions before using dryer. Before using dryer for the first time, wash out the inside of the dryer cylinder with a sudsy cloth, then wipe dry. Install the dryer according to the **INSTALLATION INSTRUCTIONS**. **KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**


- 1 **CLEAN LINT FILTER:** Before each use.
- 2 **LOAD DRYER:** Open dryer door. Shake out laundry and place in dryer.
- 3 **CLOSE DOOR:** Dryer will not operate with the door open.

**⚠ WARNING** To reduce the risk of bodily injury, the dryer will stop tumbling when the door is opened. Do not use the dryer if it does not stop tumbling when the door is opened or starts tumbling without pressing the **START** pad. Remove the dryer from use and call the serviceman.

- 4 **SELECT DRYING TEMPERATURE:** The **FABRIC SELECTOR** controls the drying temperature.

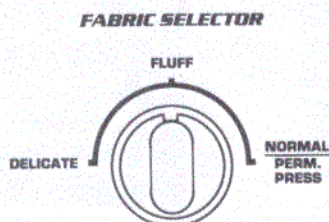

- 5 **SELECT TIMER SETTING:** In the cycle desired — Automatic Permanent Press/Knits, Automatic Regular/Delicate or Time Dry cycle. These cycles control the drying time.

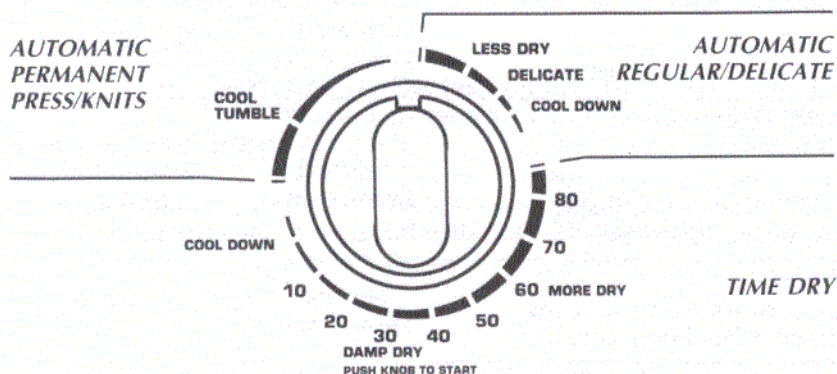

- 6 **START DRYER:** Push the timer knob in.

**TO STOP DRYER AT ANY TIME:** Open dryer door or turn timer knob to OFF position.

**TO RESTART DRYER:** Close door, reset timer if necessary and push the timer knob in. The dryer will not operate if the door is open.

- 7 If your dryer has an adjustable end of cycle signal:  
Set rotary signal control — Rotate selector to "Loud" (loudest sound) or to "OFF" (no sound) or to any level between. The signal will buzz for intervals of 30 seconds over the last five minutes of cool down before dryer stops. The signal will stop when the door is opened, when the timer is advanced to off position.

**SIGNAL**

