


use & care guide

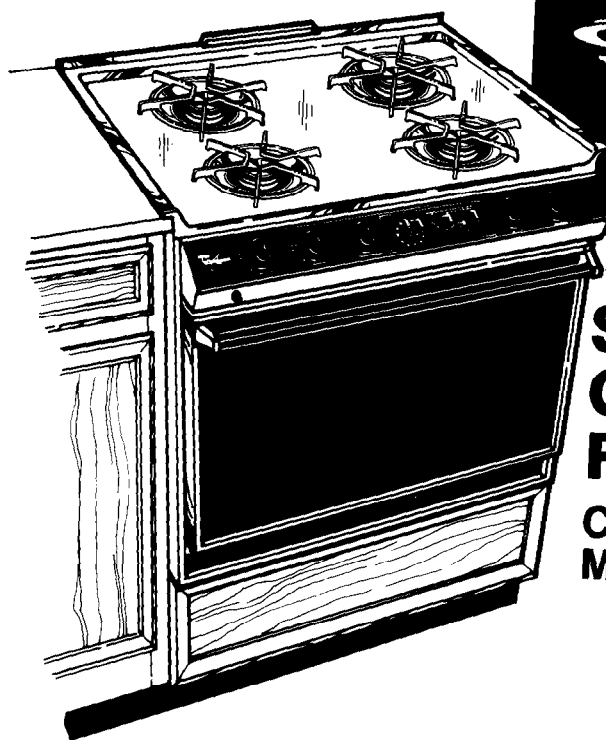


Whirlpool

SET-IN GAS RANGE

**Continuous-Cleaning
Model SS630PER**

es, Microwave Ovens, Trash Compactors, Room Air Conditioners, Dehumidifiers, Automatic Washers, Clothes Dryers, Freezers, Refrigerator-

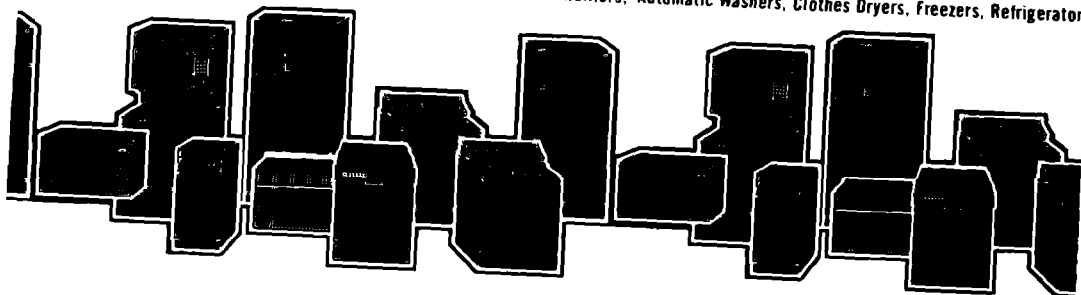

Contents

	Page		Page
Before You Use Your Range ..	2	Caring for Your Range	12
Important Safety Instructions	3	Control Panel	12
Parts and Features	5	Surface Burner Grates	12
Using Your Range	6	Lift-Up Cooktop	13
Using the Surface Burners ..	6	Surface Burners	13
Setting the Clock	7	Oven Door	14
Using the Minute Timer	8	Continuous-Cleaning Oven	14
Using the Oven Controls	8	Cleaning Chart	16
Baking	8	Changing the Oven Light ..	17
Broiling	9	If You Need Service or	
Using the Automatic		Assistance	18
MEALTIMER* Clock	10	Whirlpool Range Warranty ..	20
Oven Vent	11		

*Tmk.

©1986 Whirlpool Corporation

Before you use your range

Read and carefully follow the "INSTALLATION INSTRUCTIONS" packed with your range.

Read this Use & Care Guide and the Cooking Guide for important safety information.

• FOR YOUR SAFETY •

TO PREVENT FIRE AND EXPLOSION, DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

• FOR YOUR SAFETY •

IF YOU SMELL GAS:

1. OPEN WINDOWS.
2. DON'T TOUCH ELECTRICAL SWITCHES.
3. EXTINGUISH ANY OPEN FLAMES.
4. IMMEDIATELY CALL YOUR GAS SUPPLIER.

• FOR YOUR SAFETY •

DO NOT OBSTRUCT THE FLOW OF COMBUSTION AND VENTILATION AIR.

You are personally responsible for:

- Reading and following all safety precautions in this Use & Care Guide and the Cooking Guide.
- Having your range installed by a qualified installer.
- Installing the range in a cabinet where it is protected from the elements, and on a level floor strong enough to hold its weight.
- Having your range properly connected to electrical supply and grounded. (See "Installation Instructions".)
- Having your range properly connected to the proper gas supply and checked for leaks. (See "Installation Instructions".)
- Making sure the range is not used by children or anyone unable to operate it properly.
- Properly maintaining your range.
- Using the range only for jobs expected of a home range.

See "Cooking Guide" for important safety and use information.

IMPORTANT SAFETY INSTRUCTIONS



WARNING – When using your range, follow basic precautions, including the following:

- 1. DO NOT** allow children to use or play with any part of the range, or leave them unattended near it. They could be burned or injured.
- 2. DO NOT** store things children might want above the range. Children could be burned or injured while climbing on it.
- 3. DO NOT** allow anyone to touch a hot surface burner, oven burner or areas around them. They could be hot enough to burn severely.
- 4. KEEP** children away from the range when it is on. The cooktop, oven walls, racks and door can be hot enough to cause burns.
- 5. DO NOT** use a range to heat a room. Persons in the room could be burned or injured, or a fire could start.
- 6. KEEP** pan handles turned in, but not over another surface burner to prevent burns, injury and to help prevent the utensil from being pushed off the cooktop.
- 7. DO NOT** use water on grease fires. The fire will spread. Cover fire with large lid or smother with baking soda or salt.
- 8. DO NOT** wear loose or hanging garments when using the range. Garments could ignite if they touch a hot burner or surrounding area and you could be burned.
- 9. DO NOT** heat unopened containers. They could explode. The hot contents could burn and container particles could cause injury.
- 10. When adding or removing food, MAKE SURE** to open the oven door all the way to prevent burns.

continued on next page

- 11. DO NOT** use a wet pot holder. Steam burns can result. **DO NOT** use a towel or bulky cloth as a pot holder. They could catch fire and burn you.
- 12. MAKE SURE** the utensils you use are large enough to contain food and avoid boil-overs and spill-overs. This will help prevent hazardous build-ups of food. Heavy splattering or spill-overs left on a range can ignite and burn you. Pan size is especially important in deep fat frying.
- 13. DO NOT** leave surface burners on high heat settings. Boil-overs and greasy spillovers could cause steam, smoke and could ignite and burn you.
- 14. GREASE** is flammable and should be handled carefully. Let fat cool before attempting to handle it. **Do not allow grease to collect around range or in vents.** Wipe spill-overs immediately.
- 15. NEVER** use a match or other flame to look for a gas leak. Explosion and injury could result.
- 16. DO NOT** repair or replace any parts unless specifically recommended in this manual. All other servicing should be referred to a qualified service technician.
- 17. DO NOT** use oven for storage. Stored items and range could be damaged if oven is turned on accidentally.

• FOR YOUR SAFETY •

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. THEY COULD IGNITE CAUSING EXPLOSION AND/OR FIRE.

– SAVE THESE INSTRUCTIONS –

Copy your Model and Serial Numbers here...

If you need service, or call with a question, have this information ready:

1. Complete Model and Serial Numbers (from the plate located as shown).

2. Purchase date from sales slip.

Copy this information in these spaces. Keep this book and your sales slip together in the Literature Pac.

Model Number _____

Serial Number _____


Purchase Date _____

Service Company Phone Number _____


Please complete and mail the Owner Registration Card furnished with this product.

Parts and features

Model SS630PER

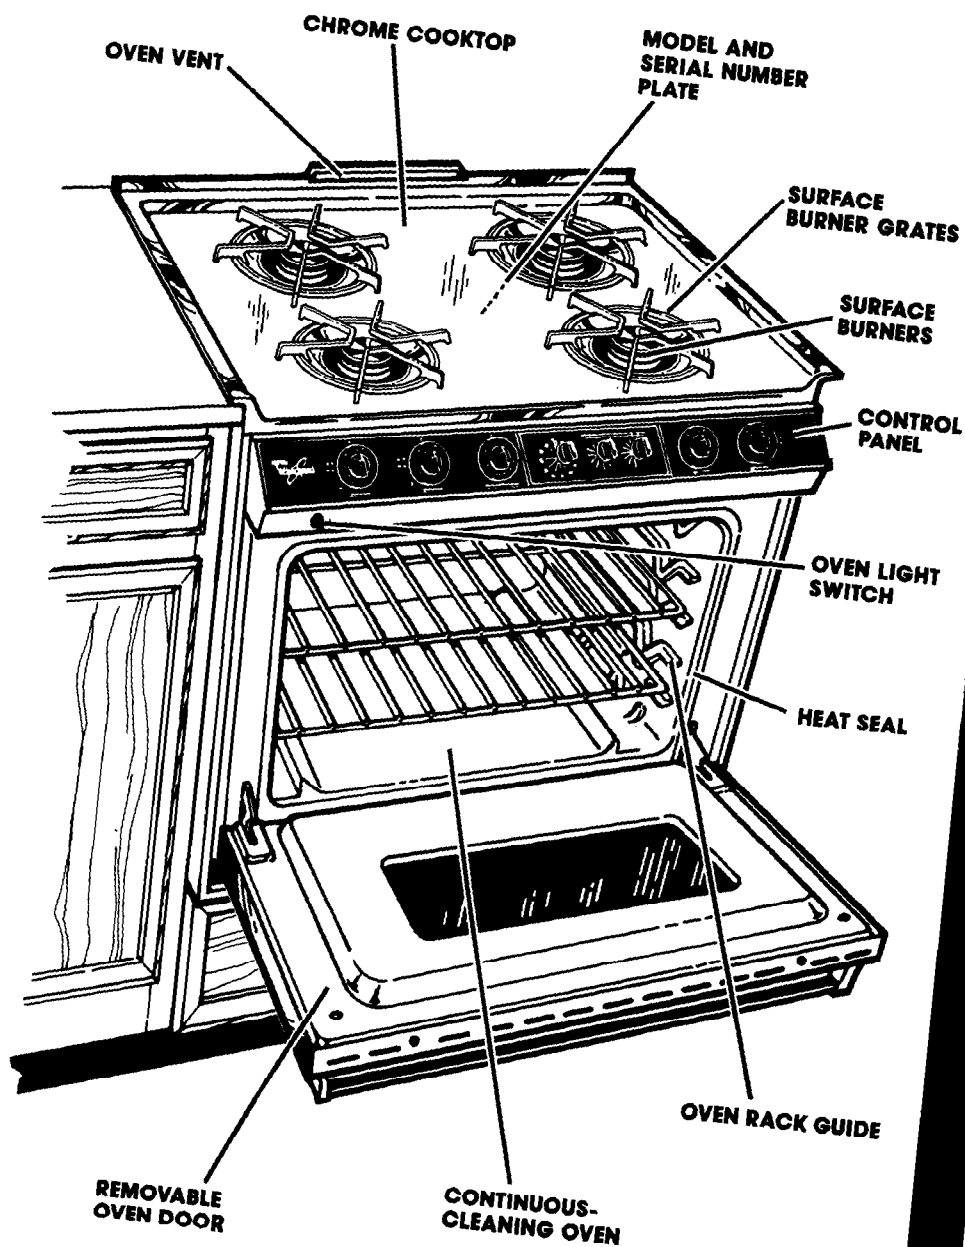


Using your range

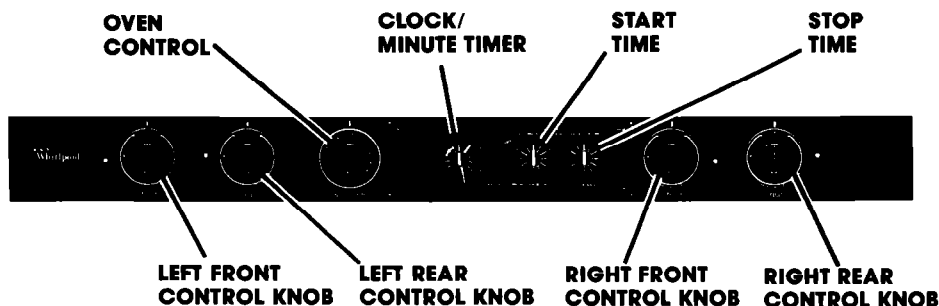

Using the Surface Burners

This range is equipped with electronic ignitors. Electronic ignitors automatically light the burners each time they are used.

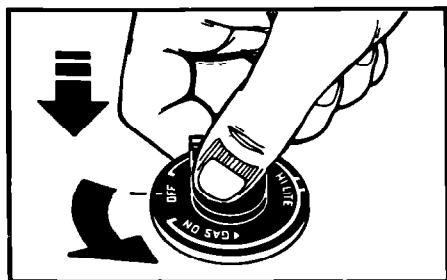

Control knobs must be pushed in, then turned to LITE position. On electronic ignitor models, the clicking sound is the ignitor sparking.

To stop the clicking sound after the burner lights, turn the control knob back to a desired setting. The control knob has stops at HI and LO, however as on any model the control knob can be set anywhere between HI and a low setting. **Do not cook with the control in the LITE position.**

Surface Burner Indicators

The solid dot in the surface burner indicator shows which surface burner is turned on by that knob.



WARNING: If the flame should go out while cooking, or if there is a strong gas odor, turn the burners OFF. Wait five minutes for the gas odor to disappear before relighting burner. **IF GAS ODOR IS STILL PRESENT, SEE SAFETY NOTE ON PAGE 2.**

In Case of a Prolonged Power Failure

Surface burners with electronic ignitors can be manually lighted. Hold a lit match near the burner and turn the control to the LITE position. After the burner lights, turn the control to the desired setting.



WARNING: Do not attempt to light the oven burner during a power failure. Personal injury could result.



WARNING: Burner flame should not extend beyond the edge of the cooking utensil. The flame can burn you and cause poor cooking results.

See the "Cooking Guide" for important utensil information. Until you get used to the settings, use the following as a guide.

Use LITE to light the burner. After the burner lights, turn control back to a desired setting to stop the clicking of the ignition. **Do not cook with the control in the LITE position.**


Use HI to start foods cooking or to bring liquids to a boil.

Use a medium setting to start cooking or to fry chicken or pancakes; for gravy, puddings and icing or to cook large amounts of vegetables.


Use LO to keep foods warm until ready to serve.

Setting the Clock

Push in and turn the Minute Timer Knob to set the Clock.

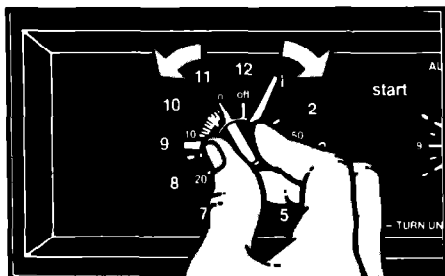

1. Push In Minute Timer Knob and turn in either direction until clock shows the right time of day.

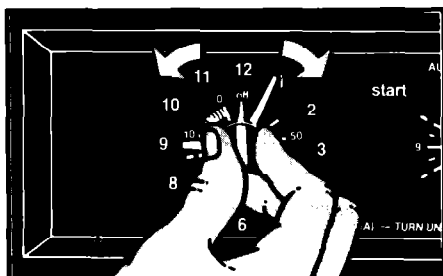


2. Let the Minute Timer Knob pop out. Turn in either direction until Minute Timer hand points to OFF. The clock setting will change if you push in the knob when turning.


Using the Minute Timer

The Minute Timer does not start or stop the oven. It works like a kitchen timer. Set it in minutes up to an hour. You will hear a buzzer when the set time is up.

DO NOT PUSH IN THE KNOB when setting the Minute Timer.

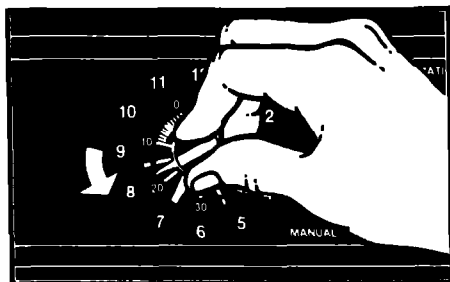

1. **Without pushing it in**, turn the Minute Timer Knob until the hand passes the setting you want.

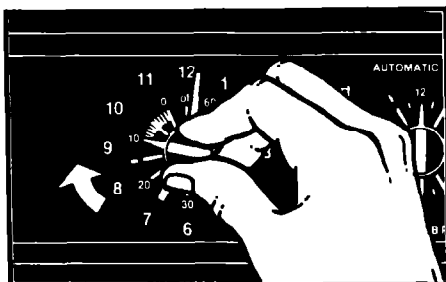


2. **Without pushing in**, turn the knob back to the setting you want.

When the time is up, a buzzer will sound. To stop the buzzer, turn the Minute Timer hand to OFF.

PUSHING IN AND TURNING THE MINUTE TIMER KNOB CHANGES THE CLOCK SETTING.


Using the Oven Control

Baking

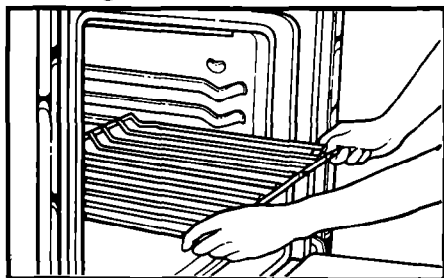


1. Position the racks properly **before** turning on the oven. **To change rack position**, pull rack out to stop, raise front edge and lift out.


Racks should be placed so the top of the food will be centered in the oven. Always leave at least $1\frac{1}{2}$ to 2 inches (4-5 cm) between the sides of the pan and the oven walls and other pans. For more information, see the "Cooking Guide."

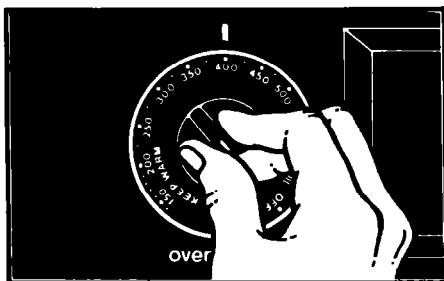


2. Set the Oven Control to the baking temperature you want. The oven burner will automatically light in 50-60 seconds.

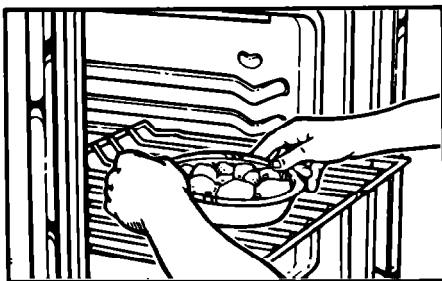

3. Preheat the oven for 10 minutes before adding food. **NOTE: Oven racks, walls and door will be hot. Do not place food directly on oven bottom.**

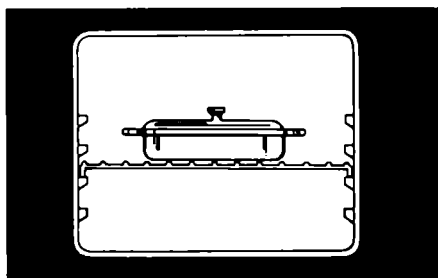


4. During baking, the oven burner will turn on and off to maintain the temperature setting.

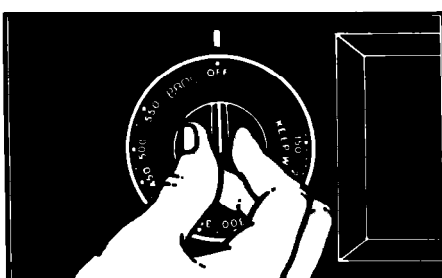


5. When baking is done, turn the Oven Control to OFF.

Broiling


Always broil with the oven door completely closed.

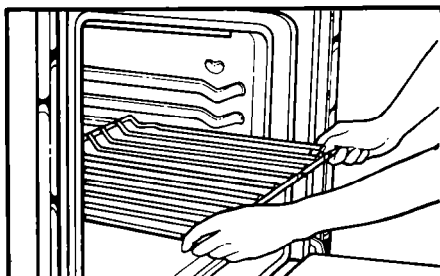


1. Position the rack **before** turning the oven on. See rack and pan placement chart in the "Cooking Guide" for recommended rack position.

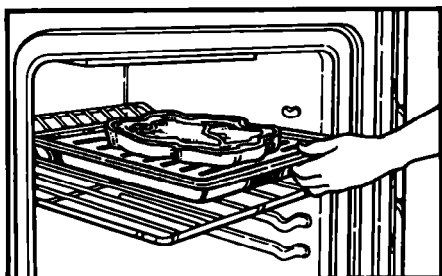

2. Put broiler pan and food on the rack and completely close the door. **DO NOT PREHEAT THE BROILER BEFORE USING.**

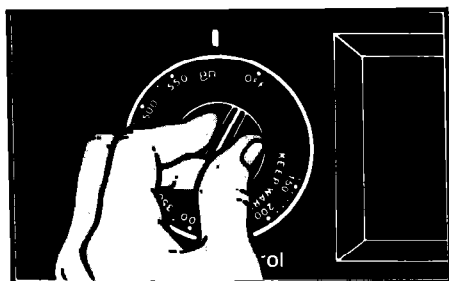

- 3.** Set Oven Control to BROIL. The broiler will automatically light in 50-60 seconds.

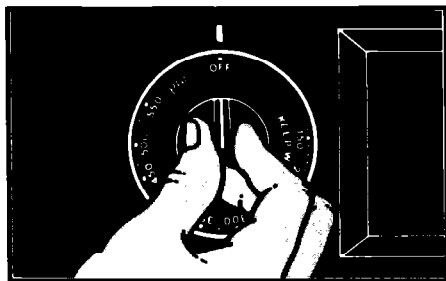

- 4.** When broiling is done, turn Oven Control to OFF.

DO NOT PREHEAT THE BROILER BEFORE USING. COMPLETELY CLOSE OVEN DOOR DURING BROILING.


Using the Automatic MEALTIMER* Clock

The automatic MEALTIMER* Clock is designed to turn the oven on and off at times you set, even when you are not around.


Automatic baking is ideal for foods which do not require a preheated oven such as meats and casseroles. **Do not use the automatic cycle for cakes, cookies, etc...undercooking will result.**

*Tmk.


To start and stop baking automatically:

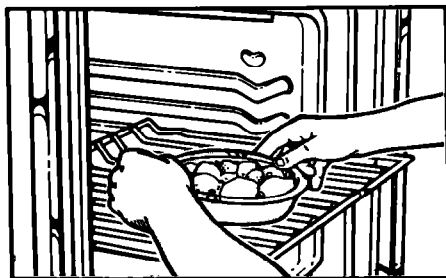


- 1.** Position the oven rack(s) properly, and place the food in the oven.

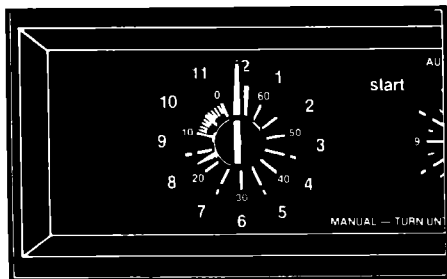


- 2.** Make sure the clock is set to the correct time of day.

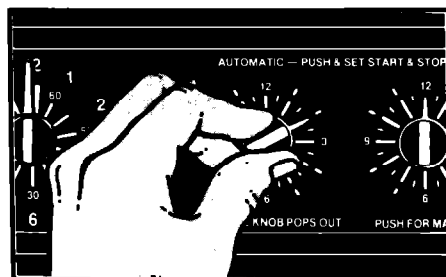


- 3.** Push in and turn the Start Time Knob **clockwise** to the time you want baking to start.

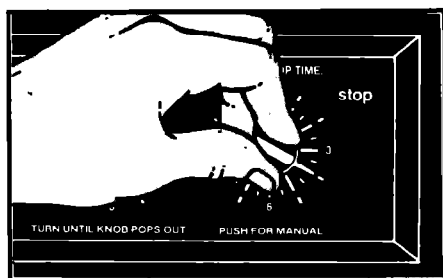

- 4.** Push in and turn the Stop Time Knob **clockwise** to the time you want the oven to shut off.

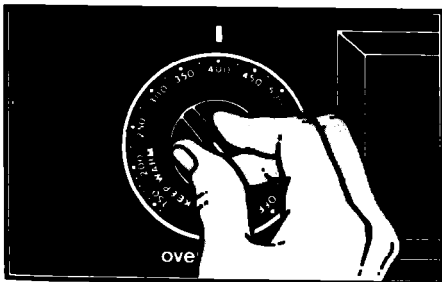

5. Set the Oven Control on the baking temperature you want. The oven will now start and stop automatically.

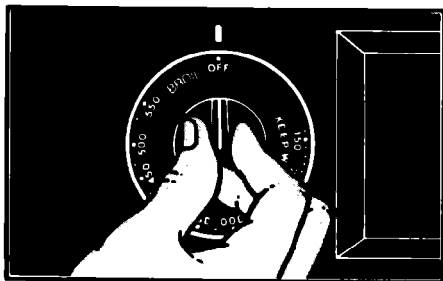

6. After baking is done or to stop the oven before preset time, turn the Oven Control to OFF.

To start baking now and stop automatically:

1. Position rack(s) properly, and place the food in the oven.
2. Make sure the clock is set to the correct time of day.
3. Push in and turn the Stop Time Knob **clockwise** to the time you want the oven to shut off.
4. Set the Oven Control on the baking temperature you want.
5. **After baking is done or to stop the oven before the preset time**, turn the Oven Control to OFF.

For manual operations:

1. Push in the Stop Time Knob.
2. Turn the Start Time Knob until it pops out.
3. Set the Oven Control on the baking temperature you want.




WARNING: To avoid sickness and food waste.

- Use foods that will not go bad or spoil while waiting for cooking to start.
- Avoid using dishes with milk or eggs, cream soups, cooked meats or fish, or any item with baking powder or yeast.
- Any food that has to wait for cooking to start should be very cold or frozen before it is put in the oven. **MOST UNFROZEN FOODS SHOULD NEVER STAND MORE THAN TWO HOURS BEFORE COOKING STARTS.**

The Oven Vent

Hot air and moisture escape from the oven through a vent located at the back of the cooktop. **Do not block vent.** Poor baking will result.

OVEN VENT

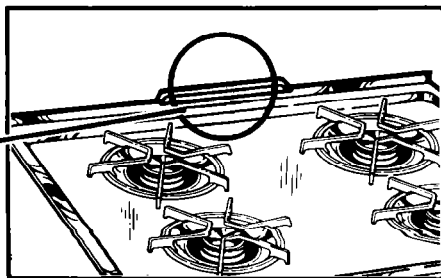


Caring for your range


Control Panels



WARNING: To avoid burns, first make sure all controls are off and the range is **COOL**.

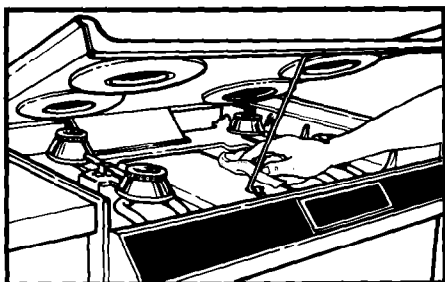


1. Pull knobs straight off.
2. Use warm soapy water, baking soda and a damp soft cloth or spray glass cleaner to wipe the control panels. Rinse and wipe dry.

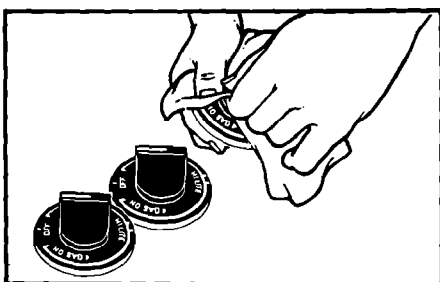


3. Wash knobs in warm soapy water or use baking soda and a damp, soft cloth or follow directions provided with glass cleaner. Rinse well and dry.
CAUTION: Do not soak or use abrasive cleansers. They could rub off the markings.
4. Push the knobs straight back on. Make sure they point to OFF.

Surface Burner Grates

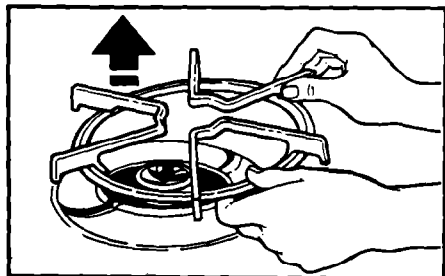

1.  **WARNING:** To avoid burns, be sure the surface burners are **OFF** and the surrounding parts are **COOL**.

2. Lift off the surface burner grates.

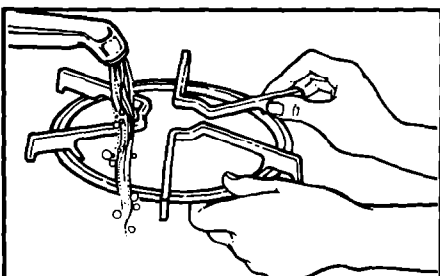


3. Wash the grates in automatic dishwasher or use warm soapy water and plastic scrub pad. Rinse and dry well.
4. Replace the surface burner grates.

Lift-Up Cooktop

1. Lift front of cooktop at corners and swing up the support rod.
2. Carefully lower the cooktop onto the support rod.




WARNING: Be sure the rod fits in the notch in the cooktop and is held securely. The cooktop could accidentally fall and injure you.

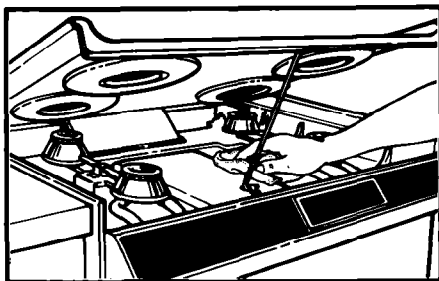


CAUTION: Do not drop the cooktop. Damage can result to the porcelain and the cooktop frame.

3. Wipe surface under cooktop with warm soapy water. Use soapy plastic scrub pad on stubborn spots.

Surface Burners

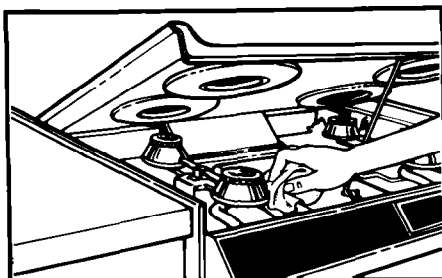

TYPICAL TOP BURNER FLAME

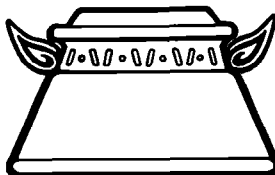

Lift up the cooktop, following the instructions above.

Wipe off surface burners with warm soapy water and a soft cloth after each use.

Occasionally check surface burner flames for size and shape as shown. If flames do not burn properly, you may need to remove the surface burners for cleaning (see page 16), or call a qualified technician for burner adjustments.

To adjust the LO settings on the control knobs:

1. Turn on the surface burners, then set the controls on LO.
2. **Without changing the burner settings**, remove the control knobs.
3. Firmly grasp the control stem and insert a small bladed screwdriver into the end of the stem. Turn the screwdriver in either direction until the flame height is $\frac{1}{8}$ in (.318 cm) or lower in size. **Flame must be large enough to maintain a STABLE FLAME on all burner ports.**

NEVER ADJUST THE FLAME SIZE AT THE MEDIUM SETTING.

The Oven Door


Removing the oven door will make it easier to clean the oven.

1.  **WARNING: To avoid burns, be sure the oven is OFF and COOL.**

Open the door to the first stop position.



2. Hold the door at both sides and lift off of hinges at bottom corners of door.
3. **To replace**, fit the bottom corners of the door over the ends of the hinges.

Push the door down evenly. The door will close only when it is on the hinges correctly.

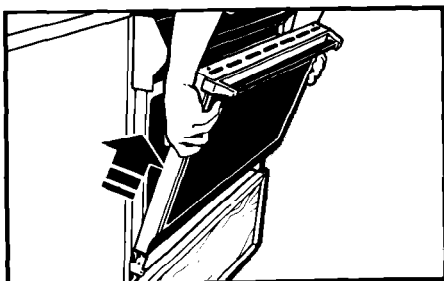

The Continuous-Cleaning Oven

Standard oven walls are coated with smooth porcelain. Your continuous-cleaning oven walls are coated with a special, rougher porcelain. A fat spatter beads up on the smooth surface, but spreads out on the rougher surface. The bead of fat on the smooth surface chars and turns black. The spread-out fat on the rough surface **gradually** burns away at **medium to high baking temperatures** so the oven can return to a presentably clean condition.

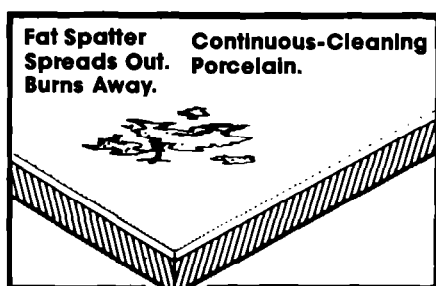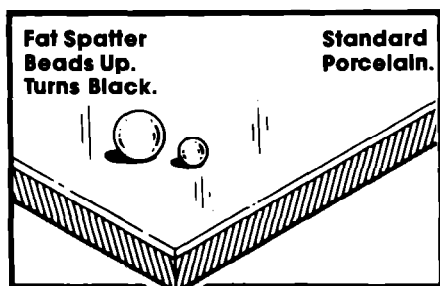

Using Foil

To catch sugar or starchy spills from pies and casseroles, use a piece of heavy-duty aluminum foil or a shallow pan on the lower rack, slightly larger than the cooking container.

1.  **WARNING: To avoid burns, be sure the oven is OFF and COOL.**


2. **Position foil or pan under the cooking container.** Make sure the foil is centered and large enough to catch any spills.

CAUTION: Do not use foil to cover oven floor or to completely cover a rack. Good air circulation is needed for the oven to operate properly. Poor cooking results and damage to the oven could occur.

Cleaning Tips


1. The oven window and racks are not coated. Clean them by hand.
2. The oven door does not get as hot as the walls. Some hand cleaning may be needed.
3. Use aluminum foil or a shallow pan according to instructions. Spill-overs do not burn away and may stain the bottom.

Hand Cleaning

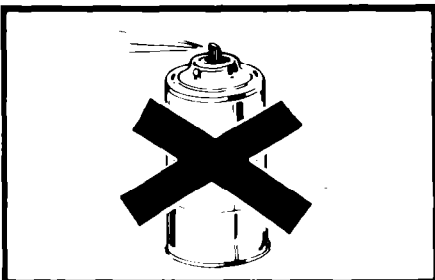


**WARNING: DO NOT
USE COMMERCIAL
OVEN CLEANERS
IN YOUR OVEN.**

**They may become trapped in the
porcelain, damage the finish and
surface and give off harmful fumes.**

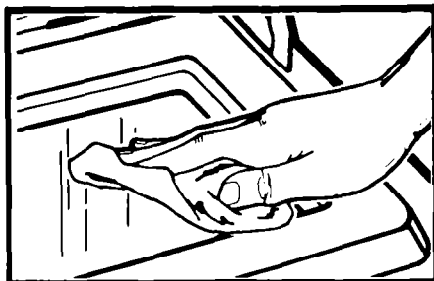


WINDOW – Keep clean with hot
sudsy water. Use a plastic scouring
pad for stubborn spots. Rinse well.

**Do not use steel wool or abrasive
cleaners.**

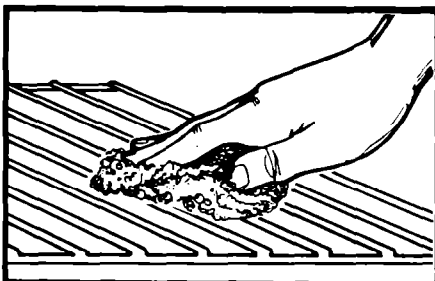

RACKS – Use soapy steel wool pad
for stubborn stains. Rinse well.

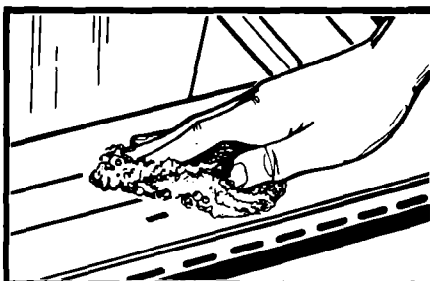

WALLS AND DOOR – Wash with hot
soapy water. Use a soapy steel
wool pad for stubborn spots. Rinse
well.

Cleaning Chart



WARNING: To avoid burns, be sure all controls are OFF and the range is COOL.


PART	WHAT TO USE	HOW TO CLEAN
Exterior surfaces	Soft cloth and warm soapy water or baking soda. Nylon or plastic scrubbing pad for stubborn spots.	• Wipe off regularly when cooktop and range are cool. • Do not allow food containing acids (such as vinegar, tomato, lemon juice or milk) to remain on surface. Acids will remove the finish. • Do not use abrasive or harsh cleansers.
Surface burner grates	Automatic dishwasher or warm soapy water and plastic scrubbing pad.	• Wash with other cooking utensils. • Dry completely. • Do not use abrasive or harsh cleansers.
Surface burners	Warm soapy water, a plastic scrubbing pad, dishwashing detergent or a solution of 1 quart of boiling hot water and 2 tablespoons of DIP IT®	• Lift-up the cooktop, see page 13. • Wipe off spills immediately after burner has cooled. In case of stubborn stains: • Remove burner from manifold with phillips screwdriver. • Soak in warm soapy water and wipe with plastic scrubbing pad and dishwashing detergent. If stain is still there, soak 20 minutes in boiling water and DIP IT® solution. Be sure the solution covers the whole burner. • Rinse and dry well. • If ports are clogged, clean with a straight pin. Do not enlarge or distort ports. Do not use a wooden toothpick. • Do not clean surface burner in dishwasher.
Broiler pan and grid	Warm soapy water and plastic scrubbing pad.	• Clean after each use. • Wash pan and grid with other utensils. For stubborn spots use a plastic scrubbing pad.
Control knobs	Warm soapy water and soft cloth.	• Wash, rinse and dry well. • Do not soak.
Control panels	Warm soapy water or baking soda, soft cloth and spray glass cleaner.	• Wash, rinse and dry well. • Follow directions provided with cleaner.
Oven racks	Warm soapy water and plastic scrubbing pad.	• Wash, rinse and dry well. Use plastic scrubbing pad for stubborn areas.

PART	WHAT TO USE	HOW TO CLEAN
Oven door glass	Spray glass cleaner; warm soapy water and soft cloth.	• Make sure oven is cool. • Follow directions provided with cleaner. • Wash, rinse and dry well.
Continuous-Cleaning oven	Warm soapy water or soapy scrubbing pad. Heavy-duty aluminum foil or shallow pan.	• Clean stubborn spots or stains. Rinse well with water. • Place piece of foil or shallow pan, slightly larger than the cooking container, on lower rack to catch spills. • Do not use commercial cleaners.


Most fat spatters on Continuous-Cleaning porcelain interior surface gradually reduce to a presentably clean condition during normal baking or roasting operations.

Changing the Oven Light


The oven light will **only** come on when you push the Oven Light switch under the control panel. Push it again to turn off the light.

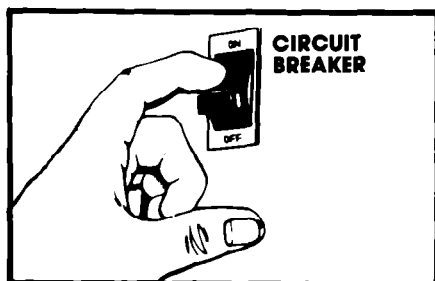


- 1.**  **WARNING:** To avoid possible shock hazard, turn off electric power at the main power supply.

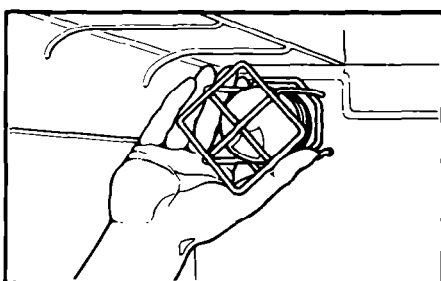

- 2.** Remove the light guard. Grasp and squeeze guard, then pull. The guard will slip over the bulb.

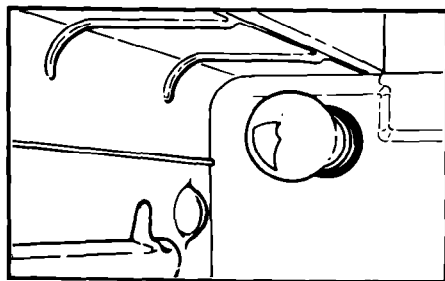

- 3.** Remove the light bulb from its socket. Replace the bulb with a 40-watt appliance bulb. Replace the light guard.

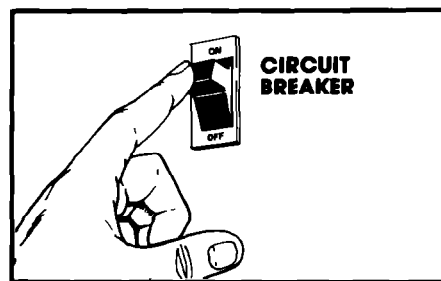

- 4.** Turn the power back on at the main power supply.

If you need service or assistance, we suggest you follow these five steps:

1. Before calling for assistance...

Performance problems often result from little things you can find and fix without tools of any kind.

If nothing operates:

- Is the range properly connected to gas and electrical supplies? (See "Installation Instructions.")
- Have you checked your home's main fuses or circuit breaker box?
- Is the flow of combustion and/or ventilation air to the range blocked? **Do not block the air flow to and around the range.**
- Is the Oven Control turned to a temperature setting or BROIL?
- Is the clock set for manual operation?

If burner fails to light:

- Is the range connected to electrical power?
- Have you checked your home's main fuses or circuit breaker box?
- Are burner ports clogged? (See page 16.)

If burner flames are uneven:

- Are burner ports clogged? (See page 16.)

If burner flames lift off ports, are yellow, or are noisy when turned off:

- The air/gas mixture may be incorrect. (See the "Installation Instructions.")

If burner makes a popping noise when ON:

- Is the burner wet from washing? Let dry.

If control knob(s) will not turn:

- Did you push in before trying to turn?

If soil is visible on Continuous-Cleaning oven finish:

- The special finish is designed to **gradually reduce oven soil** during normal baking or roasting. It is not designed to keep your oven spotless, only presentably clean.
- The door is cooler than the oven walls. Soil will be more visible on the door than other areas in the oven. See page 15 for how to clean.
- Sugar and starchy spills may leave stains. See page 15 for hand cleaning tips. **Use foil on lower rack to catch these spills.**

If cooking results aren't what you expected:

- Is the range level?
- Are you using pans recommended in the "Cooking Guide"?
- If baking, have you allowed 1½ to 2 inches (4-5 cm) on all sides of the pans for air circulation?
- Have you preheated the oven as the recipe calls for?
- Are the pans the size called for in the recipe?
- Are you following a tested recipe from a reliable source?
- Do the cooking utensils have smooth, flat bottoms and fit the surface burners?

See the **Cooking Guide** for more information on cooking problems and how to solve them.

2. If you need assistance*...

Call Whirlpool COOL-LINE® service assistance telephone number. Dial free from anywhere in the U.S.: 1-800-253-1301

and talk with one of our trained Consultants. The Consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

3. If you need service*...



Whirlpool has a nationwide network of franchised TECH-CARE® Service Companies. TECH-CARE service technicians

are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate TECH-CARE service in your area, call our COOL-LINE service assistance telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

APPLIANCES - HOUSEHOLD - MAJOR - SERVICE & REPAIR

WHIRLPOOL APPLIANCES
FRANCHISED TECH-CARE SERVICE

SERVICE COMPANIES

XYZ SERVICE CO
123 MAPLE 999-9999

OR

ELECTRICAL APPLIANCES - MAJOR - REPAIRING & PARTS

WHIRLPOOL APPLIANCES
FRANCHISED TECH-CARE SERVICE

SERVICE COMPANIES

XYZ SERVICE CO
123 MAPLE 999-9999

OR

WASHING MACHINES, DRYERS & IRONERS - SERVICING

WHIRLPOOL APPLIANCES
FRANCHISED TECH-CARE SERVICE

SERVICE COMPANIES

XYZ SERVICE CO
123 MAPLE 999-9999

4. If you have a problem*...

Call our COOL-LINE service assistance telephone number (see Step 2) and talk with one of our Consultants, or if you prefer, write to:

Mr. Robert Stanley
Division Vice President
Whirlpool Corporation
2000 US-33, North
Benton Harbor, MI 49022

*If you must call or write, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.

5. If you need FSP® replacement parts*...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.

To locate FSP replacement parts in your area, refer to Step 2 above or call the Whirlpool COOL-LINE service assistance number in Step 3.

*If you must call or write, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.

WHIRLPOOL MICROWAVE OVEN/ RANGE PRODUCT WARRANTY

LENGTH OF WARRANTY	WHIRLPOOL WILL PAY FOR
FULL ONE-YEAR WARRANTY From Date of Purchase	Replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by a franchised TECH-CARE® service company.
LIMITED FOUR-YEAR WARRANTY Second Through Fifth Year From Date of Purchase	Replacement magnetron tube on microwave ovens if defective in materials or workmanship.
WHIRLPOOL WILL NOT PAY FOR	
A. Service calls to: 1. Correct the installation of the range product. 2. Instruct you how to use the range product. 3. Replace house fuses or correct house wiring or plumbing. 4. Replace owner accessible light bulbs. B. Repairs when range product is used in other than normal, single-family household use. C. Pick up and deliver. This product is designed to be repaired in the home. D. Damage to range product caused by accident, misuse, fire, flood, acts of God or use of products not approved by Whirlpool. E. Any labor costs during the limited warranty.	

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may apply. For details, please contact your franchised Whirlpool distributor or military exchange.



Part No. 36-061099-03-0

786776 Rev. A

©1986 Whirlpool Corporation

Printed in U.S.A.

5. Automatic Washers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-In Ovens and Surface Units, Range

