


use & care guide

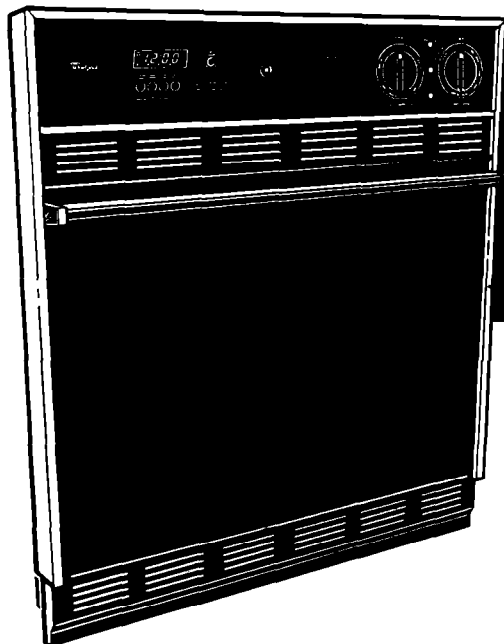


Whirlpool

**BUILT-IN
OVEN**

**Self-Cleaning
Model RB760PXT**

Microwave Ovens, Trash Compactors, Room Air Conditioners, Dehumidifiers, Automatic Washers, Clothes Dryers, Freezers, Refrigerator-Fr

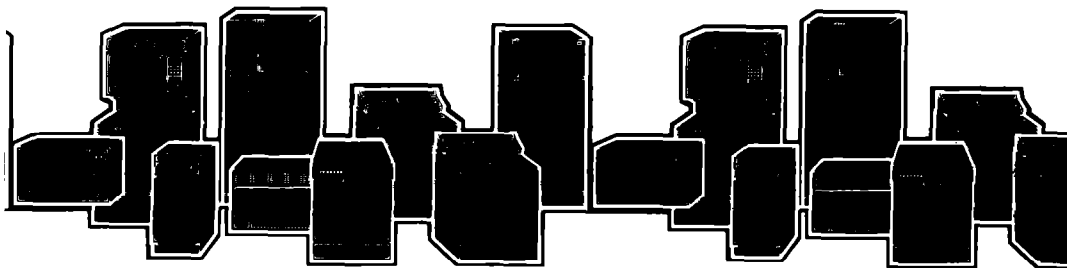

Contents

	Page		Page
BEFORE YOU USE YOUR OVEN ..	2	Using the Electronic Automatic MEALTIMER*	
IMPORTANT SAFETY INSTRUCTIONS	3	Clock	11
PARTS AND FEATURES	4	Other Operating Hints	14
USING YOUR OVEN	5	Oven Vent	14
The Electronic MEALTIMER*		CARING FOR YOUR OVEN	15
Clock	5	Control Panel and Knobs	15
Setting the Electronic Clock	6	Using the Self-Cleaning Cycle	16
Using the Electronic Minute Timer	7	Cleaning Chart	20
Baking	8	Oven Light	21
Adjusting the Oven Temperature Control	9	IF YOU NEED SERVICE OR ASSISTANCE	22
Broiling	10	WHIRLPOOL OVEN WARRANTY	24
			*Tmk.

©1988 Whirlpool Corporation

Before you use your oven

Read and carefully follow the "INSTALLATION INSTRUCTIONS" packed with your oven.

Read this Use & Care Guide and the Cooking Guide carefully for important use and safety information. Store this literature in a convenient place for future use.

It is your personal responsibility and obligation to be sure your oven:

- Has been installed where it is protected from the elements.
- Has been installed and leveled in a wall or cabinet that will hold the weight.
- Has been properly connected to an electrical supply and grounded.
(See "Installation Instructions.")
- Is not used by anyone unable to operate it properly.
- Is properly maintained.
- Is used only for jobs expected of a home oven.

See your "Cooking Guide" for additional safety and operating information.

IMPORTANT SAFETY INSTRUCTIONS



WARNING – When using your oven, follow basic precautions, including the following:

- 1. DO NOT** allow children to use or play with any part of the oven, or leave them unattended near it. They could be burned or injured.
- 2. DO NOT** store things children might want above the oven. Children could be burned or injured while climbing on the door and the door could be damaged.
- 3. KEEP** children away from the oven when it is on. The oven walls, racks and door can get hot enough to cause burns.
 - Put oven racks where you want them before turning on the oven. Heated racks could cause severe burns.
 - Do not touch any part of the oven, especially the heating elements, until you know they are completely cool. Dark elements can still be hot enough to cause severe burns.
- Let steam and hot air escape from the oven before removing food to prevent burns.
- 4. DO NOT** use the oven to heat a room. Persons in the room could be burned or injured, or a fire could start.
- 5. DO NOT** wear loose or hanging garments when using the oven. They could ignite if they touch a heating element and you could be burned.
- 6. DO NOT** heat unopened containers. They could explode. The hot contents could burn and container particles could cause injury.
- 7. MAKE SURE** to open the oven door all the way when adding or removing food to prevent burns.


• FOR YOUR SAFETY •

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. THEY COULD IGNITE CAUSING EXPLOSION AND/OR FIRE.

– SAVE THESE INSTRUCTIONS –

Parts and features

Model RB760PXT

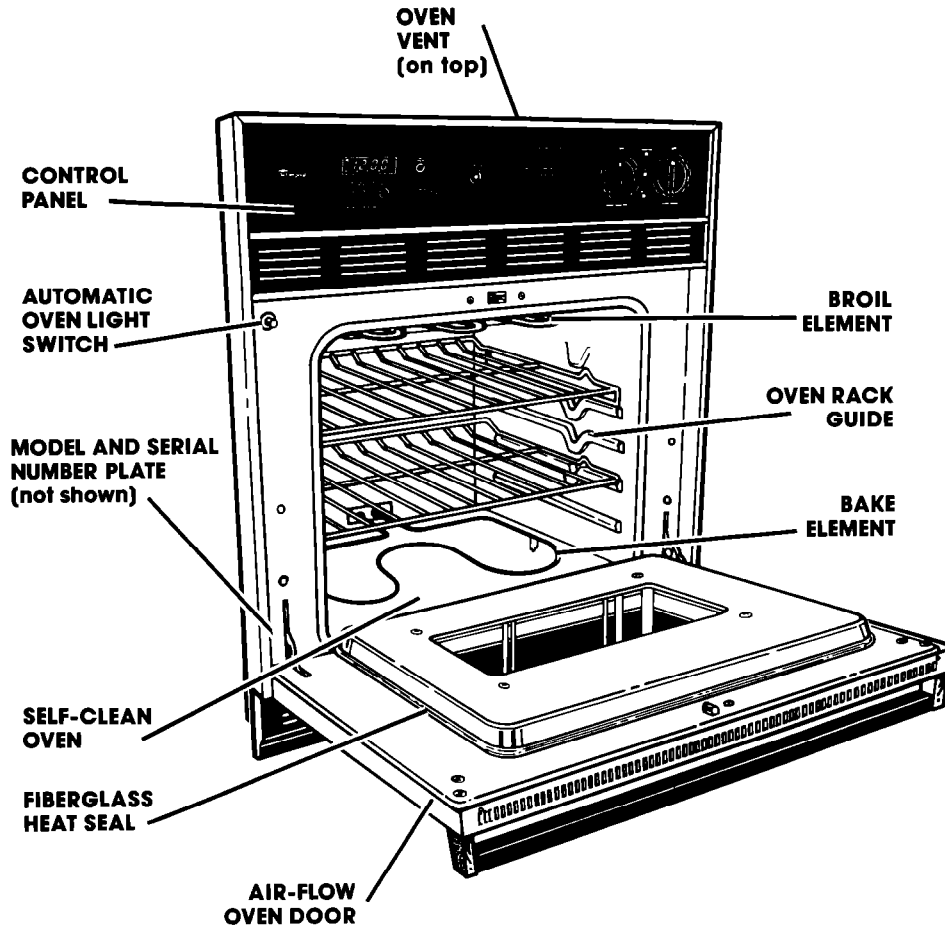

Thank you for buying a Whirlpool appliance. Please complete and mail the Owner Registration Card provided with this product. Then complete the form below. Have this information ready if you need service or call with a question.

- Copy Model and Serial Numbers from plate (behind the oven door on the oven frame) and purchase date from sales slip.
- Keep this book and sales slip together in a handy place.

Model Number

Serial Number

Purchase Date


Service Company Phone Number

**ELECTRONIC MEALTIMER*
CLOCK/MINUTE TIMER**

**OVEN LIGHT
SWITCH**

**OVEN
SIGNAL LIGHT**

**HEATING
INDICATOR LIGHT**

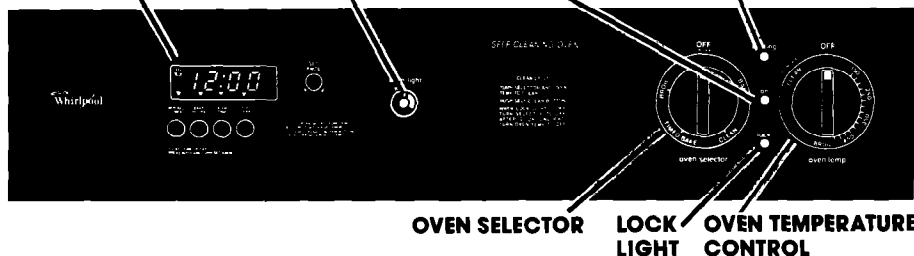

Using your oven

The Electronic MEALTIMER* Clock

The Electronic MEALTIMER* Clock handles many different types of functions. The following operating hints may be helpful when using the clock:

- The numbers on the display change rapidly when turning the Set Knob.
- When setting the Time-of-Day Clock, the display shows hours and minutes.



Twenty-five minutes past six o'clock



Forty-five minutes past twelve o'clock.

- When using the Min/Sec Timer, the display shows minutes and seconds in the following sequence.



– For settings from 1-59 seconds, each second will show in the display.



– For settings from 1-10 minutes, the display will increase in 10 second increments.



– For settings from 10-99 minutes, the display will increase in 1 minute increments.

*Tmk.

- When using the Bake Hours and/or Stop Time, the display shows hours and minutes.



Two-hours and fifteen minutes.



Eleven-hours and fifty-nine minutes.

Other operating hints may be found on page 14.


Setting the Electronic Clock




When you first plug in the oven or if your electricity goes off for a while, each light in the display will flash in sequence.



Then, 4 eights and the Min/Sec Timer and Bake Hours signal lights will flash. The flashing means that the clock is ready to be set.

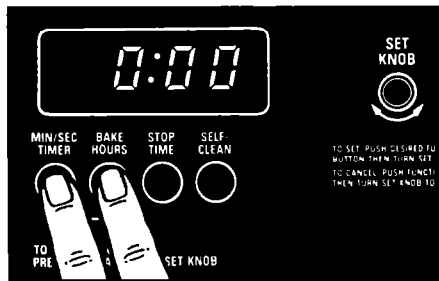


- 1. Push in and hold both the Min/Sec Timer Button and Bake Hours Button.** "0:00" will show in the Display and the Signal Lights will go off.

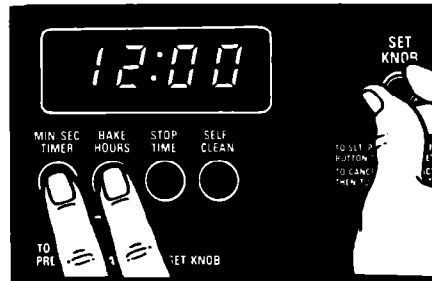


- 2. Turn the Set Knob to set the right time of day.** Turning the knob clockwise increases the numbers. Turning the knob counterclockwise decreases the numbers. The display will show the time you set in hours and minutes.

Using the Electronic Minute Timer


The Minute Timer does not start or stop the oven. It works like a kitchen timer. It can be set in minutes and seconds up to 99 minutes. The timer beeps when the set time is up.

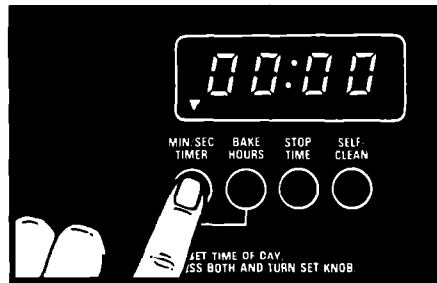

- 1. Push in the Min/Sec Timer Button.**
The Signal Light will come on and the Display will show "00:00."

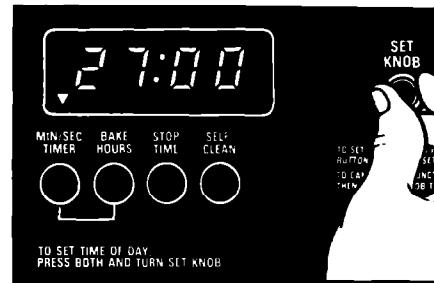

- 2. Turn the Set Knob until the desired time shows in the Display.**
Turning the knob clockwise increases the numbers, while turning the knob counterclockwise decreases the numbers.

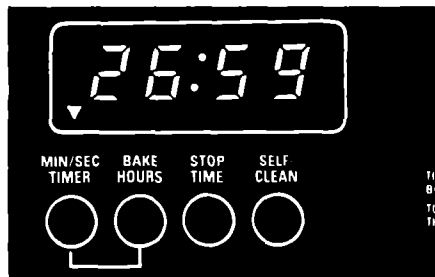


- 3. After setting the time you want,**
the Timer Light will stay on and the Display will start counting down in seconds.




- When the time is up,** the Timer beeps for 1-2 minutes. To stop, push the Min/Sec Timer Button.

Baking

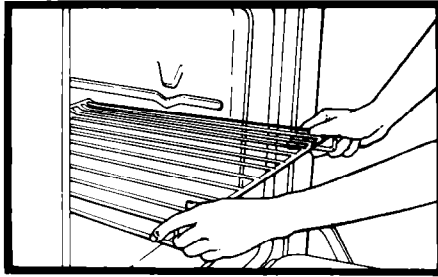


1. **Position the rack(s) properly before turning on the oven. To change rack position, lift rack at front and pull out.**


The rack(s) should be placed so the top of the food will be centered in the oven. Always leave at least 1/2 to 2 inches (4-5 cm) between the sides of the pan and the oven walls and other pans. For more information, see the "Cooking Guide."

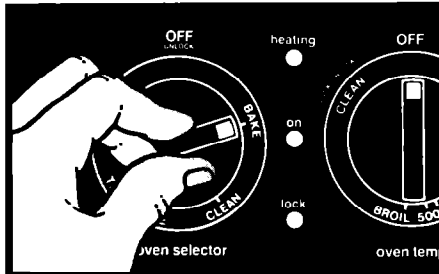


2. **Set Oven Selector to BAKE. The Oven "ON" Light will come on.**

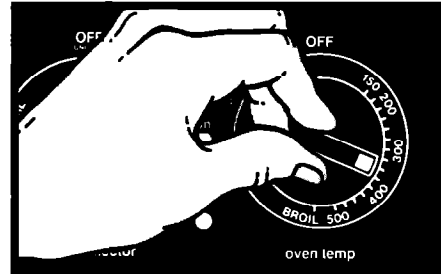

3. **Set Oven Temperature Control to the baking temperature you want. The Heating Light will come on.**

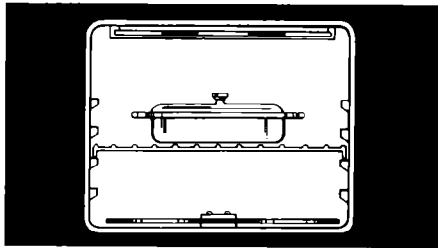

4. **When the Heating Light first goes off, the oven is preheated. Put food in the oven. Note: Oven racks, walls and door will be hot.** During baking, the elements will turn on and off to keep the oven temperature at the setting. The Heating Light will turn on and off with the elements. The top element helps heat during baking, but does not turn red.

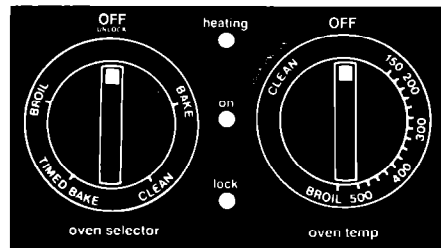


5. **When baking is done, turn both the Oven Selector and Oven Temperature Control to OFF.**


Adjusting the Oven Temperature Control

Does your oven seem hotter or colder than your old oven? The temperature of your old oven may have shifted gradually without you noticing the change. Your new oven is properly adjusted to provide accurate temperatures. But when comparing to your old oven, the new design may give you different results.


If after using the oven for a period of time, you are not satisfied with the temperature settings, they can be adjusted by following these steps:

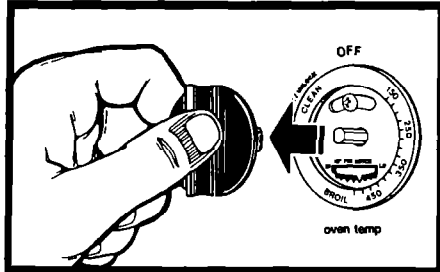


1. Pull the Oven Temperature Control Knob straight off.

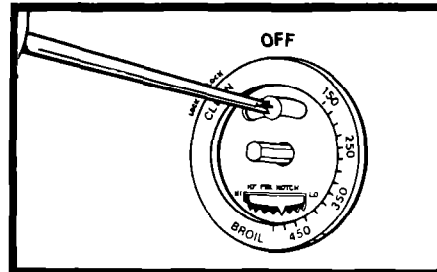

2. Loosen the locking screw. **Note the position of the notches.**

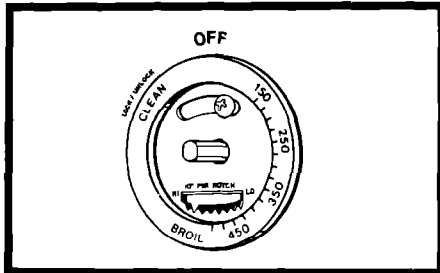


3. **To lower the temperature**, move a notch closer to LO. Each notch equals about 10°F (5°C).

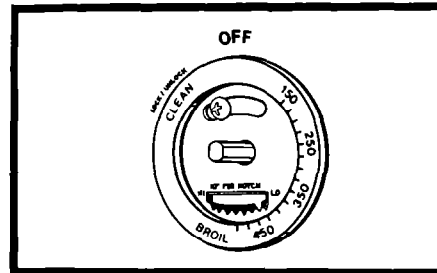


4. **To raise the temperature**, move a notch closer to HI. Each notch equals about 10°F (5°C).

Tighten the locking screw and replace the control knob.

Broiling

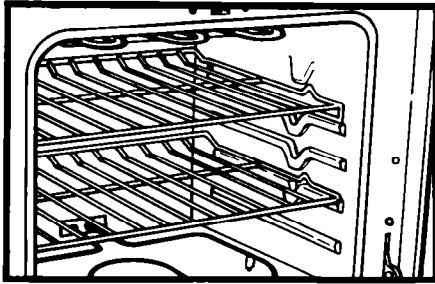


1. Position the rack(s) before turning the oven on. See broil chart in the "Cooking Guide" or a reliable cookbook for recommended rack positions.

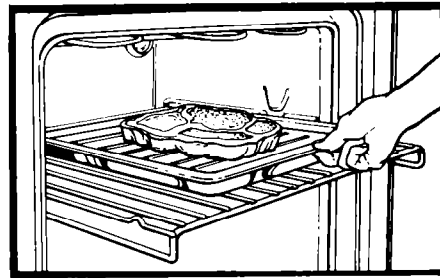

2. Put the broiler pan and food on the rack.



3. Close the door to the Broil Stop position, (open about 4 inches, 10.2 cm). The door will stay open by itself.

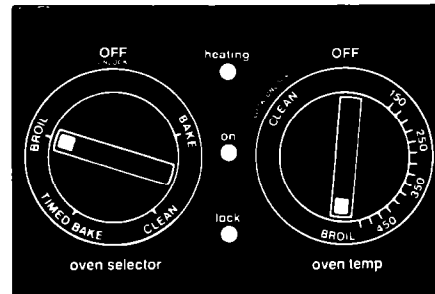

4. Set the Oven Selector and the Oven Temperature Control to BROIL. The Heating and On Lights will come on.
5. When broiling is done, turn both the Oven Selector and the Oven Temperature Control to OFF.

Custom Broil

- If food is cooking too fast, turn the Oven Temperature Control **counterclockwise** until the Heating Light goes off. The light will turn on and off during Custom Broil.
- If you want the food to broil slower from the start, set the Oven Temperature Control between 150° and 325°F (65.5° and 162.7°C). The lower the temperature, the slower the cooking.

The Oven Selector must be on BROIL for all broiling temperatures.


CAUTION: The door must be partly open whenever the oven is set to BROIL. Leaving the door open allows the oven to maintain proper temperatures.

Using the Electronic Automatic MEALTIMER* Clock

The electronic MEALTIMER* is designed to turn the oven on and off at times you set, even if you are not around.

Automatic baking is ideal for foods which do not require a preheated oven such as meats and casseroles. **Do not use the automatic cycle for cakes, cookies, etc...undercooking will result.**


To start baking now and shut off automatically:

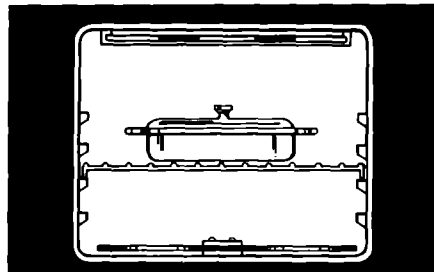


1. Position the oven rack(s) properly and place the food in the oven.




2. Make sure the clock is set to the right time of day.

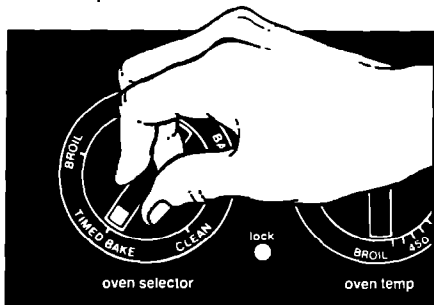


3. Set Oven Selector on TIMED BAKE.

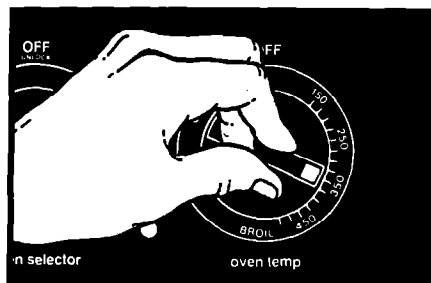

4. Set the Oven Temperature Control on the baking temperature you want.

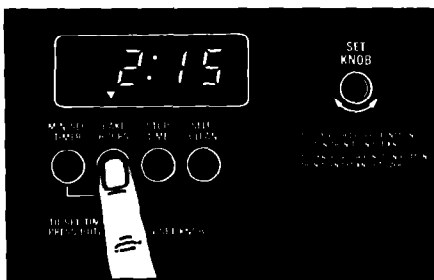


5. Set the clock for the length of baking time you want: Push in the Bake Hours Button and turn the Set Knob until the length of baking time you want shows in the Display. This example shows 2 hours, 15 minutes. Bake Hours can be set for up to 11 hours, 59 minutes.

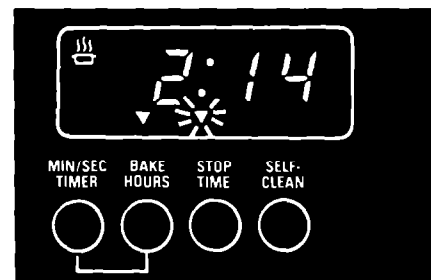

6. The Bake Hours Signal Light will stay on, the Stop Time Signal Light will flash and the Auto Oven Symbol will light. **The Display will count down in minutes. If you want to see Stop Time, push the Stop Time Button. Push the Bake Hours Button to see baking time again.**

continued on next page

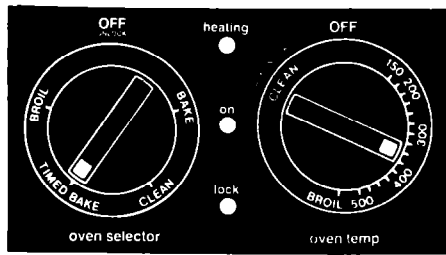

7. The Heating and On Lights will come on when Start Time is reached. The Heating Light will turn on and off during baking.




8. When the baking time is complete, the oven shuts off and the Timer beeps for 1-2 minutes. To stop, push the Bake Hours Button. Turn the Oven Selector and Oven Temperature Control to OFF.




9. To stop the oven before the programmed time, push in the Bake Hours Button and turn the Set Knob counterclockwise until the Display shows "0:00". The Display will return to the time of day. Turn the Oven Selector and Oven Temperature Control to OFF.

Delay start and automatic shut-off:


1. Position the oven rack(s) properly, and place the food in the oven.
2. Make sure the clock is set to the right time of day.
3. Set the Oven Selector on TIMED BAKE.
4. Set the Temperature Control on the baking temperature you want.

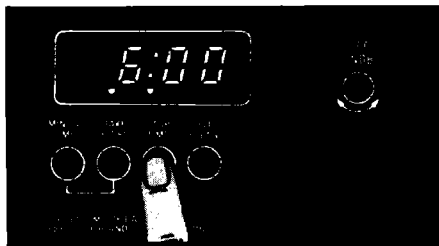


5. Set the clock for the time of day you want the food to be done (Stop Time): Push in the Stop Time Button. Turn the Set Knob until the time of day you want the food to be done shows on the Display. This example shows six o'clock.

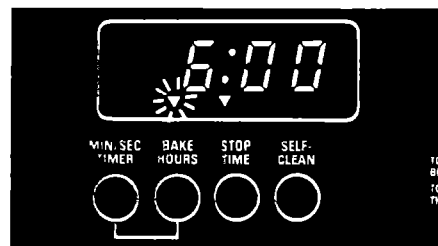


6. The Display will show the time you set. The Stop Time Signal Light will stay on. The Bake Hours Signal Light will flash.

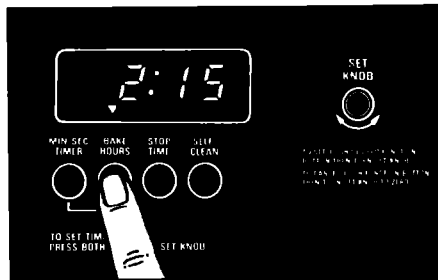

- 7. Set the clock for the length of baking time you want:** Push in the Bake Hours Button and turn the Set Knob until the length of baking time you want shows in the Display. This example shows 2 hours, 15 minutes. Bake Hours can be set for up to 11 hours, 59 minutes.

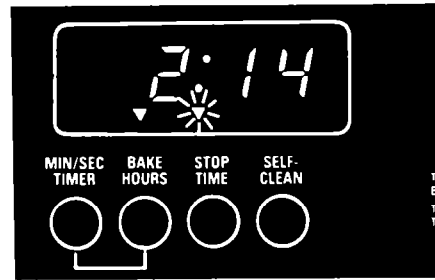


- 8.** The Bake Hours Signal Light will stay on and the Stop Time Signal Light will flash. **If you want to see the Stop Time**, push the Stop Time Button. Push the Bake Hours Button to see the baking time again.

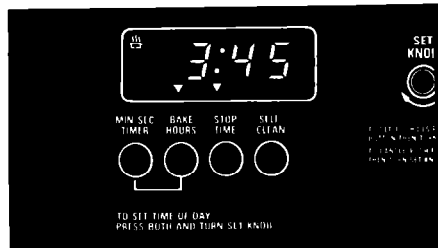

- 9.** The clock automatically calculates the time to turn the oven on. At that time, the Auto Oven Symbol will light and the oven will heat. The Heating and On Lights will come on. This example shows the oven on at 45 minutes past 3 o'clock.



- 10.** When baking is complete the oven will shut off and the Timer will beep for 1-2 minutes. To stop, push the Bake Hours Button. Turn the Oven Selector and the Oven Temperature Control to OFF.

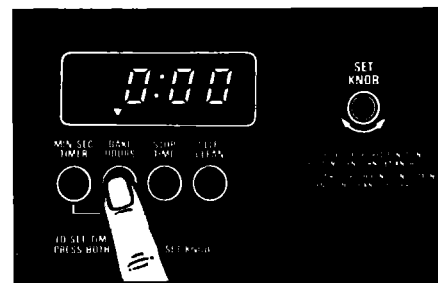

- 11. To stop the oven before the preset time:** Push in the Bake Hours Button and turn the Set Knob counterclockwise until the Display shows "0:00." Turn the Oven Selector and Oven Temperature Control to OFF.



WARNING: To avoid sickness and food waste:

- Use foods that will not go bad or spoil while waiting for cooking to start.
- Avoid using dishes with milk or eggs, cream soups, cooked meats or fish, or any item with baking powder or yeast.
- Any food that has to wait for cooking to start should be very cold or frozen before it is put in the oven. **MOST FOODS SHOULD NEVER STAND MORE THAN TWO HOURS BEFORE COOKING STARTS.**


Other Operating Hints

- If you want to check what you have programmed, press the button for the function you want to check. The display will show what you have programmed for that function.
- If you want to check the time of day, press the Min/Sec Timer and Bake Hours Buttons. The display will show the time of day.
- **A rapid flashing signal light indicates an error in programming. Cancel any entries and begin again.**

The Oven Vent


Hot air and moisture escape from the oven through a vent just above the oven door.

Do not block the vent. Poor baking can result.

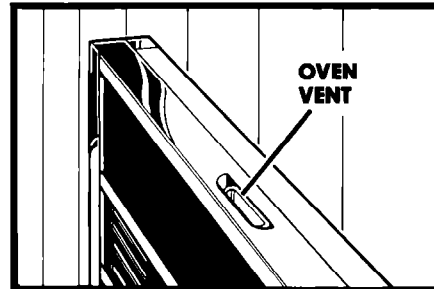


Caring for Your Oven


Control Panel and Knobs

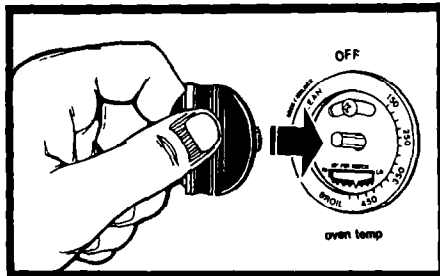


1. First make sure the control knobs are set to **OFF**, then pull knobs straight off.

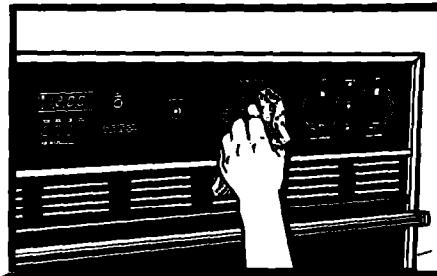

2. Use warm soapy water or spray glass cleaner and a soft cloth. Wring out wet cloth before wiping the control panel. Rinse and dry well.

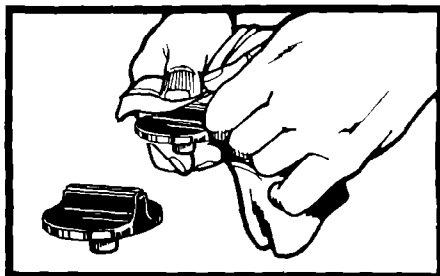

3. Wash control knobs in warm soapy water. Rinse well and dry.

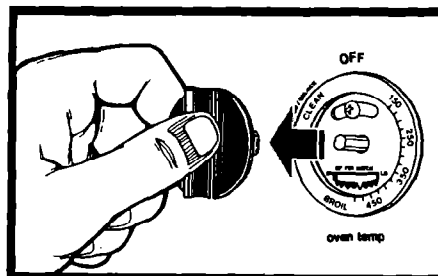


4. Push control knobs straight back on. Make sure they point to **OFF**.

Using the Self-Cleaning Cycle

The self-cleaning cycle uses **very high heat** to burn away soil. Before you start, make sure you understand exactly how to use the cycle safely.

Before You Start

1. **Clean the shaded areas by hand.** They do not get hot enough during the Self-Clean cycle for soil to burn away. Use hot water and detergent or a soapy steel wool pad on...
 - the frame around the oven.
 - the inside of the door, especially the part outside the oven seal.

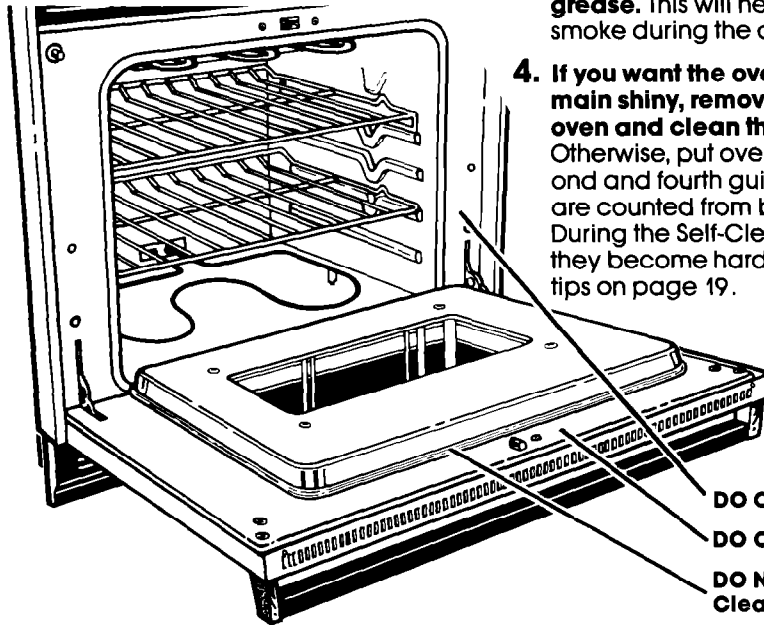

DO NOT clean the fiberglass seal. DO NOT move it or bend it. Poor cleaning and poor baking will result.

2. **Remove the broiler pan and any pots and pans** you may have stored in the oven. They can't stand the heat.
3. **Wipe out any loose soil or grease.** This will help reduce smoke during the cleaning cycle.
4. **If you want the oven racks to remain shiny, remove from the oven and clean them by hand.** Otherwise, put oven racks on second and fourth guides (guides are counted from bottom to top). During the Self-Cleaning Cycle they become harder to slide. See tips on page 19.

Turn on the vent hood or other kitchen vent during the cleaning cycle. This will help remove smoke, odor and heat that are normal during the cycle.

SPECIAL CAUTIONS:

DO NOT use commercial oven cleaners in your oven. Damage to the porcelain finish may occur.

DO NOT use foil or other liners in the oven. During the cleaning cycle foil can burn or melt and damage the oven surface.




WARNING: DO NOT block the vent during the cleaning cycle. Air must move freely for best cleaning results.


DO NOT TOUCH THE OVEN DURING THE CLEANING CYCLE. IT COULD BURN YOU.

Setting the Controls

Be sure the kitchen is ventilated during the Self-Cleaning cycle. This will help normal smoke and heat odors to disappear from the room as quickly as possible.

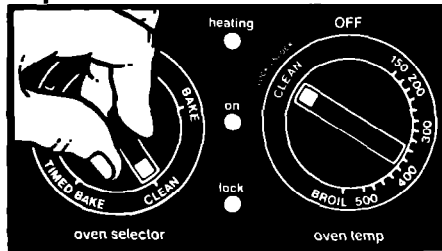


1. Make sure the oven door is closed. Set the Oven Selector and the Oven Temperature Control on CLEAN.

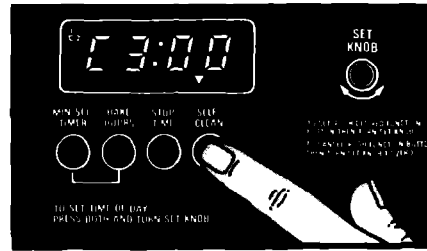


2. Push in and release the Self-Clean Button. A 3-hour Self-Cleaning cycle will be set automatically. The display will count down the time in minutes. The Auto Oven Symbol and Self-Clean Signal Light will stay on. The door will automatically latch.

If a cleaning cycle other than 3 hours is desired, push in and hold the Bake Hours Button and turn the Set Time Knob to the new time up to 4 hours.

- Use 2 hours for light soil.
- Use 3 hours or more for moderate to heavy soil.

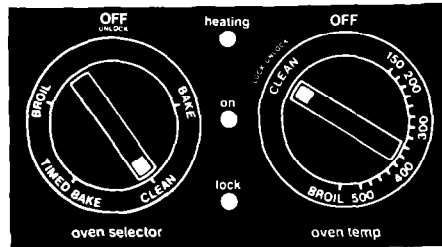

3. The Heating and On Lights will come on. The Heating Light will cycle on and off with the elements. The Lock Light comes on when the oven temperature exceeds normal baking temperatures. The door can't be opened when this light is on. **NOTE: The Stop Time signal light will flash during the entire clean cycle.**

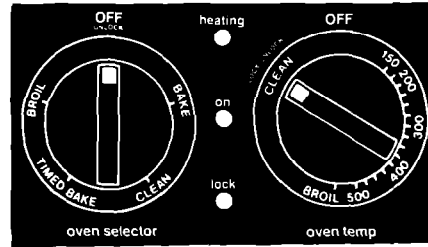


4. **When the Lock Light goes off:**
 - Turn the Oven Selector to OFF. **DO NOT** turn the Oven Temperature control to OFF.
 - Wait 15-20 seconds until the door unlocks.
 - Then, turn Oven Temperature Control to OFF.


NOTE: Oven Temperature Control must be left in the clean position until the door is unlocked.

continued on next page

5. After the cleaning cycle is completed, the Auto Oven Symbol and Self-Clean Light will go off. The Display will show the time of day.
6. After the oven is cool, wipe off any residue or ash with a damp cloth. If needed, touch up spots with a soapy steel-wool pad.

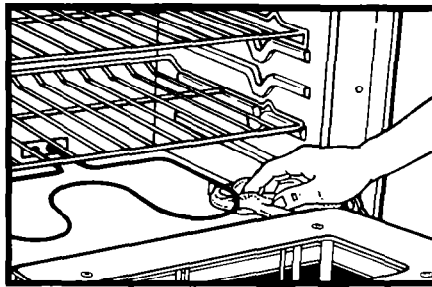


To stop the cleaning cycle at any time:

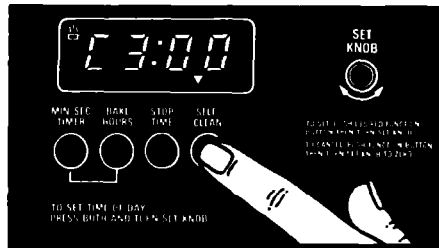

1. Push in and release the Self-Clean Button.

If oven door is locked by mistake:

1. Set the Oven Selector and Oven Temperature Control to CLEAN.
2. Turn Oven Selector to OFF.

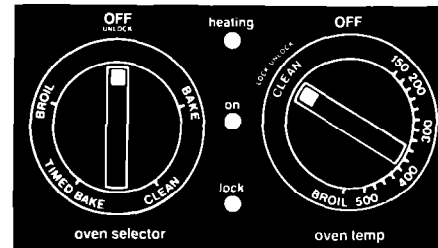

2. When the Lock Light goes off, turn the Oven Selector to OFF. **DO NOT** turn the Oven Temperature Control to OFF until the door unlocks.
3. Wait 15-20 seconds until door unlocks.
4. Then turn the Oven Temperature Control to OFF.

Special Tips

- Keep the kitchen well aired during the cleaning cycle to help get rid of normal heat odors and smoke.
- Clean the oven before it gets heavily soiled. Cleaning a very soiled oven takes longer and results in more smoke than usual.
- If the cleaning cycle doesn't get the oven as clean as you expected, the cycle time may have been too short or you may not have prepared the oven properly. Set the cleaning time longer the next time and hand clean areas noted on page 16.
- Oven racks lose their shine, discolor and become harder to slide when they are left in the oven during the cleaning cycle. To make them slide easier, polish the edges of the racks and rack guides with a soapy steel-wool pad, rinse well, and wipe on a thin coat of salad oil.




WARNING: DO NOT TOUCH THE OVEN DURING THE CLEANING CYCLE. IT CAN BURN YOU.

How It Works

During the self-cleaning cycle, the oven gets much hotter than it does for baking or broiling... approximately 875°F (468°C). This heat breaks up grease and soil and burns it off.

The graph shows approximate temperatures and times during a self-cleaning cycle for 3 hours.

SELF-CLEANING CYCLE – THREE HOUR SETTING
(Approximate Temperatures and Times)

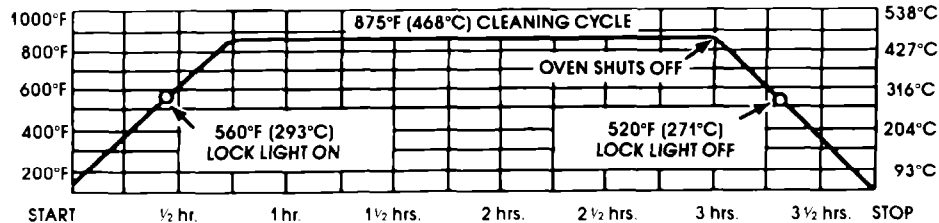

Notice that the heating stops when the 3-hour setting is up, but that it takes longer for the oven to cool down enough to unlock.


Cleaning Chart

PART	WHAT TO USE	HOW TO CLEAN
Exterior surfaces	Soft cloth and warm soapy water. Plastic scrubbing pad for stubborn spots	<ul style="list-style-type: none"> Wipe off regularly when oven is cool. Do not allow food containing acids (such as vinegar, tomato, lemon juice or milk) to remain on surface. Acids will remove the glossy finish. Do not use abrasive or harsh cleaners.
Broiler pan and grid	Warm soapy water or steel-wool pad.	<ul style="list-style-type: none"> Do not place in Self-Cleaning Oven.
Control knobs	Warm soapy water and soft cloth.	<ul style="list-style-type: none"> Wash, rinse and dry well. Do not soak.
Control panel	Warm soapy water or spray glass cleaner.	<ul style="list-style-type: none"> Wash, rinse and dry well. Follow directions provided with cleaner.
Oven racks	Self-Cleaning Oven cycle; warm soapy water or soapy steel-wool pads.	<ul style="list-style-type: none"> Leave in oven during Self-Cleaning cycle. OR Wash, rinse and dry. Use soapy steel wool pads for stubborn areas. <p>NOTE: The oven racks will discolor and be harder to slide when left in the self-cleaning cycle. If you want them to stay shiny, remove them from the oven and clean by hand.</p>
Oven door glass	Spray glass cleaner; warm soapy water or plastic scrubbing pad.	<ul style="list-style-type: none"> Make sure oven is cool. Follow directions provided with cleaner. Wash, rinse and dry well with a soft cloth.
Self-Cleaning Oven	For areas outside Self-Cleaning area use warm soapy water or soapy steel-wool pads.	<ul style="list-style-type: none"> Follow directions starting on page 16, "Using the Self-Cleaning Cycle." Do not use commercial oven cleaners. Do not use foil to line the bottom of your Self-Cleaning Oven.


The Oven Light

The oven light will come on when you open the oven door. To turn the light on when the oven door is closed, push the **Oven Light** switch on the control panel. Push it again to turn off the light.


To Replace:

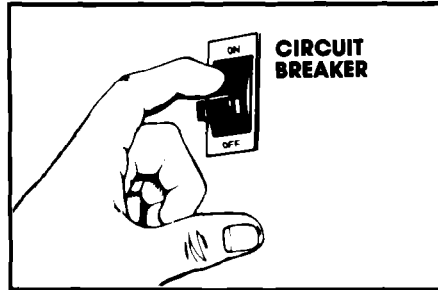


1. **WARNING:** To avoid possible shock hazard, turn off the electric power at the main power supply.

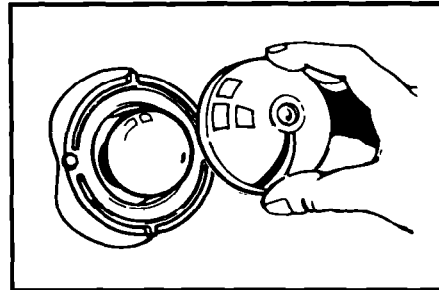

2. Remove the bulb cover in the back of the oven by pulling out and pushing the wire holder to the side.

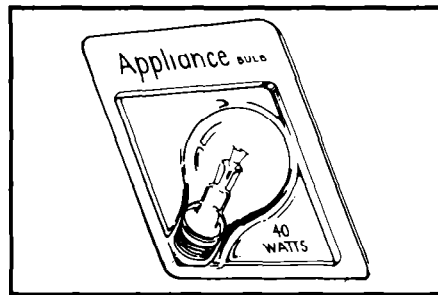

3. Remove the light bulb from its socket. Replace the bulb with a 40-watt appliance bulb.

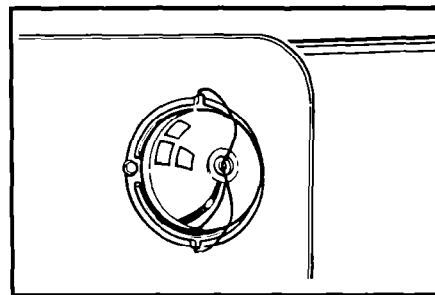

4. Replace the bulb cover and snap the wire in place. Turn the power back on at the main power supply.

CAUTION: The bulb cover must be in place when using the oven. The cover protects the bulb from breaking.

NOTE: The Oven Light will not work during the self-cleaning cycle.

If you need service or assistance, we suggest you follow these five steps:

1. Before calling for assistance...

Performance problems often result from little things you can find and fix yourself without tools of any kind.

If nothing operates:

- Is the oven wired into a live circuit with the proper voltage? (See "Installation Instructions")
- Have you checked your home's main fuses or circuit breaker box?

If the oven will not operate:

- Is the Oven Selector turned to a setting (BAKE or BROIL, but not TIMED BAKE)?
- Is the Oven Temperature Control turned to a temperature setting?

If the Self-Cleaning cycle will not operate:

- Are the Oven Selector and the Oven Temperature Control set on CLEAN?
- Does the electronic clock show the correct time of day?
- Did you push the Self-Cleaning Button?

If cooking results are not what you expected:

- Is the oven level?
- Are you using pans recommended in the **Cooking Guide**?
- If baking, have you allowed 1½ to 2 inches (4-5 cm) on all sides of the pans for air circulation?
- Have you preheated the oven as the recipe calls for?
- Are the pans the size called for in the recipe?
- Are you following a tested recipe from a reliable source?

See the **Cooking Guide** for more information on cooking problems and how to solve them.

2. If you need assistance*...

Call Whirlpool **COOL-LINE**® service assistance telephone number. Dial free from anywhere in the U.S.:
1-800-253-1301

and talk with one of our trained Consultants. The Consultants can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

3. If you need service*...

Whirlpool has a nationwide network of franchised **TECH-CARE**® Service Companies.

TECH-CARE service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate **TECH-CARE** service in your area, call our **COOL-LINE** service assistance telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

APPLIANCES - HOUSEHOLD - MAJOR - SERVICE & REPAIR	ELECTRICAL APPLIANCES - MAJOR - REPAIRING & PARTS
WHIRLPOOL APPLIANCES FRANCHISED TECH-CARE SERVICE	OR WHIRLPOOL APPLIANCES FRANCHISED TECH-CARE SERVICE
SERVICE COMPANIES	SERVICE COMPANIES
XYZ SERVICE CO 123 Maple 999-9999	XYZ SERVICE CO 123 Maple 999-9999
OR	
WASHING MACHINES, DRYERS & IRONERS - SERVICING	
WHIRLPOOL APPLIANCES FRANCHISED TECH-CARE SERVICE	
SERVICE COMPANIES	
XYZ SERVICE CO 123 Maple 999-9999	

4. If you have a problem*...

Call our COOL-LINE service assistance telephone number (see Step 2) and talk with one of our Consultants, or if you prefer, write to:

Mr. Robert Stanley
Division Vice President
Whirlpool Corporation
2000 M-63
Benton Harbor, MI 49022

5. If you need FSP[®] replacement parts*...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.

To locate FSP replacement parts in your area, refer to Step 3 above or call the Whirlpool COOL-LINE service assistance number in Step 2.

*If you must call or write, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.

WHIRLPOOL® RANGE PRODUCT WARRANTY

ER001

LENGTH OF WARRANTY	WHIRLPOOL WILL PAY FOR
FULL ONE-YEAR WARRANTY From Date of Purchase	FSP® replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by a franchised TECH-CARE® service company.
WHIRLPOOL WILL NOT PAY FOR	
<p>A. Service calls to:</p> <ol style="list-style-type: none"> 1. Correct the installation of the range product. 2. Instruct you how to use the range product. 3. Replace house fuses or correct house wiring or plumbing. 4. Replace owner accessible light bulbs. <p>B. Repairs when range product is used in other than normal, single-family household use.</p> <p>C. Pick up and delivery. This product is designed to be repaired in the home.</p> <p>D. Damage to range product caused by accident, misuse, fire, flood, acts of God or use of products not approved by Whirlpool.</p>	

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may apply. For details, please contact your franchised Whirlpool distributor or military exchange.



Part No. 560G003PO6 Rev. A
 P238-273/816139 Rev. A
 ©1988 Whirlpool Corporation

Printed in U.S.A.

Automatic Washers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-In Ovens and Surface Units, Ranges

