

Amana[®]

Radarange[®] MICROWAVE OVEN

Model RS520

Use and Care Manual

Manuel d'emploi et d'entretien

Gebrauchs- und Pflegeanleitung

Manual de Uso y Mantenimiento

Gebruiksaanwijzing en Onderhoudsvoorschriften

Manuale d'uso e manutenzione

READ THIS MANUAL BEFORE OPERATING YOUR RADARANGE OVEN

**LISEZ CE MANUEL AVANT DE VOUS SERVIR DE
VOTRE FOUR RADARANGE**

**BITTE LESEN SIE DIESE GEBRAUCHSANLEITUNG, BEVOR
SIE IHREN RADARANGE HERD ZUM ERSTEN MAL BENUTZEN**

LEA ESTE MANUAL ANTES DE PONER SU HORNO EN OPERACION

**LEES DEZE VOORSCHRIFTEN ALVORENS UW RADARANGE
OVEN TE GEBRUIKEN**

**LEGGERE QUESTO MANUALE PRIMA DI FAR FUNZIONARE
IL FORNO RADARANGE**

TABLE OF CONTENTS

TABLE DES MATIERES

INHALTSVERZEICHNIS

CONTENIDO

INHOUD

INDICE

| | | |
|--|---|----|
| 1 | Important Safety Instructions | 4 |
| | Importantes mesures de sécurité | 10 |
| | Wichtige Sicherheitshinweise | 16 |
| | Instrucciones importantes para su seguridad personal | 22 |
| | Belangrijke Veiligheidsinstructies | 28 |
| | Importanti istruzioni di sicurezza | 34 |
| 2 | Unpacking the Oven | 4 |
| | Déballage du four | 10 |
| | Auspacken des Herdes | 16 |
| | Desembalaje del horno | 22 |
| | Het Uitpakken van de Oven | 28 |
| | Disimballo del forno | 34 |
| 3 | Electrical Requirements | 4 |
| | Besoins du circuit électrique | 10 |
| | Elektrischer Anschluss — Erdung | 16 |
| | Requerimientos eléctricos | 22 |
| | Elektrische Vereisten | 28 |
| | Requisiti elettrici | 34 |
| 4 | Safety Instructions | 5 |
| | Mesures de sécurité | 11 |
| | Sicherheit | 17 |
| | Instrucciones de seguridad | 23 |
| | Veiligheidsinstructies | 29 |
| | Istruzioni di sicurezza | 35 |
| | To Avoid Exposure to Microwave Energy | 5 |
| | Pour éviter d'être soumis à un dégagement d'énergie par les micro-ondes | 11 |
| | Vorsichtsmaßnahmen zum Schutz gegen Mikrowellen | 17 |
| | Para prevenir la exposición a la energía de microondas | 23 |
| Het Vermijden van Blootstelling aan Microwave Straling | 29 | |
| Per evitare l'esposizione all'energia a microonde | 35 | |
| 5 | Checking Oven Operation | 5 |
| | Vérification du fonctionnement du four | 11 |
| | Funktionsprüfung des Herdes | 17 |
| | Revisión de la operación del horno | 23 |
| | Controleer Werking van Oven | 29 |
| | Controllo del funzionamento del forno | 35 |
| 6 | The Control Panel | 6 |
| | Tableau de commandes | 12 |
| | Schalttafel | 18 |
| | El tablero de controles | 24 |
| | Het Controle Paneel | 30 |
| | Pannello di controllo | 36 |

| | | |
|--|---|----|
| 7 | Cooking with Full Microwave Power | 7 |
| | Cuisson à intensité maximum de micro-ondes | 13 |
| | Schnell Garen — Höchststufe | 19 |
| | Cocinando con energía de microondas en toda su potencia | 25 |
| | Koken op Volle Microwave Sterkte | 31 |
| Cottura con l'energia piena a microonde | 37 | |
| 8 | Using the Timer | 7 |
| | Utilisation de la minuterie | 13 |
| | Gebrauch des Zeitschalters | 19 |
| | Uso del reloj | 25 |
| | Gebruik van Tijdlok | 31 |
| Uso del cronometro | 37 | |
| 9 | Slo Cooking | 7 |
| | Cuisson lente | 13 |
| | Langsam Garen — Mittelstufe | 19 |
| | Cocción a fuego lento | 25 |
| | Koken op Laag Niveau | 31 |
| Cottura lenta | 37 | |
| 10 | Defrosting | 8 |
| | Décongélation | 14 |
| | Auftauen — Niedrigstufe | 20 |
| | Deshielo de alimentos | 26 |
| | Ontdooien | 32 |
| Sbrinatura | 38 | |
| 11 | Maintenance and Cleaning | 8 |
| | Entretien et nettoyage | 14 |
| | Wartung und Pflege | 20 |
| | Mantenimiento y limpieza | 26 |
| | Onderhoud en Schoonmaken | 32 |
| Manutenzione e pulizia | 38 | |
| 12 | Changing the Oven Light | 8 |
| | Changement de l'ampoule du four | 14 |
| | Innenbeleuchtung — Auswechseln der Glühbirne | 20 |
| | Cambio de la bombilla de luz | 26 |
| | Het verwisselen van Oven Licht | 32 |
| Cambiare la lampadina del forno | 38 | |
| 13 | Before You Call For Service | 9 |
| | Avant de téléphoner au réparateur | 15 |
| | Bevor Sie den Kundendienst anrufen | 21 |
| | Antes de solicitar servicio | 27 |
| | Alvorens Service in te Schakelen | 33 |
| Prima di chiamare il servizio d'assistenza | 39 | |

1

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

WARNING — to reduce the risk of burns, electrical shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 5.
3. This appliance must be earthed. Connect only to properly earthed outlet. See "ELECTRICAL REQUIREMENTS" below.
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. Some products such as whole eggs and sealed containers — for example, closed glass jars — may explode and should not be heated in this oven.
6. Use this appliance only for its intended use as described in this manual.
7. As with any appliance, close supervision is necessary when used by children.
8. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
9. This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair or adjustment.
10. Do not cover or block any openings on the appliance.
11. Do not use outdoors.
12. Do not immerse cord or plug in water.
13. Keep cord away from heated surfaces.
14. Do not let cord hang over edge of table or counter.
15. See door cleaning instructions on page 8.
16. To reduce the risk of fire in the cavity:
 - a. Do not overcook food. Carefully attend appliance if paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - b. Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - c. If materials inside the oven should ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off the power at the fuse or circuit breaker panel.

SAVE THESE INSTRUCTIONS

2

UNPACKING THE OVEN

Inspect the oven for any damages such as dents or holes in the screen of the door or dents inside the oven cavity. Any dents or breakage should be reported to your **Amana Dealer** immediately. You will be told if the unit will operate correctly.

OVEN PLACEMENT

Do not locate the oven with the sides, top or bottom airflow restricted. The oven must have sufficient airflow around it.

3

ELECTRICAL REQUIREMENTS

WARNING — This appliance must be earthed.

The oven must be connected to separate 220-240 volt,* 10 amp, 50 hertz circuit all its own. The wires in the main lead of your oven are coloured in accordance with the following code:

Green and Yellow — Earth Blue — Neutral Brown — Live

Since the colours of the wires in the main lead of this microwave oven may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter "E" or by the earth symbol or coloured green and yellow.
- The wire which is coloured blue must be connected to the terminal which is marked with the letter "N" or coloured black.
- The wire which is coloured brown must be connected to the terminal which is marked with the letter "L" or coloured red.

* This unit is factory set to operate at 220/230 volt 50Hz. For usage above 230 volts, you must have an authorized Amana servicer change the internal wiring. If no Amana service agent can be located, contact Amana Refrigeration, Inc., Amana, Iowa, 52204, U.S.A.

4 SAFETY INSTRUCTIONS

Read and follow these Rules for Safe Operation.

This microwave oven is designed to be safe and reliable. As with all appliances, there are certain rules to follow. Make sure everyone who cooks with this oven is familiar with this product's operation and with these precautions.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the: (a) Door (bent), (b) hinges and latches (broken or loosened), (c) door seals and sealing surfaces.
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

PRECAUTIONS

- (a) **WARNING: Liquids** must be briskly stirred or poured (to mix in air) before being heated in a microwave oven. If air is not mixed into a liquid, the liquid can erupt in the oven or after removal from the oven.
- (b) **Eggs** must not be cooked or reheated in the shell, or with an unbroken yolk. To do so may result in a pressure build-up and eruption. Pierce the yolk with a fork or knife before cooking.
- (c) **Home canning** must not be done in a microwave oven. Home canning is generally done with metal lids. Since metal lids reflect microwaves, you cannot be assured that the food product will be heated uniformly to 100° C or above, and there is a probability of deterioration of the food product.
- (d) **Deep fat frying** must not be done in any microwave oven. The fat could overheat and be hazardous to handle.
- (e) **WARNING: Do not heat sealed containers in any microwave oven. Containers with restricted openings** such as syrup bottles must not be used for cooking. Food or liquid could expand quickly and cause the container to break.
- (f) **Regular cooking thermometers** must not be used in a microwave oven. Most cooking thermometers contain mercury and may cause "arcing", malfunction, and/or damage to the oven.
- (g) **Plastic bags (and other air-tight containers)** must always be pierced or open before heating in a microwave oven. This is needed to allow steam to escape during cooking.
- (h) **Metal or ceramic accessories** which have a special design to absorb microwave energy to provide heat ("active" accessories such as browning skillets) may be used with caution. Be sure to test any such device before use and to read carefully and follow manufacturer's instructions provided with the accessory. Any questions concerning these accessory products should be referred to the accessory manufacturer. **Amana Refrigeration, Inc.**, does not endorse any brand of accessory. Remember that all microwave accessories are not "top quality"; some may not be suitable for microwave cooking. Caution must be used when purchasing microwave accessories.
- (i) **Newspapers** must never be used in a microwave oven since they may ignite.
- (j) **Paper towels** which contain nylon or other synthetic fibers woven through them must not be used because the heated synthetics could melt and cause the paper to ignite.

5 CHECKING OVEN OPERATION

- A. **Check operation of the interlock switch systems.** The **START BUTTON** turns the oven on. Microwave energy is generated only when the door is closed, cooking time has been set, the **COOKING POWER CONTROL DIAL** has been set on **FULL POWER, SLO COOK, or DEFROST**, and the **START BUTTON** has been pushed. In addition,


the oven has interlock switches to assure that no microwave energy is generated when the door is opened during cooking. To check or remove food before the cooking time has elapsed, open the oven door. When the door is opened, hidden interlock switches sense the motion of the door and automatically turn the oven off. Here is how you may check the operation of the **START BUTTON**:

1. Place a glass of water in oven and close oven door.
2. Turn the **TIMER DIAL** clockwise.
3. Push the **START BUTTON**. The oven should operate, the **TIMER DIAL** should turn counterclockwise and the oven light should come on.
4. Open the oven door. The oven should shut off immediately, the **TIMER DIAL** should stop and the sound of the motor should cease. The oven light should go out.
5. Close the oven door and push the **START BUTTON**. The oven should operate and the

- TIMER DIAL** should resume turning counterclockwise from where it stopped. The oven light should come on again.
6. Open the oven door and remove the glass of water. All oven functions should cease.
 7. Turn the **TIMER DIAL** counterclockwise until it clicks "off".

- B. Oven Light**
The oven light will come on when the oven is operating and when using the **TIMER**.

6 THE CONTROL PANEL

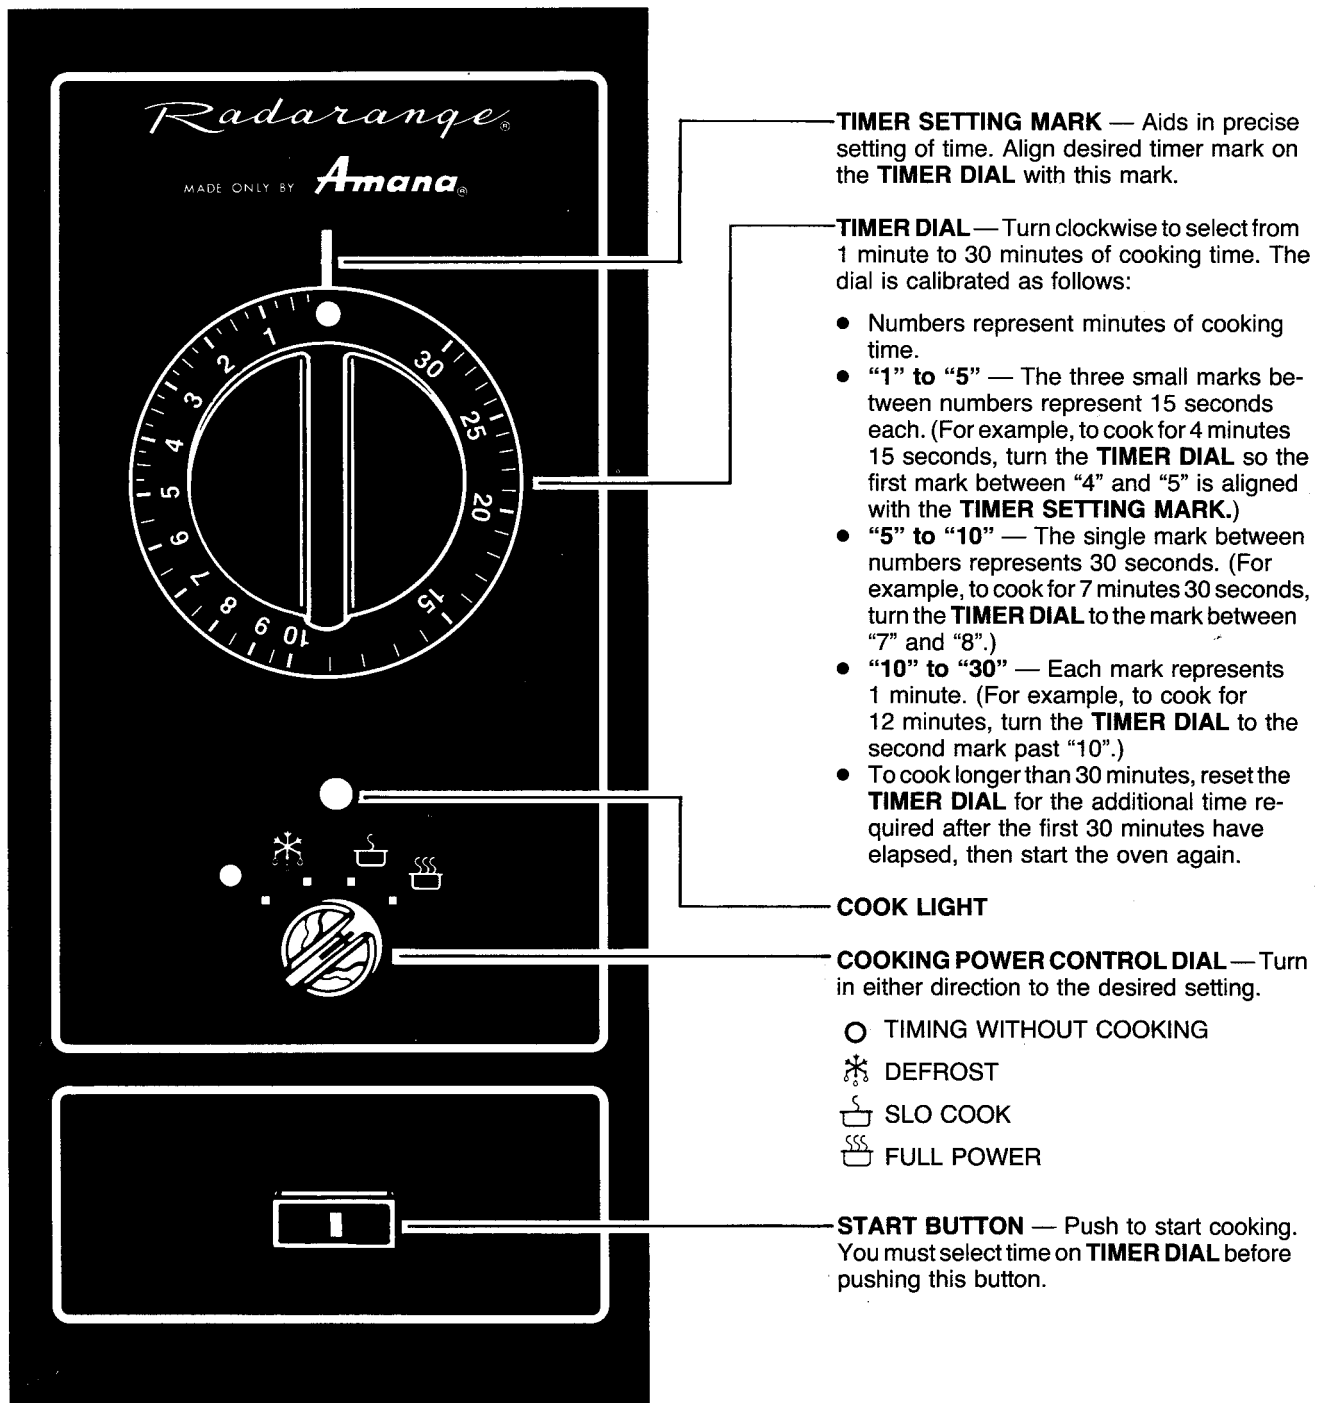

7 TRY IT! COOKING WITH FULL POWER

This is the fastest and easiest way to cook. At Full Power, your oven provides approximately 650 watts* of cooking power. It's **very** fast!

1. **Place food in oven and close oven door.** When using the oven, always have food or water inside to absorb microwave energy.
2. Turn the **COOKING POWER CONTROL DIAL** to **FULL POWER**.
3. Turn the **TIMER DIAL** clockwise to set **cooking time** (to cook 1 minute 15 seconds, turn dial

so the first mark after "1" is aligned with the **TIMER SETTING MARK**).

4. Push the **START BUTTON** and the oven will begin operating. The **TIMER DIAL** will move counterclockwise as the time elapses. You can estimate the amount of remaining cooking time by looking at the setting directly behind the **TIMER SETTING MARK**.
5. The oven will stop and sound a signal at the end of cooking time.
6. Cook light will glow red.

8 TRY IT! USING THE TIMER

You can use the oven like a separate timer to time mixing, cooking with a range, or performing household tasks.

1. **Close oven door.**
2. Turn the **COOKING POWER CONTROL DIAL** to the **TIMER** setting.
3. Turn the **TIMER DIAL** to the time desired.
4. Push the **START BUTTON**. The oven blower and oven light will come on, the **TIMER DIAL** will move counterclockwise as time elapses, but the oven will not cook. You can estimate the amount of

time remaining by looking at the setting directly behind the **TIMER SETTING MARK**.

5. **A signal will sound when the time has elapsed.**
NOTE: When the oven is set to use the timer, the **COOKING POWER CONTROL DIAL** should not be changed from the **TIMER** position. This prevents the oven from generating any microwave energy when it is operating as a timer. Remember, do not attempt to cook when the oven is empty.

9 TRY IT! SLO COOKING

Just as some foods cook better conventionally at lower rather than higher oven temperatures, some foods cook better at lower rather than higher microwave power levels. This oven has three cooking power levels, each well-suited for different types of foods. The oven produces these power levels by cycling microwave power on and off at various time intervals. If a recipe in the cookbook that came with your oven is designed to be cooked at a lower power level, the recipe may tell you to use either the **SLO COOK** or **DEFROST** cycle. Consult the "Recipe Reading Method" section of the cookbook introduction. Other foods should be cooked at **FULL POWER**, following the recipe cooking

times and other instructions exactly as written.

1. **Place food or water in oven and close oven door.**
2. Turn the **TIMER DIAL** to the time desired.
3. Turn the **COOKING POWER CONTROL DIAL** to **SLO COOK**.
4. Push the **START BUTTON** and the oven will operate. Microwave power will cycle on for approximately 60% of the cooking time. Electric ranges operate similarly, cycling electric energy on and off to maintain a slower cooking speed.
5. **Cook light will flash on and off.**

*Per 1-liter test.

10 TRY IT! DEFROSTING

Most frozen food can be defrosted quickly by using the DEFROST cycle. Microwave power is pulsed on and off automatically. During the "on" periods (approximately 20% of the time set on the **TIMER DIAL**) the exterior of the food is heated. During the "off" periods (approximately 80% of the time set on the **TIMER DIAL**), the heat is conducted to the interior of the food, allowing uniform defrosting with little or no cooking on the exterior.

1. Place frozen food in oven and close oven door. If food is inside a plastic bag, slit the bag to allow steam to escape.
2. Turn the **TIMER DIAL** to the time desired. Start

with the shortest amount of time and increase only if needed.

3. Turn the **COOKING POWER CONTROL DIAL to DEFROST**.
4. Push the **START BUTTON** and the oven will operate.
5. The oven will stop and sound a signal at the end of defrosting time.
6. If additional defrosting is necessary, set the **TIMER DIAL** accordingly and push the **START BUTTON**.
7. Cook light will flash on and off.

11 MAINTENANCE — CLEANING THE OVEN

To Clean the Oven Door and Interior

If the inside walls, floor, door, and splatter shield at the top of the oven should become splattered, simply wipe them with a paper towel or clean with a mild detergent in warm water using a soft sponge or cloth. If desired, a cup of water can be boiled in the oven to loosen soil before cleaning. After boiling the water, allow the water vapor to settle on the oven walls and soften the soil for several minutes before you open the door.

Do not use an abrasive to clean the inside. It might damage the finish. Never pour water into the bottom of the oven.

To Clean the Splatter Shield Inside Oven

The splatter shield keeps the top of the oven and antenna from getting dirty. Normally, a damp cloth will remove any splatter from the shield. However, if you want to clean it more thoroughly, remove the splatter shield. Be careful not to bend the antenna when removing the splatter shield. The shield snaps into a lip in the front of the oven and three slots in the back. Place your thumbs in the two indentations

in the front of the shield. Press lightly towards the back and carefully lower the shield away from the antenna. Pull the shield out of the back slots and out of the oven.

Wash the shield in hot soapy water. Do not wash in a dishwasher. Do not use hard or abrasive cleansers. When replacing, again be careful not to bend the antenna. To replace, fit shield tabs into the three slots at the top of the back. Lift front until shield snaps into place.

To check antenna operation, place a glass or cup of water in the unit, close the door and start the unit. A rotating shadow should be visible above the splatter shield.

To Clean the Oven Exterior, use a soft sponge or cloth dampened with mild, sudsy water. Do not use abrasive cleaners.

To Clean the Discharge Air Vents

There will be a slight buildup of cooking vapors along the discharge louvers in the back of the oven on the right hand side. Clean the air vent with a damp cloth.

12 HOW TO CHANGE THE OVEN LIGHT



To remove bulb, turn it in the direction shown.

The lightbulb for the inside of the oven can be changed only from the back. On the upper left hand side of the oven back is a metal plate with one screw. The lightbulb is located behind this plate.

Follow these steps to change the bulb:

- a. Unplug the oven from the electrical outlet.

- b. Facing the oven back, remove the screw and remove the plate.
- c. To remove the bulb, turn it counterclockwise, being careful not to burn fingers or break the bulb.
- d. Replace the bulb with a 40 watt, 250 volt appliance bulb, which can be purchased at grocery or hardware stores. To replace bulb, turn it clockwise.
- e. Reposition the plate, being careful not to bend the hinge tab. Tighten the screw. Do not operate oven without having plate in place.
- f. Connect the oven to power outlet.

13 BEFORE YOU CALL FOR SERVICE:

Be sure you have read and followed the operating instructions. Avoid unnecessary service calls.

IF A FEATURE DOESN'T APPEAR TO BE OPERATING CORRECTLY:

- Have you followed the use and care instructions exactly? Review them to be sure.
- Is the oven plugged into a properly earthed and polarized outlet as described in the electrical requirements (page 4)? Improper installation can result in erratic operation.
- If the condition remains unchanged, perform the steps listed in the box on this page.

IF MICROWAVE POWER WON'T COME ON:

- Did you press the **START BUTTON**?
- Is the oven door securely closed?
- If the condition remains unchanged, perform the steps listed in the box on this page.

IF THE OVEN LIGHT PULSES DIMMER, THEN BRIGHTER:

- Is the line voltage to your home low or lower than usual? (The power company in your area should be able to tell you if there is a low voltage to your home.)

If condition remains unchanged, please perform the following step:

1. Check to see if a fuse or circuit breaker is open.

YOUR OVEN MUST BE ON AN EARTHED, POLARIZED CIRCUIT.

IF ROOM LIGHTS DIM OR PULSE DIMMER, THEN BRIGHTER WHEN THE OVEN IS IN USE:

- Is the microwave oven on a separate circuit? (Review electrical requirements on page 4.)

IF FOOD IS OVERCOOKED:

- Did you set the correct cooking time? (Review instructions, page 7.)

IF FOOD IS UNDERCOOKED:

- Are there other energy-consuming appliances on the same circuit as the microwave oven? (Review electrical requirements, page 4).
- Is the line voltage to your home low or lower than usual? (The power company in your area should be able to tell you if there is low voltage to your home.)
- Did you remember to select the correct cooking power level? (Review instructions, page 7.)

WHEN SERVICE IS REQUIRED:

Call nearest authorized service agency. (The dealer from whom you purchased your microwave oven can give you the name of your authorized **Amana** Service Center.) Help them give you prompt service by providing:

1. An accurate description of the trouble.
2. Complete model and serial numbers. (See page 1.)
3. Date of installation. (We also suggest you retain your sales receipt.)

Remember, repair by an unauthorized service person that results in subsequent failure will void the warranty promise.

If you have a service problem that is not resolved locally, contact:

**Export Service Department
AMANA REFRIGERATION, INC.
Amana, Iowa 52204 USA**

Telex: 464-450 Amana