

Amana™

Master Clean™

DU4000B

Dishwasher



Use and Care Manual

Read this manual carefully and keep it handy to help you operate and maintain your new dishwasher properly.

Table of Contents

Important Safety Instructions	2
Operating the Dishwasher	3-5
Checking Water Temperature	4
Choosing Detergent	4
Using a Rinse Agent	5
Preparing Dishes for Washing	5
Dishwasher-Safe Items	6
Loading the Dishwasher	7-8
Loading the Top Rack	7
Loading the Bottom Rack	8
Maintenance and Cleaning	9
Changing Front Color Panels	9
Before You Call for Service	10-12
When Service is Required	12
Warranty	12

Record in the space below the model, manufacturing (Mfg.) and serial numbers from the nameplate, which is located at the front of the left inside wall of the dishwasher.

Model No. _____

Mfg. No. _____

Serial No. _____


Date Installed _____

Sold By _____

Retain your sales receipt for proof of purchase should warranty questions arise. The receipt is required for warranty service. Complete the registration card that came with the dishwasher and return the card to Amana Refrigeration, Inc.

Amana
A Raytheon Company

A10576-2

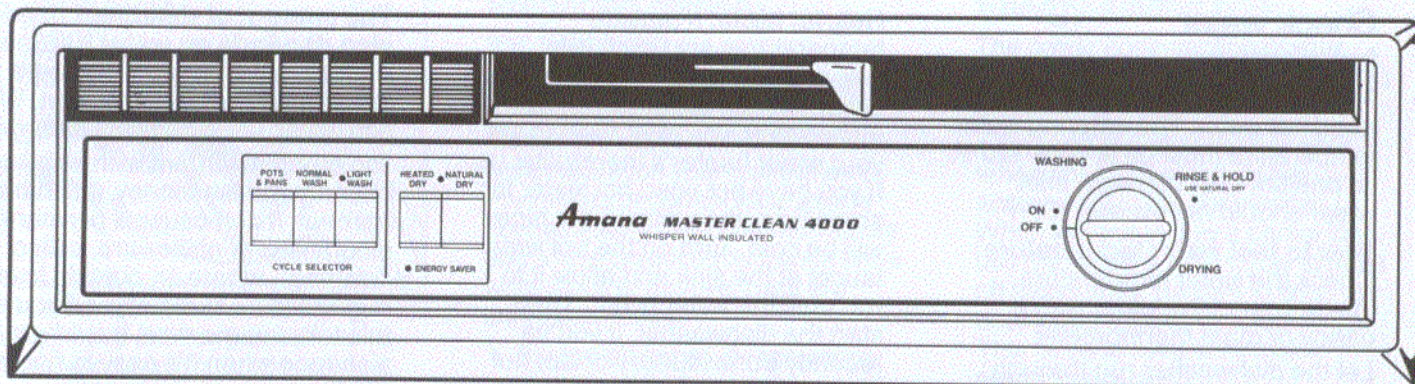


How to operate your dishwasher

• Load your dishwasher and add detergent. See loading instructions on pages 7-8. (Be sure the Cycle Indicator Dial is at the OFF position before adding detergent.)

1 Close the door and move the latch to the extreme right.

2 Select the drying option.

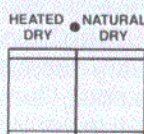

• ENERGY SAVER

HEATED DRY. Turns drying heater on for fast drying. Adds 32 minutes to wash cycle time. Available on all wash cycles except Rinse & Hold.

NATURAL DRY (no-heat drying). Saves energy because the drying cycle does not operate. Dishes dry naturally over a longer period, such as overnight. Available on all wash cycles.

If you need your dishes sooner, open the dishwasher door after the cycle is complete to reduce the natural drying time.

Use of this option reduces the electrical energy used by this model approximately 8.7% for the Normal Cycle.

You Will See Water Vapor:

- Through the vent next to the door latch when water is pumped out
- Through the vent next to the door latch during drying operations


Clicking Sounds You May Hear:

- Soft food dispenser shredding action
- Drain valve opening to pump water out
- Timer control as cycle progresses
- Detergent cup opening

3 Select the cycle and start the dishwasher.

If your dishwasher drains into a food waste disposer, operate the disposer until it is empty before starting the dishwasher. (See cycle selection hints at right.)


• POTS & PANS, NORMAL AND LIGHT WASH

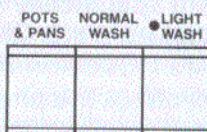

CYCLE SELECTOR

- Push selected cycle button.
- Latch the door.
- Slowly turn Cycle Indicator Dial to the ON position to start the cycle. You will hear the motor start. There is a time delay between start-up and water fill so you will not hear any wash action right away.

• RINSE & HOLD

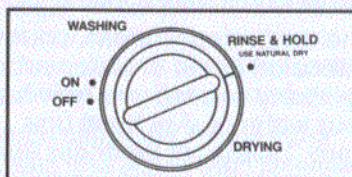

- Be sure door is unlatched.
- Select NATURAL DRY option.
- Slowly turn Cycle Indicator Dial to RINSE & HOLD position.
- Latch the door to start the cycle.

Cycle Selection Hints

• POTS & PANS—

For items such as pots, pans and casserole dishes with dried-on or baked-on soils. Everyday dishes may be included.

It is important to follow the loading instructions on pages 7-8.

NORMAL WASH—

For most loads of everyday dishes, glasses and cookware.

LIGHT WASH—

For dishes that are lightly soiled with soils that have not dried on. Also for everyday dishes that have had extra preparation before loading.

RINSE & HOLD—

For rinsing partial loads which will be washed later. *Do not use detergent.*

WASH CYCLES	Water Use Gallons (Approx.)	Cycle Sequence	Wash Cycle Time (approx. minutes)
Pots & Pans	12.72	Wash/ Rinse Rinse Rinse Wash Rinse Rinse Rinse	65
Normal Wash	12.72	Wash/ Rinse Rinse Rinse Wash Rinse Rinse Rinse	55
Light Wash	10.85	Rinse Rinse Wash Rinse Rinse Rinse	55
Rinse & Hold	3.40	Rinse Rinse	11