

# Amana™

## Master Clean™

### 5000

### Dishwasher



**Amana**  
A Raytheon Company

A1056801

## Use and Care Manual

Read this manual carefully and keep it handy to help you operate and maintain your new dishwasher properly.

### Table of Contents

- Important Safety Instructions . . . . . 2
- Operating the Dishwasher . . . . . 3-5
  - Checking Water Temperature . . . . . 4
  - Using a Rinse Agent . . . . . 4
  - Choosing Detergent . . . . . 4-5
- Preparing Dishes for Washing . . . . . 5
- Dishwasher-Safe Items . . . . . 6
- Loading the Dishwasher . . . . . 7-8
  - Loading the Top Rack . . . . . 7
  - Loading the Bottom Rack . . . . . 8
- Maintenance and Cleaning . . . . . 9
- Changing Front Color Panels . . . . . 9
- BEFORE YOU CALL FOR SERVICE . . . . . 10-12
- Warranty . . . . . 12

Record in the space below the model, manufacturing (Mfg.) and serial numbers from the nameplate, which is located at the front of the left inside wall of the dishwasher.

Model No. \_\_\_\_\_


Mfg. No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Date Installed \_\_\_\_\_

Sold By \_\_\_\_\_

Retain your sales receipt for proof of purchase should warranty questions arise. The receipt is required for warranty service. Complete the registration card that came with the dishwasher and return the card to Amana Refrigeration, Inc.

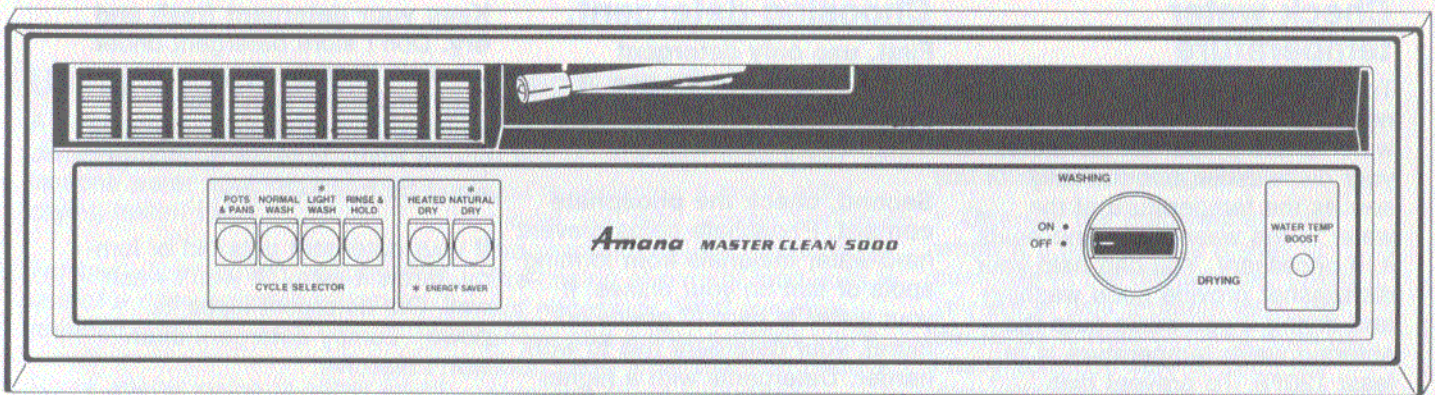


## How to operate your dishwasher

• Load your dishwasher and add detergent. See loading instructions on pages 7-8. (Be sure the Cycle Indicator Dial is at the OFF position before adding detergent.)

**1 Close door and move latch to extreme right.**

**2 Select drying option**

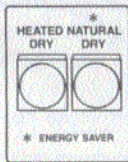

**HEATED DRY.** Turns the drying heater on for fast drying. Adds 31 minutes to wash cycle time. Available on all wash cycles except Rinse & Hold.

**NATURAL DRY (no-heat drying).** Saves energy because the drying cycle does not operate. Dishes dry naturally over a longer period, such as overnight. Available on all wash cycles.


If you need your dishes sooner, open the dishwasher door after the cycle is complete to reduce the drying time.

Use of this option reduces the electrical energy used by this model approximately 7% for Normal Cycle.

Estimated yearly savings, depending on your local electrical rates, are as follows:

Electric Rate (per Kwh)	\$ .05	\$ .08	\$ .11
Estimated Yearly Savings	\$5.11	\$8.18	\$11.25

**3 Select the cycle option.**

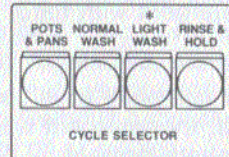

• **POTS & PANS—** For items such as pots, pans and casseroles with dried-on or baked-on soils. Everyday dishes may be included.

It is important to follow the loading instructions on pages 7-8.

**NORMAL WASH—** For loads of everyday dishes, glasses and cookware with medium soils. Designed to yield high performance on normal loads.

**LIGHT WASH—** For most loads of everyday dishes, with light soils or soils that have not dried on. It saves hot water over the higher performance cycles.

**RINSE & HOLD—** For rinsing partial loads which will be washed later. *Do not use detergent.*

**4 Start the dishwasher.**

If your dishwasher drains into a food waste disposer, operate the disposer until it is empty before starting the dishwasher.

Slowly turn the Cycle Indicator Dial to the ON position to start the cycle. You will hear the motor start.

Dishwasher will complete the cycle sequence automatically and the dial will advance to the OFF position.

### WATER TEMP BOOST LIGHT

Your dishwasher is equipped with a system to assure proper water temperature for good cleaning. During the wash cycle, a heater is energized to maintain hot water. If the hot water is not at the proper temperature at the end of the wash cycle, washing and water heating continue until the correct water temperature is reached, or up to 18 additional minutes in the main wash cycle. During the temperature boost period, the indicator light will be energized.

WASH CYCLES	Water Use Gallons (Approx.)	Cycle Sequence	Wash Cycle Time (approx. minutes)
Pot & Pans	11.4	Wash/ Rinse Rinse Rinse Wash Rinse Rinse	63*
Normal Wash	11.4	Wash/ Rinse Rinse Rinse Wash Rinse Rinse	43*
Light Wash	9.5	Wash/ Rinse Rinse Wash Rinse Rinse	43*
Rinse & Hold	3.8	Rinse Rinse	11

#### Clicking Sounds You May Hear:

- Soft food dispenser shredding action
- Drain valve opening to pump water out
- Timer control as cycle progresses
- Detergent cup opening

#### You Will See Water Vapor:

- Through the vent next to the door latch when water is pumped out
- Through the vent next to the door latch during drying operations

\*These cycle times may be increased up to 18 minutes if necessary for the dishwasher to heat the water to proper temperature for good washability. The water temp boost light will be energized during this period.