

Important Safety I

⚠ WARNING — To reduce the risk of injury to persons when using your appliance

1. Read all instructions before using the appliance.
2. As with any equipment using electric moving parts, there are potential hazards. To use this appliance safely, the operator should be familiar with the instructions for operation of the appliance and always exercise care when using it.
3. Do not install or store this appliance where it will be exposed to the weather.
4. Install and level washer on a floor that can support the weight.
5. This appliance must be properly grounded. Plug the appliance cord into a receptacle that is not grounded adequately and in accordance with local and national codes. See instructions for grounding this appliance.
6. To avoid the possibility of fire or explosion:
 - a. Do not wash items that have been cleaned in, washed in, soaked in, or treated with gasoline, dry-cleaning solvents, or other flammable or explosive substances as they may ignite or explode. Hand-dry any items containing these substances.

Any material on which you have spilled gasoline, oil, or other liquids or solids, should not be placed until all traces of these liquids or solids have been removed.

These items include acetone, degreasers, gasoline, kerosene, some liquid detergents, some spot removers, turpentine, and wax removers.
 - b. Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances may ignite or explode.
 - c. Under certain conditions, hydrogen sulfide gas is produced in a hot water system used for 2 weeks or more. **HYDROGEN SULFIDE IS EXPLOSIVE.** If the hot water

ctions

explosion, electric shock, property damage or injury may occur if you do not follow the following basic precautions, including the following:

7. Do not reach into the appliance if the agitator is moving.
8. Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
9. Do not tamper with controls.
10. Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in published user-repair instructions that you understand and have the skills to carry out.
11. Unplug power supply cord before attempting to service your washer.
12. The agitator should not be removed. If the agitator is removed, it must be replaced by pushing down completely and the locking screw tightened before the washer is operated.
13. Store laundry aids and other material in a cool, dry place where children cannot reach them.
14. Do not wash or dry items that are soiled with vegetable or cooking oil. These items may contain some oil after laundering. Due to the remaining oil, the fabric may smoke or catch fire by itself.
15. Do not use chlorine bleach and ammonia or acids (such as vinegar or rust remover) in the same wash. Hazardous fumes can form.
16. Do not machine wash fiberglass materials. Small particles can stick to fabrics washed in following loads and cause skin irritation.
17. Before the appliance is removed from service or discarded, remove the door to the washing compartment.

Sa

ese Instructions



Controls At A Glance

Step 1 Select Cycle

Press the control dial in and turn in either direction to the desired cycle. Pull the dial out to start the washer.

WHITES is designed to clean underwear, T-shirts and other cotton sturdy items like towels, sheets, jeans etc.

EXTRA HEAVY: 27 minutes of wash time

HEAVY: 21 minutes of wash time.


NORMAL: 15 minutes of wash time.

LIGHT: 9 minutes of wash time.

DELICATES is designed to clean items requiring a gentle wash action. This would include blouses, nylons, lingerie and dress shirts.

NORMAL: 15 minutes of wash and soak cleaning action.

LIGHT: 9 minutes of wash and soak cleaning action.

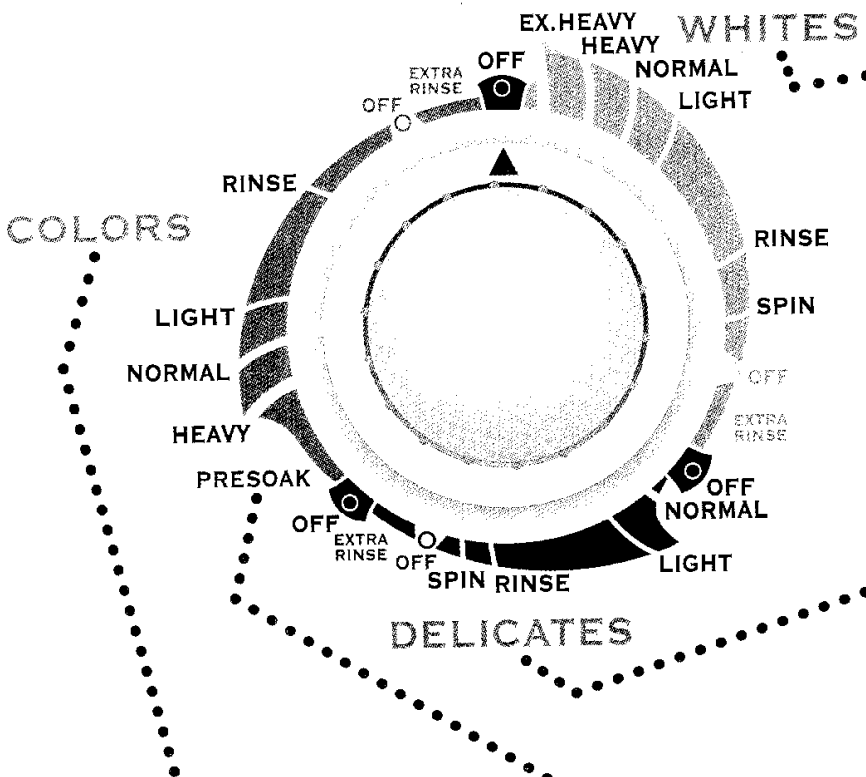

COLORS is designed to clean colored items as well as dress shirts, dress pants, business casual and poly/cotton to reduce wrinkling.

HEAVY: 18 minutes of wash time.

NORMAL: 12 minutes of wash time.

LIGHT: 9 minutes of wash.

NOTE: HEAVY and NORMAL settings on the COLORS cycle will change agitation speeds during the wash time if no CUSTOMIZE CYCLE options are chosen (see pg. 3). You may hear this change in speed. This is normal.

PRESOAK allows for a total of 33 minutes wash time. The first 12 minutes are periods of agitation and soak followed by 21 minutes of agitation. PRESOAK automatically advances through the wash cycle.




Controls At A Glance (continued)

Step 2 Select Water Level

Move the infinite slide lever up or down to the desired setting or any point in between. If more water is needed once the fill is complete, move the lever up to **reset** and then to the proper setting.

LOAD SIZE	
3/4 - Full SUPER
1/2 - 3/4 Full LARGE
1/3 - 1/2 Full MEDIUM
1/4 Full MINI

WATER LEVEL

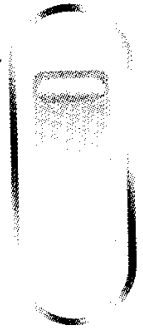


REMEMBER: Items must circulate freely for best results.

Step 3 Select Water Temperature

Press the appropriate button to select the wash and rinse temperatures. Follow the garment care label for best results. Use the chart at the right as a guide.

LOAD TYPE	
White and heavily soiled, color-fast items HOT COLD
Delicate or colorfast items WARM WARM
Moderately soiled, colored items; most wrinkle free items WARM COLD
Brightly colored, lightly soiled items; washable woolens COLD COLD

WASH/RINSE

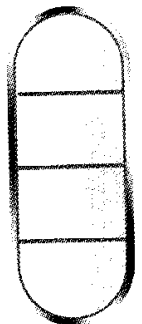

REMEMBER: In wash water temperatures below 65° F, detergents do not dissolve well or clean well. Care labels define cold water as up to 85° F.

If **Auto Temperature Control** is selected with a Warm/Warm, Warm/Cold, or Cold/Cold water temperature setting, the light will illuminate during the first fill.


AUTO TEMPERATURE CONTROL

Step 4 Select A Customized Cycle

Press the appropriate button(s) to select one or more options.


CYCLE	USE
Super Wash	Can be used with any wash cycle to clean very heavily soiled items. Provides fast agitation and spin throughout all cycles.
Gentle Wash	Can be used with any wash cycle to provide a normal agitation and spin. Use with delicate items including those labeled "Hand Wash."
Auto Temperature Control	Assures a cold water wash of 75° F and warm water wash of 95° F. This option assures detergent will dissolve and provide optimum cleaning results.
Cancel	Press this button to cancel and reset any of the above options.

CUSTOMIZE CYCLE

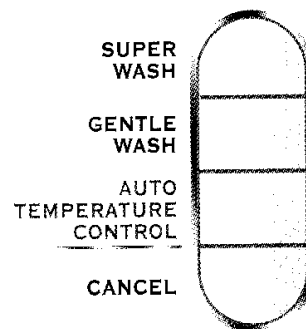


CYCLE	USE
Extra Rinse	Provides an additional rinse at the end of the cycle to more completely remove laundry additives, suds, perfume, etc.
Remind Chime	When this option is selected, an end-of-cycle reminder chime will sound every 4 minutes after the cycle is completed. To cancel chime, push the control knob in, press the CANCEL button OR Set CHIME Switch to OFF. (See pg. 5)
Clean Light	When this option is selected, the CLEAN indicator light will illuminate at the end of the cycle. If the button is deselected, the light will remain inactive.
● CLEAN	<i>Note: The CLEAN light may illuminate if the washer is stopped for soaking (pushing the control knob in) after the fill is complete. When the washer is restarted, the light will turn off. The CLEAN light will reilluminate when the cycle is complete.</i>
Cancel	Press this button to cancel and reset any of the above options.

CUSTOMIZE CYCLE

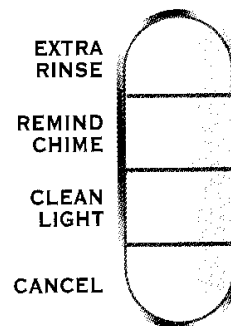

5 Start Washer

 - Add detergent
- Add load and close lid
- Pull the control dial out to start



Operating Tips


Chlorine Bleach Dispenser

The dispenser automatically dilutes liquid chlorine bleach before it reaches your wash load. To use, follow these steps:

1. Measure liquid chlorine bleach carefully, following the instructions on the bottle.
2. Add the bleach to the dispenser before adding the load. Avoid splashing or over-filling the dispenser.

NOTE:

- Never pour undiluted liquid chlorine bleach directly onto the load or into the wash tub. It is a powerful chemical and can cause fabric damage, such as tearing or color loss, if not used properly.
- If you prefer to use color-safe, non-chlorine bleach, pour it into the wash tub with your detergent. Do not pour non-chlorine bleaches into the bleach dispenser.

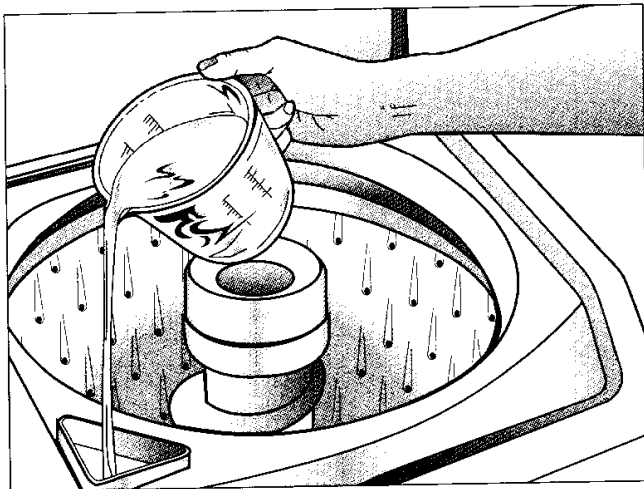

Pour liquid chlorine bleach into bleach dispenser.


Fabric Softener Dispenser

This dispenser automatically releases liquid fabric softener at the proper time during the cycle. To use, follow these steps:

1. Pour liquid fabric softener into the dispenser using the amount recommended on the package.
2. Add warm water to the dispenser until it reaches the MAX line.

NOTE:

- Do not stop the washer during the first spin. This will cause the dispenser to empty too soon.
- Never pour fabric softener directly on the load. It will leave spots and stains.
- Use the dispenser for liquid fabric softeners only. Clean the area in and around the dispenser frequently with hot water, detergent and a soft brush.

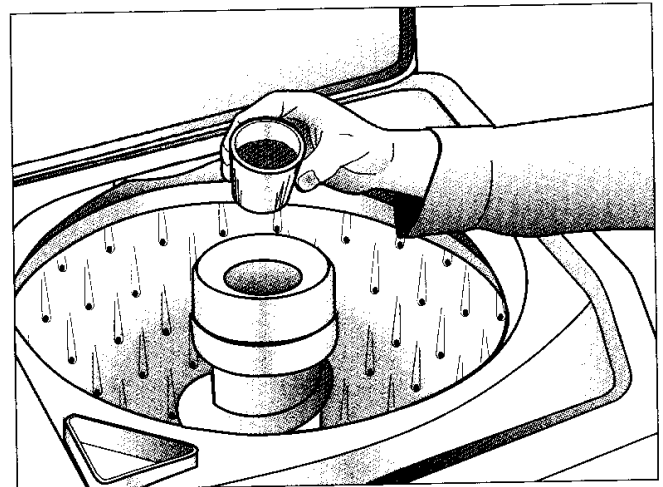

Pour liquid fabric softener into cup and dilute with warm water.

For detailed information on sorting, pretreating stains, etc., see the enclosed Laundry Tips pamphlet.


Detergent

- Use either liquid or granular laundry detergent. **For best results, be sure detergent is added to the washer BEFORE the load and be sure wash water is above 65° F.**

- Use the correct amount of detergent for the load size, soil level and water conditions. Use more detergent if you have hard water and very soiled loads.


If you have soft water or a lightly soiled load, use less detergent. (See manufacturer's instructions.)

- Wipe up any detergent spills on the washer.

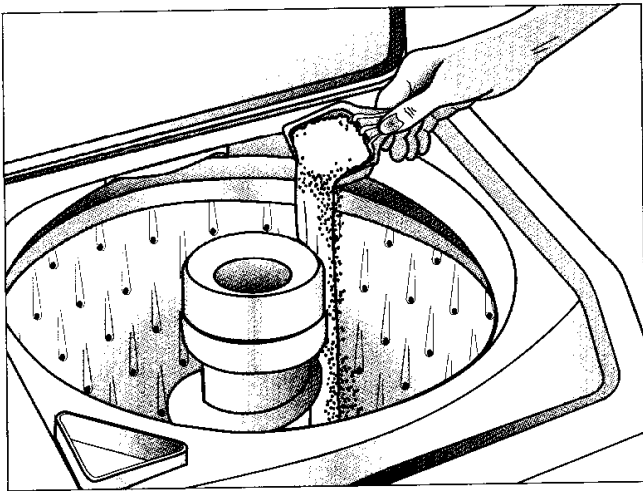

Loading

- Put dry, unfolded clothes loosely in the tub, up to the top row of holes for a maximum load.
- Do not wrap large items like sheets around the agitator.
- Mix large and small items for best circulation. Wash bulky items like blankets separately.
- When laundering wrinkle free items or items of delicate construction, washable woolens or loosely knit items, never use less than the MEDIUM water level setting. This will minimize shrinkage, wrinkling and pulling of seams.
- For best results, add the detergent to washtub before adding the load.

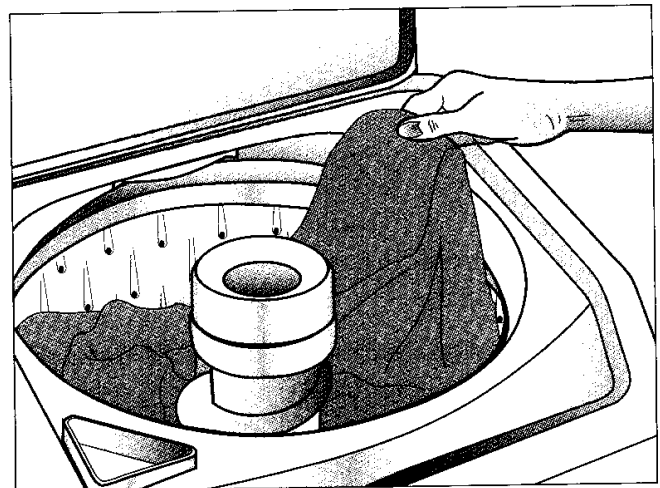


Fingertip Faucet

This feature is found on the lower right corner of the control panel. Pushing and releasing the switch will allow 5-7 seconds of cold water to flow from the water dispenser to pretreat spots/stains or heavily soiled areas. If the washer has stopped filling because the selected water level has been reached, this feature will not work. This prevents water from overflowing. To activate the switch, reset to a higher water level selection and then press the switch.



Adjustable Chime

The end-of-cycle CHIME will sound once when the cycle is completed. The volume of the chime can be set on HI or LO, or turned completely OFF by setting the switch in the upper right-hand corner of the control panel. The chime can also be set to sound once every 4 minutes until it is manually turned off. (See Step 4 Select a Customized Cycle, pg. 3)

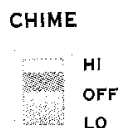



Using the 30 Day Detergent Dispenser

Filling Dispenser

- 1) Unscrew the dispenser fill cap (figure 1).
- 2) Pour in your favorite liquid detergent, *up to 100 fluid ounces* at one time.
- 3) Replace the dispenser fill cap.
- 4) Close the washer lid.
- 5) Open the washer lid.

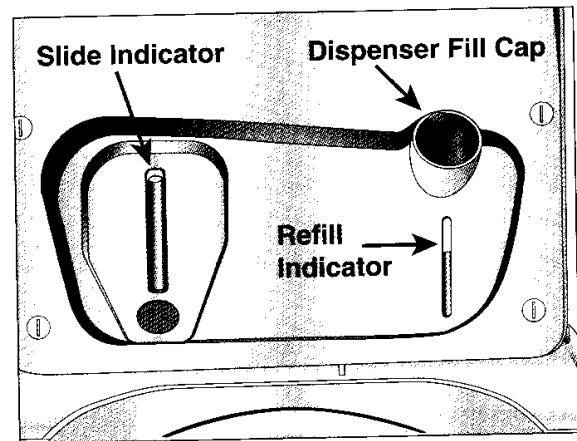


Figure 1

Note: Steps 7 and 8 only need to be done ONCE when first filling the dispenser or changing brands of detergent.

- 6) Move the slide indicator all the way to the top (figure 1). Next, follow steps 7 and 8 to set the amount of detergent used for the average load.
- 7) Place the cap of your detergent bottle under the "PUSH" button. Fill the cap with detergent from the dispenser as full as you would for most of your loads by pressing and holding the "PUSH" button (figure 2). Place the detergent from the cap either in the tub or back in the dispenser by removing the dispenser fill cap.
- 8) Move the slide indicator to the level of the liquid in the sight glass (figure 3). For your next load of laundry, just press and hold the "PUSH" button until the detergent moves down to the slide indicator to dispense detergent directly into the tub.
- 9) The sight glass on the right side shows how much detergent remains in the dispenser. Refill the dispenser when the detergent level nears the bottom of the refill indicator window.

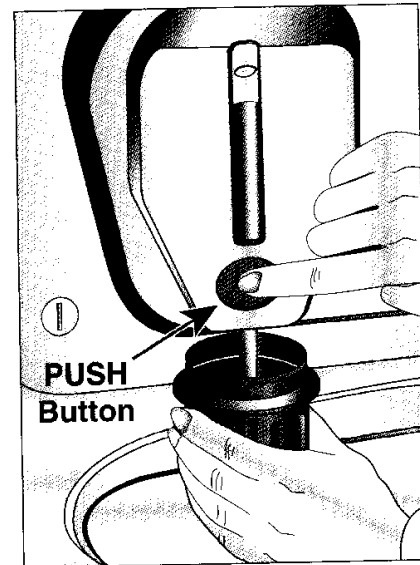


Figure 2

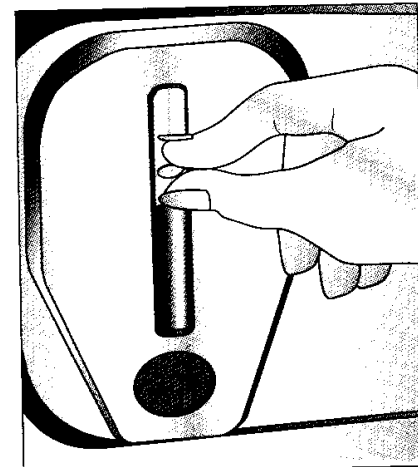


Figure 3

Note: If you decide to change brands of liquid detergent (Example: Tide® to Wisk® or Tide with Bleach Alternative® to Tide®) it is important the dispenser be empty and clean before adding new detergent (see page 7). Different detergents may interact and clog the dispenser.

To Remove the Dispenser for Cleaning

- 1) Support the bottom of the dispenser with one hand. Use a quarter and turn four slotted screws counter clockwise 1/4 turn (figure 4).
- 2) Pull the dispenser out from the bottom of the lid.
- 3) Remove fill cap.
- 4) Fill with water about half way. Move the dispenser from side to side to wash out detergent.
- 5) With the dispenser over a large sink or bath tub, turn it upside down to empty the water/detergent out of the dispenser fill area.

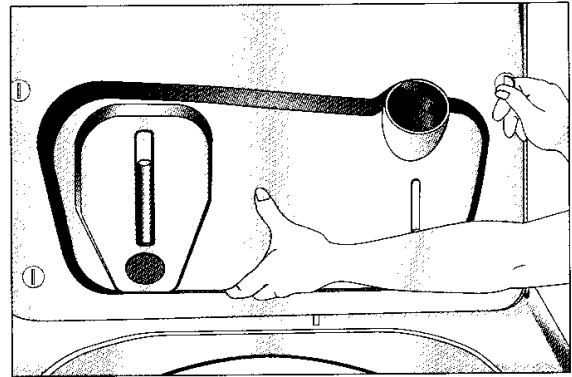


Figure 4

To Replace the Dispenser

- 1) Place the top of the dispenser in the top lip of the lid.
- 2) Push the bottom of the dispenser into the bottom of the lid.
- 3) While supporting the bottom, use a quarter and turn each of the four screws 1/4 turn clockwise to lock the dispenser into place.
- 4) Close the washer lid.
- 5) Open the washer lid.
- 6) Press the "PUSH" button to release any remaining water/detergent. Repeat steps 4–6 until no more water can be drained from the dispenser. It is normal for a small amount of water to remain in the dispenser after cleaning.
- 7) Refill the dispenser with your favorite detergent (see page 6).



Care and Cleaning

Turn off the water faucets after finishing the day's washing. This will shut off the water supply to the washer and prevent the unlikely possibility of damage from escaping water.

Use a soft cloth to wipe up all detergent, bleach or other spills as they occur.

Clean the following as recommended:

Control Panel – clean with a soft, damp cloth and glass cleaner. Do not use abrasive powders or cleaning pads.

Cabinet – clean with soap and water.

Interior – hard water deposits may be removed, if needed, using a recommended cleaner labeled washer safe.



Storing the Washer

Washers can be damaged if water is not removed from hoses and internal components before storage. Prepare the washer for storage as follows:

- Select **NORMAL** on the **WHITES** cycle and add one cup of bleach OR white vinegar to a full load of water without clothes. Run the washer through a complete cycle. (Do not mix bleach and vinegar in the same wash. Hazardous fumes can form.)
- Turn the water faucets off and disconnect the inlet hoses.
- Advance the cycle control dial to **Spin** and lower the drain hose to eliminate any water that may be in the drain hose.
- Disconnect the washer from the electrical supply and leave the washer lid open to let air circulate inside the tub.



Before You Call.....

For problem laundry solutions (i.e. fabric damage, residue, tangling) and special laundry care procedures, see the enclosed Laundry Tips pamphlet.

Check these points if your washer...

Always Check First	<ul style="list-style-type: none"> • Plug cord into live electrical outlet. • Check fuse or reset circuit breaker.
Won't Fill	<ul style="list-style-type: none"> • Turn the control dial to proper cycle and pull dial out to start the washer. If equipped with buttons, be sure they are fully depressed. • Turn both faucets on fully. • Straighten inlet hoses. • Disconnect hoses and clean screens. Hose filter screens may be plugged.
Won't Agitate	<ul style="list-style-type: none"> • Turn the control dial to proper cycle and pull dial out to start the washer. If equipped with buttons, be sure they are fully depressed. • Close lid and pull dial out to start the washer. For your safety, washer will not agitate or spin unless the lid is closed. • The washer is equipped with a lid switch failure detector. If the lid switch should malfunction, the detector will stop operations for your safety. Call for service. • Pauses are normal. Wait and see if the washer will start again.
Won't Spin or Drain	<ul style="list-style-type: none"> • Straighten drain hoses. Eliminate kinked hoses. If there is a drain restriction, call for service. • Close lid and pull dial out to start the washer. For your safety, washer will not agitate or spin unless the lid is closed. • The washer is equipped with a lid switch failure detector. If the lid switch should malfunction, the detector will stop operations for your safety. Call for service.
Fingertip Faucet will not Operate	<ul style="list-style-type: none"> • The water level switch has detected a full tub. No more water will be added to prevent the tub from over-flowing.
Stops	<ul style="list-style-type: none"> • Turn the control dial to proper cycle and pull dial out to start the washer. If equipped with buttons, be sure they are fully depressed. • Close lid and pull dial out to start the washer. For your safety, washer will not agitate or spin unless lid is closed. • This may be a pause or soak period in the cycle. Wait briefly and it may start. • The washer is equipped with a lid switch failure detector. If the lid switch should malfunction, the detector will stop fill operations for your safety. Call for service.
Leaks Water	<ul style="list-style-type: none"> • Make sure hose connections are tight. • Make sure end of drain hose is correctly inserted and secured to drain facility. • Avoid extended soaking – soak for 30 minutes or less. • Avoid overloading.
Is Noisy	<ul style="list-style-type: none"> • Be sure washer is leveled properly as outlined in installation manual. • Weak floors can cause vibration and walking. • Be sure rubber feet are installed on leveling legs.
Fills with the Wrong Temperature Water	<ul style="list-style-type: none"> • Turn both faucets on fully. • Make sure temperature selection is correct. • If Auto Temperature Control is selected, cold water may feel warmer than cold water from the tap (see page 3). • Make sure hoses are connected to correct faucets and inlet connections. Be sure water supply is regulated correctly. Flush water line before filling washer. • Check the water heater. It should be set to deliver a minimum 120°F (49°C) hot water at the tap. Also check water heater capacity and recovery rate. • Disconnect hoses and clean screens. Hose filter screens may be plugged.
Cycle Selector Dial Advances Through "OFF"	<ul style="list-style-type: none"> • Extra Rinse is selected.