

**WARNING:** If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- WHAT TO DO IF YOU SMELL GAS
  - Do not try to light any appliance.
  - Do not touch any electrical switch; do not use any phone in your building.
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
  - If you cannot reach your gas supplier, call the fire department.
  - Extinguish any open flame.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

- SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE -

## About Your Jenn-Air Wall Oven

Congratulations on your choice of a Jenn-Air electronic gas combo wall oven.

Before you begin cooking with your new gas combo wall oven, please take a few minutes to read and become familiar with the instructions in this book. On the following pages you will find a wealth of information regarding all aspects of using your new oven. By following the instructions carefully, you will be able to fully enjoy and properly maintain your oven and achieve excellent results with the food you prepare.

Should you have any questions about using your Jenn-Air gas wall oven, write to us. Be sure to provide the model number.

**Jenn-Air Customer Assistance**  
**c/o Maytag Customer Service**  
P.O. Box 2370  
Cleveland, TN 37320-2370

## INDEX

Baking .....	General Recommendations .....	17-18
Broiling .....		21-22
Caring Tips .....	Adjusting Oven Temperature .....	29
	Fault Codes .....	29
	How to Remove Oven for Cleaning or Servicing ...	28
	Light Bulb Replacement .....	27
Cleaning .....	Other Cleaning Tips .....	27-28
	Self-Cleaning Process .....	23-26
Oven Operation .....	Clock Controlled Baking or Roasting .....	15-16
	Clock Setting .....	10
	Control Panel .....	8-9
	Ignition System .....	12
	Oven Burner .....	12
	Oven Fan .....	12
	Oven Operation, Baking or Roasting .....	13
	Oven Vent .....	12
	Rack Positions .....	14
	Timer .....	11
Roasting .....	General Recommendations .....	19-20
Safety Precautions .....		2 & 4-7
Service Information .....		30-31

## IMPORTANT SAFETY INSTRUCTIONS

### Read before operating your Gas Wall Oven

All appliances, regardless of the manufacturer, have the potential through improper or careless use to create safety problems. Therefore the following safety precautions should be observed.

#### GENERAL SAFETY

**CAUTION:** Some cabinets and building materials are not designed to withstand the heat produced by the normal safe operation of a cooking appliance. Discoloration or damage, such as delamination, may occur. Therefore, care should be given to the location of this appliance.

- **Be sure all packing materials are removed from the appliance** before operating it to prevent fire or smoke damage should the packing material ignite.
- **Have your appliance installed and properly grounded by a qualified installer**, in accordance with the Installation Instructions. Any adjustment or service should be performed only by a qualified installer or servicer.
- **Have the installer show you the location of the gas shut off valve and how to shut it off in an emergency.**
- A faint gas odor may indicate a gas leak. If a gas odor is detected shut off the gas supply to the oven. Call your installer or local gas company to have the possible leak checked. **Never use a match or other flame to locate a gas leak.**
- **No cooking appliance should be used as a space heater to heat or warm a room.** This instruction is based on safety considerations to prevent potential hazard to the consumer as well as damage to the appliance.
- **Don't attempt to repair or replace any part of your appliance unless it is specifically recommended in this book.** All other servicing should be referred to a qualified servicer.
- **Always disconnect power to appliance before servicing.**
- **Keep area around appliance clear and free from combustible materials, gasoline, and other flammable vapors and materials.**
- **Many aerosol-type spray cans are EXPLOSIVE** when exposed to heat and may be highly flammable. Avoid their use or storage near an appliance.
- **Keep all controls "OFF" when oven is not in use.**

## IMPORTANT SAFETY INSTRUCTIONS

### ABOUT YOUR APPLIANCE

- Your appliance is vented through an opening at the bottom of the control panel. **Never block oven vent or air intakes. Do not obstruct the flow of combustion and ventilation air.** Restriction of air flow to the burner prevents proper performance.
- **Avoid touching oven vent area while oven is on and for several minutes after oven is turned off.** Some parts of the vent and surrounding area become hot enough to cause burns.
- **Do not use oven as a storage area for food or cooking utensils.** This instruction is based on safety considerations to prevent potential hazard to user and to the appliance.
- **Misuse of appliance doors, such as stepping, leaning or sitting on the door, may result in possible tipping of the appliance, breakage of door, and serious injuries.**
- **CAUTION:** Do not use an appliance as a step stool to cabinets above.

### CLEANING SAFETY:

- **Turn off all controls and wait for appliance parts to cool before touching or cleaning them.**
- **Clean appliance with caution.** If a wet sponge or cloth is used to wipe spills on a hot cooking area, be careful to avoid steam burns. Some cleaners can produce noxious fumes if applied to a hot surface.
- **Touching a hot oven light bulb with a damp cloth could cause the bulb to break.** Should the bulb break, disconnect power to the oven before trying to remove the bulb to avoid electrical shock.
- **Do not clean door gasket.** The door gasket is essential for a good seal. Care should be taken not to rub, damage, or move the gasket.
- **Do not use oven cleaners.** No commercial cleaner or oven liner protective coating of any kind should be used in or around any part of the oven.

### COOKING SAFETY:

- **Never heat an unopened container in the oven.** Pressure build-up may cause container to burst resulting in serious personal injury or damage to the appliance.
- **Always place oven racks in the desired positions while oven is cool.** If a rack must be moved while hot, be careful to avoid contact of pot holders with oven burner flame.
- **Slide oven rack out to add or remove food, using dry, sturdy pot holders.** Always avoid reaching into oven to place or remove food.

## IMPORTANT SAFETY INSTRUCTIONS

### Read before operating your Gas Wall Oven

All appliances, regardless of the manufacturer, have the potential through improper or careless use to create safety problems. Therefore the following safety precautions should be observed.

#### GENERAL SAFETY

**CAUTION:** Some cabinets and building materials are not designed to withstand the heat produced by the normal safe operation of a cooking appliance. Discoloration or damage, such as delamination, may occur. Therefore, care should be given to the location of this appliance.

- **Be sure all packing materials are removed from the appliance** before operating it to prevent fire or smoke damage should the packing material ignite.
- **Have your appliance installed and properly grounded by a qualified installer**, in accordance with the Installation Instructions. Any adjustment or service should be performed only by a qualified installer or servicer.
- **Have the installer show you the location of the gas shut off valve and how to shut it off in an emergency.**
- A faint gas odor may indicate a gas leak. If a gas odor is detected shut off the gas supply to the oven. Call your installer or local gas company to have the possible leak checked. **Never use a match or other flame to locate a gas leak.**
- **No cooking appliance should be used as a space heater to heat or warm a room.** This instruction is based on safety considerations to prevent potential hazard to the consumer as well as damage to the appliance.
- **Don't attempt to repair or replace any part of your appliance unless it is specifically recommended in this book.** All other servicing should be referred to a qualified servicer.
- **Always disconnect power to appliance before servicing.**
- **Keep area around appliance clear and free from combustible materials, gasoline, and other flammable vapors and materials.**
- **Many aerosol-type spray cans are EXPLOSIVE** when exposed to heat and may be highly flammable. Avoid their use or storage near an appliance.
- **Keep all controls "OFF" when oven is not in use.**

## IMPORTANT SAFETY INSTRUCTIONS

### ABOUT YOUR APPLIANCE

- Your appliance is vented through an opening at the bottom of the control panel. **Never block oven vent or air intakes. Do not obstruct the flow of combustion and ventilation air.** Restriction of air flow to the burner prevents proper performance.
- **Avoid touching oven vent area while oven is on and for several minutes after oven is turned off.** Some parts of the vent and surrounding area become hot enough to cause burns.
- **Do not use oven as a storage area for food or cooking utensils.** This instruction is based on safety considerations to prevent potential hazard to user and to the appliance.
- **Misuse of appliance doors, such as stepping, leaning or sitting on the door, may result in possible tipping of the appliance, breakage of door, and serious injuries.**
- **CAUTION:** Do not use an appliance as a step stool to cabinets above.

### CLEANING SAFETY:

- **Turn off all controls and wait for appliance parts to cool before touching or cleaning them.**
- **Clean appliance with caution.** If a wet sponge or cloth is used to wipe spills on a hot cooking area, be careful to avoid steam burns. Some cleaners can produce noxious fumes if applied to a hot surface.
- **Touching a hot oven light bulb with a damp cloth could cause the bulb to break.** Should the bulb break, disconnect power to the oven before trying to remove the bulb to avoid electrical shock.
- **Do not clean door gasket.** The door gasket is essential for a good seal. Care should be taken not to rub, damage, or move the gasket.
- **Do not use oven cleaners.** No commercial cleaner or oven liner protective coating of any kind should be used in or around any part of the oven.

### COOKING SAFETY:

- **Never heat an unopened container in the oven.** Pressure build-up may cause container to burst resulting in serious personal injury or damage to the appliance.
- **Always place oven racks in the desired positions while oven is cool.** If a rack must be moved while hot, be careful to avoid contact of pot holders with oven burner flame.
- **Slide oven rack out to add or remove food, using dry, sturdy pot holders.** Always avoid reaching into oven to place or remove food.

## IMPORTANT SAFETY INSTRUCTIONS

- **Use dry, sturdy pot holders.** Damp pot holders may cause burns from steam. Dish towels or other substitutes should never be used as pot holders because they can trail across hot burners and ignite or get caught on appliance parts.
- **Use care when opening oven door.** Let hot air or steam escape before removing or replacing food.
- **Use caution when wearing garments made of flammable material to avoid clothing fires.** Loose fitting or long hanging-sleeved apparel should not be worn while cooking. Clothing may ignite or catch utensil handles.
- **Do not let cooking grease or other flammable materials accumulate in or near the appliance.**
- **In the event of a grease fire do not attempt to move pan.**
- **Do not use water on grease fires.** Never pick up a flaming pan. Turn off burner, then smother flaming pan by covering pan completely with a lid, cookie sheet or flat tray. Or, extinguish flame by covering with baking soda or, if available, a multi-purpose dry chemical or foam-type fire extinguisher.
- **Spills or boilovers which contain grease should be cleaned up as soon as possible.** If they are allowed to accumulate, they could create a FIRE HAZARD.
- **If a grease fire occurs in the oven or in the broiler pan,** turn oven off and keep door closed to contain fire until it extinguishes.
- Always remove soiled broiler pan from the broiler compartment after cooking **for grease left in the pan may become hot enough to ignite.**

### PREPARED FOOD WARNING:

- **Follow food manufacturer's instructions.** If a plastic frozen food container and/or its cover distorts, warps, or is otherwise damaged during cooking, immediately discard the food and its container. The food could be contaminated.

### UTENSIL SAFETY:

- **Many plastics are vulnerable to heat.** Keep plastics away from parts of the appliance that may become warm or hot.
- **When using cooking or roasting bags in oven,** follow the manufacturer's directions.
- **Use only glass cookware that is recommended** for use in the oven.

## IMPORTANT SAFETY INSTRUCTIONS

- This appliance has been tested for safe performance using conventional cookware. Do not use any devices or accessories that are not specifically recommended in this manual. Do not use add-on oven convection systems. The use of devices or accessories that are not expressly recommended in this manual can create serious safety hazards, result in performance problems, and reduce the life of the components of the appliance.

### CHILD SAFETY:

- **Do not leave children alone or unsupervised near the appliance when it is in use or is still hot.**
- **Children should never be allowed to sit or stand on any part of the appliance.**
- **Children must be taught that the appliance and utensils in it can be hot.** Let hot utensils cool in a safe place, out of reach of small children.
- **Children should be taught that an appliance is not a toy.**
- **Children should not be allowed to play with controls or other parts of the unit.**
- **CAUTION: Do not store items of interest to children in cabinets above an appliance. Children climbing on the appliance to reach items could be seriously injured.**

### IMPORTANT SAFETY NOTICE AND WARNING

The California Safe Drinking Water and Toxic Enforcement Act of 1986 (Proposition 65) requires the Governor of California to publish a list of substances known to the State of California to cause cancer or reproductive harm, and requires businesses to warn customers of potential exposures to such substances.

Users of this appliance are hereby warned that the burning of gas can result in low-level exposure to some of the listed substances, including benzene, formaldehyde and soot, due primarily to the incomplete combustion of natural gas or liquid petroleum (LP) fuels. Properly adjusted burners will minimize incomplete combustion. Exposure to these substances can also be minimized by properly venting the burners to the outdoors.

## SAVE THESE INSTRUCTIONS

## IMPORTANT SAFETY INSTRUCTIONS

- **Use dry, sturdy pot holders.** Damp pot holders may cause burns from steam. Dish towels or other substitutes should never be used as pot holders because they can trail across hot burners and ignite or get caught on appliance parts.
- **Use care when opening oven door.** Let hot air or steam escape before removing or replacing food.
- **Use caution when wearing garments made of flammable material to avoid clothing fires.** Loose fitting or long hanging-sleeved apparel should not be worn while cooking. Clothing may ignite or catch utensil handles.
- **Do not let cooking grease or other flammable materials accumulate in or near the appliance.**
- **In the event of a grease fire do not attempt to move pan.**
- **Do not use water on grease fires.** Never pick up a flaming pan. Turn off burner, then smother flaming pan by covering pan completely with a lid, cookie sheet or flat tray. Or, extinguish flame by covering with baking soda or, if available, a multi-purpose dry chemical or foam-type fire extinguisher.
- **Spills or boilovers which contain grease should be cleaned up as soon as possible.** If they are allowed to accumulate, they could create a FIRE HAZARD.
- **If a grease fire occurs in the oven or in the broiler pan,** turn oven off and keep door closed to contain fire until it extinguishes.
- Always remove soiled broiler pan from the broiler compartment after cooking **for grease left in the pan may become hot enough to ignite.**

### PREPARED FOOD WARNING:

- **Follow food manufacturer's instructions.** If a plastic frozen food container and/or its cover distorts, warps, or is otherwise damaged during cooking, immediately discard the food and its container. The food could be contaminated.

### UTENSIL SAFETY:

- **Many plastics are vulnerable to heat.** Keep plastics away from parts of the appliance that may become warm or hot.
- **When using cooking or roasting bags in oven,** follow the manufacturer's directions.
- **Use only glass cookware that is recommended** for use in the oven.

## IMPORTANT SAFETY INSTRUCTIONS

- This appliance has been tested for safe performance using conventional cookware. Do not use any devices or accessories that are not specifically recommended in this manual. Do not use add-on oven convection systems. The use of devices or accessories that are not expressly recommended in this manual can create serious safety hazards, result in performance problems, and reduce the life of the components of the appliance.

### CHILD SAFETY:

- **Do not leave children alone or unsupervised near the appliance when it is in use or is still hot.**
- **Children should never be allowed to sit or stand on any part of the appliance.**
- **Children must be taught that the appliance and utensils in it can be hot.** Let hot utensils cool in a safe place, out of reach of small children.
- **Children should be taught that an appliance is not a toy.**
- **Children should not be allowed to play with controls or other parts of the unit.**
- **CAUTION: Do not store items of interest to children in cabinets above an appliance. Children climbing on the appliance to reach items could be seriously injured.**

### IMPORTANT SAFETY NOTICE AND WARNING

The California Safe Drinking Water and Toxic Enforcement Act of 1986 (Proposition 65) requires the Governor of California to publish a list of substances known to the State of California to cause cancer or reproductive harm, and requires businesses to warn customers of potential exposures to such substances.

Users of this appliance are hereby warned that the burning of gas can result in low-level exposure to some of the listed substances, including benzene, formaldehyde and soot, due primarily to the incomplete combustion of natural gas or liquid petroleum (LP) fuels. Properly adjusted burners will minimize incomplete combustion. Exposure to these substances can also be minimized by properly venting the burners to the outdoors.

## SAVE THESE INSTRUCTIONS

# Oven Operation


## Oven Control Panel

The control panel is designed for ease in programming. The Display Window features Indicator Words which describe the functions set.

### To program:

1. Touch the function pad to give command desired.
2. Turn the Set Dial to enter time or temperature.

**NOTE:** Three seconds after turning dial, time or temperature will automatically be entered. If more than 30 seconds elapse between touching a pad and turning set dial, control is not set and Display will return to previous Display.

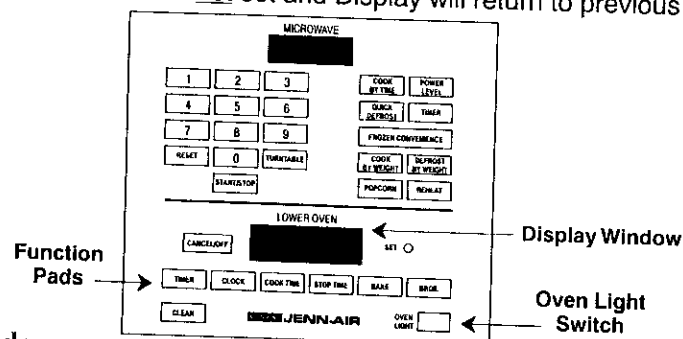

### Function Pads:

**BAKE** Use for baking or roasting.

**CLEAN** Use to set self-cleaning process.

**BROIL** Use for top browning or oven broiling.

**CANCEL/OFF** Cancels all programming except Timer and Clock.

**COOK TIME** Use for clock controlled cooking.

**CLOCK** Use to set time of day.

**STOP TIME** Use for clock controlled cooking and cleaning when delayed start is desired.

**TIMER** Use to signal expiration of a time period up to 9 hours and 55 minutes.

**Set Dial:** Use to set time, temperature, or to select Hi or Lo Broil.

**Display Window:** Shows time of day, timer, and oven functions.

**Oven Light Switch (Control Panel - lower right corner):** The oven light automatically turns on whenever the oven door is opened. When door is closed, push in oven light switch to turn oven light on or off.

### Display Numerals:

- Show time of day.
- Countdown of time remaining when using time functions.
- Show temperature of oven as it rises to reach programmed temperature and the set temperature once it is reached.
- Serve as a reminder to shut oven door, if it is open, for self-cleaning operation when the word, *door*, is displayed.
- Recall programmed temperature or time when commanded.

### Indicator Words:

- Flash to prompt next step.
- Indicate status of programmed function.
- Show programmed function when recalled.

### IMPORTANT

DO NOT MOVE DOOR LOCK LEVER TO THE RIGHT DURING A COOKING OPERATION. If the door lock lever is moved to the lock position, the cooking operation will automatically be cancelled and "door" will appear in the display.

# Oven Operation


## Oven Control Panel

The control panel is designed for ease in programming. The Display Window features Indicator Words which describe the functions set.

### To program:

1. Touch the function pad to give command desired.
2. Turn the Set Dial to enter time or temperature.

**NOTE:** Three seconds after turning dial, time or temperature will automatically be entered. If more than 30 seconds elapse between touching a pad and turning set dial, control is not set and Display will return to previous Display.

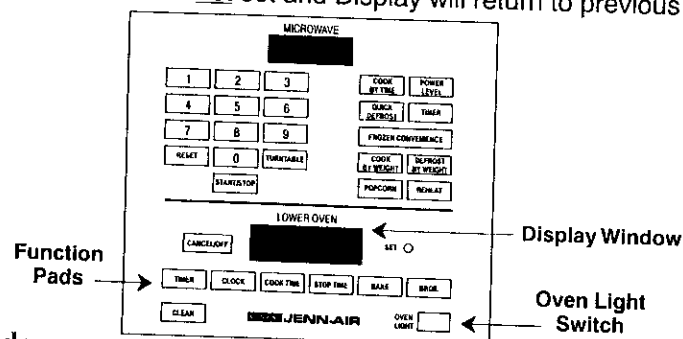

### Function Pads:

**BAKE** Use for baking or roasting.

**CLEAN** Use to set self-cleaning process.

**BROIL** Use for top browning or oven broiling.

**CANCEL/OFF** Cancels all programming except Timer and Clock.

**COOK TIME** Use for clock controlled cooking.

**CLOCK** Use to set time of day.

**STOP TIME** Use for clock controlled cooking and cleaning when delayed start is desired.

**TIMER** Use to signal expiration of a time period up to 9 hours and 55 minutes.

**Set Dial:** Use to set time, temperature, or to select Hi or Lo Broil.

**Display Window:** Shows time of day, timer, and oven functions.

**Oven Light Switch (Control Panel – lower right corner):** The oven light automatically turns on whenever the oven door is opened. When door is closed, push in oven light switch to turn oven light on or off.

### Display Numerals:

- Show time of day.
- Countdown of time remaining when using time functions.
- Show temperature of oven as it rises to reach programmed temperature and the set temperature once it is reached.
- Serve as a reminder to shut oven door, if it is open, for self-cleaning operation when the word, *door*, is displayed.
- Recall programmed temperature or time when commanded.

### Indicator Words:

- Flash to prompt next step.
- Indicate status of programmed function.
- Show programmed function when recalled.

### IMPORTANT

DO NOT MOVE DOOR LOCK LEVER TO THE RIGHT DURING A COOKING OPERATION. If the door lock lever is moved to the lock position, the cooking operation will automatically be cancelled and "door" will appear in the display.

## Clock

When electrical power is supplied or after power interruption, the last clock time displayed before power was interrupted will flash. Time will advance and continue to flash until clock is reset.

To set time of day:

1. Touch **Clock Pad**.

Indicator Words SET TIME will flash and time digits will appear in the Display. (If more than 30 seconds elapse between touching **Clock Pad** and turning the Set Dial, the **Clock Pad** must be touched again in order to set clock.)

2. Turn Set Dial in either direction until correct time of day appears in Display.

**NOTE:** Three seconds after turning dial, time of day will automatically be entered.

To recall time of day when another time function is showing: Touch **Clock Pad**.

(Note: To return to another time function pad, touch the appropriate pad.)

To change time of day set on clock: Repeat above sequence.

**NOTE:** Clock Time cannot be changed when oven has been programmed for Timed Bake or Self-Clean. Cancel program before reprogramming clock.

## Timer

**IMPORTANT:** This interval Timer can be used to remind you when a period, up to 9 hours and 55 minutes, expires. It can be used independently of any other oven activity and can be set while another oven function is operating. The Timer does not control the oven.

### BASIC INSTRUCTIONS

1. Touch **Timer Pad**.
2. Turn Set Dial clockwise.


To set Timer:

1. Touch **Timer Pad**.  
The Indicator Words SET TIMER will flash and “:00” appears in the Display.
2. Turn Set Dial clockwise until desired number of minutes and seconds or hours and minutes appear in Display.

**NOTE:** If more than 30 seconds elapse between touching **Timer Pad** and turning Set Dial, the **Timer Pad** must be touch again to set the numbers.

**IMPORTANT:** This is the only function where time can be entered in minutes and seconds. When entering minutes and seconds, minutes are to the left of colon and seconds to right of colon. When entering hours and minutes, hours are to the left of the colon with the Hr Indicator Word and minutes are to the right of colon.

**EXAMPLE:** Turn the dial to “:05” for 5 seconds, “5:00” for 5 minutes, or “5 Hr:00” for 5 hours and 0 minutes.

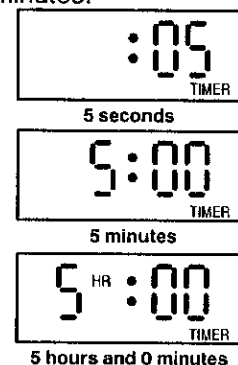

Countdown will start after 3 seconds. At end of time set, the Timer will beep 3 times.

To cancel Timer:

1. Hold in **Timer Pad** for 3 seconds.

OR

1. Touch **Timer Pad**.
2. Turn Set Dial counterclockwise until “:00” appears in Display Window.

**NOTE:** Touching **Cancel/Off Pad** to cancel signal will cancel ALL selected oven programming.



## Clock

When electrical power is supplied or after power interruption, the last clock time displayed before power was interrupted will flash. Time will advance and continue to flash until clock is reset.

To set time of day:

1. Touch **Clock Pad**.

Indicator Words SET TIME will flash and time digits will appear in the Display. (If more than 30 seconds elapse between touching **Clock Pad** and turning the Set Dial, the **Clock Pad** must be touched again in order to set clock.)

2. Turn Set Dial in either direction until correct time of day appears in Display.

**NOTE:** Three seconds after turning dial, time of day will automatically be entered.

To recall time of day when another time function is showing: Touch **Clock Pad**.

(Note: To return to another time function pad, touch the appropriate pad.)

To change time of day set on clock: Repeat above sequence.

**NOTE:** Clock Time cannot be changed when oven has been programmed for Timed Bake or Self-Clean. Cancel program before reprogramming clock.

## Timer

**IMPORTANT:** This interval Timer can be used to remind you when a period, up to 9 hours and 55 minutes, expires. It can be used independently of any other oven activity and can be set while another oven function is operating. The Timer does not control the oven.

### BASIC INSTRUCTIONS

1. Touch **Timer Pad**.
2. Turn Set Dial clockwise.


To set Timer:

1. Touch **Timer Pad**.  
The Indicator Words SET TIMER will flash and “:00” appears in the Display.
2. Turn Set Dial clockwise until desired number of minutes and seconds or hours and minutes appear in Display.

**NOTE:** If more than 30 seconds elapse between touching **Timer Pad** and turning Set Dial, the **Timer Pad** must be touch again to set the numbers.

**IMPORTANT:** This is the only function where time can be entered in minutes and seconds. When entering minutes and seconds, minutes are to the left of colon and seconds to right of colon. When entering hours and minutes, hours are to the left of the colon with the Hr Indicator Word and minutes are to the right of colon.

**EXAMPLE:** Turn the dial to “:05” for 5 seconds, “5:00” for 5 minutes, or “5 Hr:00” for 5 hours and 0 minutes.

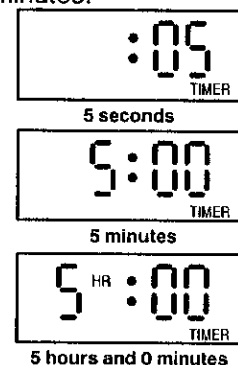

Countdown will start after 3 seconds. At end of time set, the Timer will beep 3 times.

To cancel Timer:

1. Hold in **Timer Pad** for 3 seconds.

OR

1. Touch **Timer Pad**.
2. Turn Set Dial counterclockwise until “:00” appears in Display Window.


**NOTE:** Touching **Cancel/Off Pad** to cancel signal will cancel ALL selected oven programming.

## Ignition System

- Your appliance features pilotless ignition. A glo bar ignitor will light the oven burner.
- Be sure oven control is set in the OFF position prior to supplying gas to the appliance.
- With this type of ignition system, the oven will not operate during a power failure or if the oven is disconnected from the wall outlet. **No attempt should be made to operate oven during a power failure.**

## Oven Burner

The size and appearance of a properly adjusted oven burner flame should be as shown:

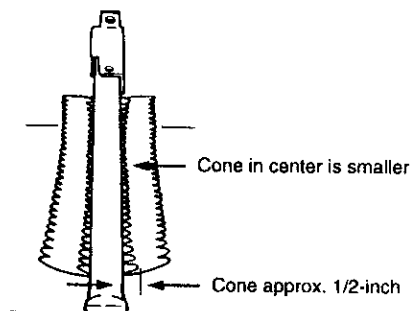

The oven temperature is maintained by cycling the burner on and off. After the oven temperature has been set, there will be about a 45 second delay before the burner ignites. This is normal and no gas escapes during this delay.

During the clean cycle, and some extended oven cooking operations, you may hear a "popping" sound when the burner cycles off. This is a normal operating sound of the burner.

## Oven Vent

The oven vent is located at the base of the control panel. When the oven is in use, this area may feel warm or hot to the touch. To prevent problems do not:

- a. block the vent opening
- b. touch the area near the opening

## Oven Fan

A cooling fan will operate whenever the oven is set for a cooking or cleaning program. The fan will continue to operate after the oven is turned off until the oven has cooled down.

The microwave oven above the gas oven is also equipped with a fan. The fan turns on whenever the microwave oven is turned on. This fan will also automatically turn on when the lower oven is set for a cook or clean operation and will automatically turn off when the oven is cool. Microwave energy will not turn on unless the microwave oven is set for a cooking or defrosting operation.


## To Set Oven For Baking or Roasting

### BASIC INSTRUCTIONS

1. Position oven racks.
2. Touch **Bake Pad**.
3. Turn Set Dial to desired temperature.

### To set oven to bake:

1. Place oven racks on proper rack positions. (See page 14.)
2. Touch **Bake Pad**.  
Indicator Word BAKE and "000°" will appear in the Display.  
**NOTE:** If more than 30 seconds elapse between touching **Bake Pad** and turning the Set Dial, the oven is not set and Display will return to previous Display.
3. Turn Set Dial clockwise until desired oven temperature appears in the Display. (Allowable range is 170° to 550°.) After a 45 second delay the oven will begin to preheat. The Indicator Words ON and BAKE will appear in the Display. The temperature shown will be 100° or the oven temperature whichever is higher.  
**EXAMPLE:** If at 10 o'clock you set the oven for 350° for baking, after 3 seconds the Display will show:

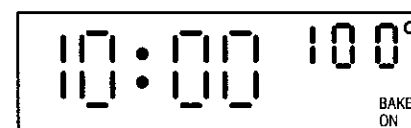

During the preheat, the Display will show a rise in 5° increments until programmed temperature is reached. When the oven is preheated, the oven will beep, the ON and BAKE Indicator Words and programmed oven temperature will remain in the display.

**NOTE:** Oven will preheat for approximately 7 to 10 minutes.

**To recall temperature set during preheat:** Touch the **Bake Pad**. Temperature will be briefly displayed, then will automatically return to on-going program.

**To change temperature set:** Touch the **Bake Pad** and turn Set Dial to new desired temperature.


4. Touch **Cancel/Off Pad** to turn oven off at end of baking.

## Ignition System

- Your appliance features pilotless ignition. A glo bar ignitor will light the oven burner.
- Be sure oven control is set in the OFF position prior to supplying gas to the appliance.
- With this type of ignition system, the oven will not operate during a power failure or if the oven is disconnected from the wall outlet. **No attempt should be made to operate oven during a power failure.**

## Oven Burner

The size and appearance of a properly adjusted oven burner flame should be as shown:

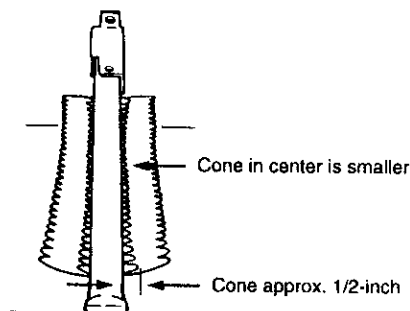

The oven temperature is maintained by cycling the burner on and off. After the oven temperature has been set, there will be about a 45 second delay before the burner ignites. This is normal and no gas escapes during this delay.

During the clean cycle, and some extended oven cooking operations, you may hear a "popping" sound when the burner cycles off. This is a normal operating sound of the burner.

## Oven Vent

The oven vent is located at the base of the control panel. When the oven is in use, this area may feel warm or hot to the touch. To prevent problems do not:

- a. block the vent opening
- b. touch the area near the opening

## Oven Fan

A cooling fan will operate whenever the oven is set for a cooking or cleaning program. The fan will continue to operate after the oven is turned off until the oven has cooled down.

The microwave oven above the gas oven is also equipped with a fan. The fan turns on whenever the microwave oven is turned on. This fan will also automatically turn on when the lower oven is set for a cook or clean operation and will automatically turn off when the oven is cool. Microwave energy will not turn on unless the microwave oven is set for a cooking or defrosting operation.


## To Set Oven For Baking or Roasting

### BASIC INSTRUCTIONS

1. Position oven racks.
2. Touch **Bake Pad**.
3. Turn Set Dial to desired temperature.

### To set oven to bake:

1. Place oven racks on proper rack positions. (See page 14.)
2. Touch **Bake Pad**.  
Indicator Word BAKE and "000°" will appear in the Display.  
**NOTE:** If more than 30 seconds elapse between touching **Bake Pad** and turning the Set Dial, the oven is not set and Display will return to previous Display.
3. Turn Set Dial clockwise until desired oven temperature appears in the Display. (Allowable range is 170° to 550°.) After a 45 second delay the oven will begin to preheat. The Indicator Words ON and BAKE will appear in the Display. The temperature shown will be 100° or the oven temperature whichever is higher.  
**EXAMPLE:** If at 10 o'clock you set the oven for 350° for baking, after 3 seconds the Display will show:

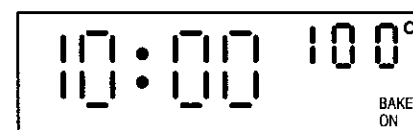

During the preheat, the Display will show a rise in 5° increments until programmed temperature is reached. When the oven is preheated, the oven will beep, the ON and BAKE Indicator Words and programmed oven temperature will remain in the display.

**NOTE:** Oven will preheat for approximately 7 to 10 minutes.


**To recall temperature set during preheat:** Touch the **Bake Pad**. Temperature will be briefly displayed, then will automatically return to on-going program.

**To change temperature set:** Touch the **Bake Pad** and turn Set Dial to new desired temperature.

4. Touch **Cancel/Off Pad** to turn oven off at end of baking.

# Rack Positions

The rack positions noted are generally recommended for the best browning results and most efficient cooking times. Refer to baking and roasting sections for recommendations for specific foods.

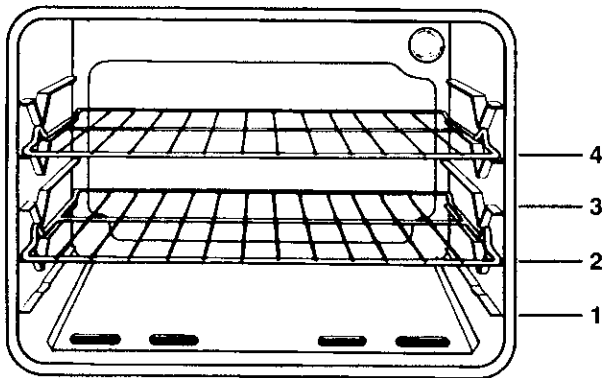

## Use Rack Position #1:

Large cuts of meat and large poultry, angel food cake, frozen fruit pie, dessert souffle.

## Use Rack Position #2:

Roasting small cuts of meat, cakes (tube, bundt or layer) custard pie, pie shell, large casseroles, loaves of bread.

## Use Rack Position #3:

Most baked goods on cookie sheets, frozen convenience foods, fresh fruit pie, cream pie, layer cakes, main dish souffle.

## Use Rack Position #4:

Most broiling.

## Multiple Rack Cooking:

Two racks, use #2 and #4 or #1 and #4.

# Clock Controlled Baking or Roasting

## BASIC INSTRUCTIONS

1. Touch **Bake Pad**.
2. Turn Set Dial to desired temperature.
3. Touch **Cook Time Pad**.
4. Turn Set Dial to enter cooking hours & minutes.
5. Touch **Stop Time Pad**.\*
6. Turn Set Dial to enter Stop Time.\*

\*Omit steps 5 & 6 if you want baking to start immediately.

## To set oven to start immediately and shut off automatically:

1. Touch **Bake Pad**.  
Indicator Word BAKE and "000°" will be shown in Display.
2. Turn Set Dial clockwise until desired oven temperature appears in the Display. After 45 seconds the oven will begin to preheat. The Indicator Words ON and BAKE will appear in the Display. The temperature shown will be 100° or the temperature of the oven, whichever is higher.  
**EXAMPLE:** If at 10 o'clock you set the oven for 350° for baking, the Display will show:



During the preheat, the Display will show a rise in 5° increments until programmed temperature is reached. When the oven is preheated, the oven will beep, the ON and BAKE Indicator Words and programmed oven temperature will remain in the display.

3. Touch **Cook Time Pad**.  
Indicator Words SET COOK TIME will flash and Display will show "0 HR:00".
4. Turn Set Dial to enter cooking hours in 5 minute increments. Hours are to left of colon and minutes to right of colon. (Allowable range is 10 minutes to 11 hours and 50 minutes.)  
**EXAMPLE:** If cooking time selected for the oven is 2 hours and 30 minutes, after 3 seconds the Display will show:



and, the oven begins to preheat.

**IMPORTANT:** Oven will preheat for approximately 7 to 10 minutes. At end of programmed Cook Time, oven will shut off automatically; retained heat will continue to cook food. Clock controlled cooking is not recommended for baked items that require a preheated oven, such as cakes, cookies, pies, breads. For these foods, place food in preheated oven, then use Timer to signal end of baking time. At the end of programmed Cook Time, the oven will shut off automatically and continuous "beeps" will signal until the **Cancel/Off Pad** is touched.

**To set oven to start at future time and shut off automatically:**

1. Follow preceding Steps 1-4.

5. Touch **Stop Time Pad**.

Indicator Words SET STOP TIME will flash. Display will show the calculated stop time based on current time of day and cook time.

6. Turn Set Dial clockwise. A stop time can only be accepted for later in the day.  
**NOTE:** Since food continues to cook if left in the oven, it is suggested that the clock controls be used primarily to start the oven when no one is in the kitchen. Provisions should be made to have the food removed as soon as the signal has sounded.

**EXAMPLE:** If at 10 o'clock you set the oven for 350° for baking and 2 hours and 30 minutes cooking time, the calculated stop time would be "12:30". The Display would show:



If you want the stop time to be 1 o'clock, turn the Set Dial until "1:00" appears in the Display Window. Three seconds after turning dial, the Display will return to current time of day, thus showing:





At the end of the delayed period, the DELAY Indicator Word will go off and the oven will begin to heat. 100° will be shown. As the oven heats, the Display will show a rise in increments of 5° until programmed temperature is reached. At the end of programmed Cook Time, the oven will shut off automatically and continuous "beeps" will be heard. Touch **Cancel/Off Pad** to cancel beeps.

**To recall time function programmed:** Touch the appropriate time pad.

**To cancel:** Touch **Cancel/Off Pad**.

**NOTE:** If more than 30 seconds elapse between touching a function pad and turning the Set Dial, the oven is not set and Display will return to previous Display or the time of day.

## Baking

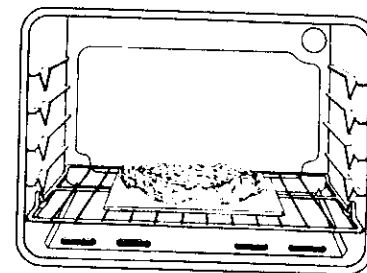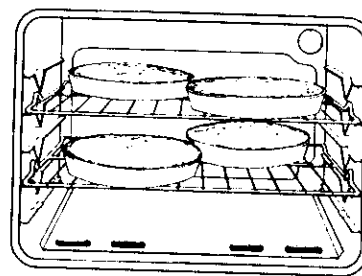

### General Baking Recommendations

- When cooking foods for the first time in your new oven, use recipe cooking times and temperatures as a guide.
- Use tested recipes from reliable sources.
- Preheat the oven only when necessary. For baked foods that rise and for richer browning, a preheated oven is better. Casseroles can be started in a cold oven. Preheating takes from 7 to 10 minutes; place food in oven after Preheat beep.
- Arrange oven racks before turning on oven. Follow suggested rack positions on pages 14 and 18.
- Allow about 2 inches of space between the oven side walls and pans to allow proper air circulation.
- When baking foods in more than one pan, place them on opposite corners of the rack. *Stagger pans* when baking on two racks so that one pan does not shield another unless shielding is intended. (See above.)
- To conserve energy, avoid frequent or prolonged door openings. At the end of cooking, turn oven off before removing food.
- Always test for doneness (fingertip, toothpick, sides pulling away from pan). Do not rely on time or brownness as the only indicators.
- Use good quality baking pans and the size recommended in the recipe. Dull, dark, enameled metal pans or heatproof glass pans will generally produce a brown, crisp crust. Shiny metal pans produce a light, golden crust.
- Frozen pies in shiny aluminum pans should be baked on a cookie sheet on rack 1 or be removed to a dull or glass pan.

**NOTE:** A cooling fan will operate during baking and roasting. The fan may also continue to operate after the oven is turned off until the oven has cooled down.

**IMPORTANT:** Oven will preheat for approximately 7 to 10 minutes. At end of programmed Cook Time, oven will shut off automatically; retained heat will continue to cook food. Clock controlled cooking is not recommended for baked items that require a preheated oven, such as cakes, cookies, pies, breads. For these foods, place food in preheated oven, then use Timer to signal end of baking time. At the end of programmed Cook Time, the oven will shut off automatically and continuous "beeps" will signal until the **Cancel/Off Pad** is touched.

**To set oven to start at future time and shut off automatically:**

1. Follow preceding Steps 1-4.

5. Touch **Stop Time Pad**.

Indicator Words SET STOP TIME will flash. Display will show the calculated stop time based on current time of day and cook time.

6. Turn Set Dial clockwise. A stop time can only be accepted for later in the day.  
**NOTE:** Since food continues to cook if left in the oven, it is suggested that the clock controls be used primarily to start the oven when no one is in the kitchen. Provisions should be made to have the food removed as soon as the signal has sounded.

**EXAMPLE:** If at 10 o'clock you set the oven for 350° for baking and 2 hours and 30 minutes cooking time, the calculated stop time would be "12:30". The Display would show:



If you want the stop time to be 1 o'clock, turn the Set Dial until "1:00" appears in the Display Window. Three seconds after turning dial, the Display will return to current time of day, thus showing:





At the end of the delayed period, the DELAY Indicator Word will go off and the oven will begin to heat. 100° will be shown. As the oven heats, the Display will show a rise in increments of 5° until programmed temperature is reached. At the end of programmed Cook Time, the oven will shut off automatically and continuous "beeps" will be heard. Touch **Cancel/Off Pad** to cancel beeps.

**To recall time function programmed:** Touch the appropriate time pad.

**To cancel:** Touch **Cancel/Off Pad**.

**NOTE:** If more than 30 seconds elapse between touching a function pad and turning the Set Dial, the oven is not set and Display will return to previous Display or the time of day.

## Baking

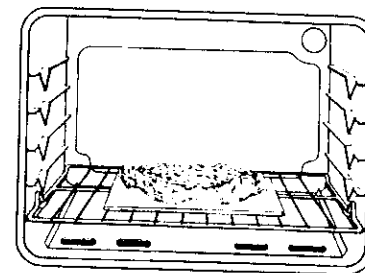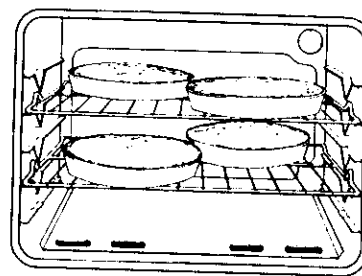

### General Baking Recommendations

- When cooking foods for the first time in your new oven, use recipe cooking times and temperatures as a guide.
- Use tested recipes from reliable sources.
- Preheat the oven only when necessary. For baked foods that rise and for richer browning, a preheated oven is better. Casseroles can be started in a cold oven. Preheating takes from 7 to 10 minutes; place food in oven after Preheat beep.
- Arrange oven racks before turning on oven. Follow suggested rack positions on pages 14 and 18.
- Allow about 2 inches of space between the oven side walls and pans to allow proper air circulation.
- When baking foods in more than one pan, place them on opposite corners of the rack. *Stagger pans* when baking on two racks so that one pan does not shield another unless shielding is intended. (See above.)
- To conserve energy, avoid frequent or prolonged door openings. At the end of cooking, turn oven off before removing food.
- Always test for doneness (fingertip, toothpick, sides pulling away from pan). Do not rely on time or brownness as the only indicators.
- Use good quality baking pans and the size recommended in the recipe. Dull, dark, enameled metal pans or heatproof glass pans will generally produce a brown, crisp crust. Shiny metal pans produce a light, golden crust.
- Frozen pies in shiny aluminum pans should be baked on a cookie sheet on rack 1 or be removed to a dull or glass pan.


**NOTE:** A cooling fan will operate during baking and roasting. The fan may also continue to operate after the oven is turned off until the oven has cooled down.

## Baking Chart

Product and Type	Pan Size	Rack Position	Bake Temp. (°F) Preheated	Bake Time* (min.)
<b>CAKE</b>				
Yellow - 2 layers	9"	2 or 3	350°	28-33
White - 2 layers	9"	2 or 3	350°	25-30
Chocolate - 2 layers	9"	2 or 3	350°	30-35
Bundt	tube	1 or 2	350°	35-45
Angel Food	tube	1	375°	30-40
Pound Cake	loaf	2	325°	55-60
Cupcakes		3	350°	15-25
Sheet Cake	9" x 13"	2 or 3	350°	30-40
<b>PIES</b>				
Two Crust				
Fruit, fresh	9"	3	400°-425°	45-60
Fruit, frozen	9"	1	385°-400°	60-70
One Crust				
Custard, fresh	9"	2	350°	60-80
Cream/Meringue	9"	3	400°	8-10
Pie Shell	9"	2	425°	8-12
<b>COOKIES</b>				
Chocolate Chip		3	350°-375°	8-12
Peanut Butter		3	350°-375°	8-12
Sugar		3	350°-375°	8-12
Brownies	9" x 13"	2	350°	25-35
<b>BREADS, YEAST</b>				
Loaf	loaf	2 or 3	375°	20-30
Rolls		3	375°	15-20
<b>BREADS, QUICK</b>				
Loaf, Nut, Fruit	loaf	2 or 3	375°	50-60
Gingerbread	9" x 9"	3	350°	30-35
Cornbread	8" x 8"	3	400°	15-25
Cornbread Muffins		3	375°-400°	15-22
Biscuits		2 or 3	400°-425°	8-15
Muffins		3	375°-400°	15-22

\* The times given are on specific brands of mixes or recipes tested. Actual times will depend on the ones you bake.

## Roasting

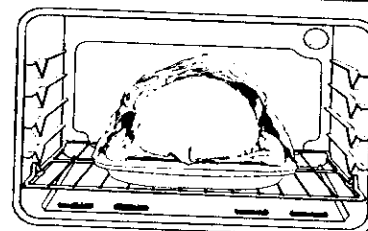

### General Roasting Recommendations

- *Preheating is not necessary.*
- For open pan roasting, place meat or poultry on the slotted portion of the two-piece pan included with the oven. Do not add water to the pan. Use open pan roasting for tender cuts of meat. Less tender cuts of meat need to be cooked by moist heat in a covered pan.
- For best results, a meat thermometer is the most accurate guide to degree of doneness. The tip of the thermometer should be located in the thickest part of a roast, not touching fat, bone, or gristle. For turkeys and large poultry products, insert the tip of the thermometer into the thickest part of the inner thigh.
- Place roast fat side up to allow self basting of meat during roasting.
- Since meats continue to cook after being removed from the oven, remove roast from oven when it reaches an internal temperature about 5 degrees below the temperature desired.
- For less loss of juices and easier carving, allow about 15 minutes "standing time" after removing meat from oven.
- For best results in roasting poultry, thaw completely. Due to the structure of poultry, partially thawed poultry will cook unevenly.
- Minutes per pound will vary according to the size, shape, quality, and initial temperature of meat as well as the electrical voltage in your area. Times are based on refrigerator cold meat.
- A larger cut of meat will usually require fewer minutes per pound to roast than a smaller cut of meat.
- Since the breast meat on a large turkey cooks more quickly than the thigh area, place a "foil cap" over the breast area after desired brownness is reached to prevent over browning. (See above.)
- A stuffed turkey will require an extra 30 to 60 minutes depending on size. Stuffing should reach an internal temperature of 165°F.
- Use meat roasting charts in standard cookbooks for recommended times and temperatures for roasting cuts of meat not found on page 20.


**NOTE:** A cooling fan will operate during baking and roasting. The fan may also continue to operate after the oven is turned off until the oven has cooled down.

## Baking Chart

Product and Type	Pan Size	Rack Position	Bake Temp. (°F) Preheated	Bake Time* (min.)
<b>CAKE</b>				
Yellow - 2 layers	9"	2 or 3	350°	28-33
White - 2 layers	9"	2 or 3	350°	25-30
Chocolate - 2 layers	9"	2 or 3	350°	30-35
Bundt	tube	1 or 2	350°	35-45
Angel Food	tube	1	375°	30-40
Pound Cake	loaf	2	325°	55-60
Cupcakes		3	350°	15-25
Sheet Cake	9" x 13"	2 or 3	350°	30-40
<b>PIES</b>				
Two Crust				
Fruit, fresh	9"	3	400°-425°	45-60
Fruit, frozen	9"	1	385°-400°	60-70
One Crust				
Custard, fresh	9"	2	350°	60-80
Cream/Meringue	9"	3	400°	8-10
Pie Shell	9"	2	425°	8-12
<b>COOKIES</b>				
Chocolate Chip		3	350°-375°	8-12
Peanut Butter		3	350°-375°	8-12
Sugar		3	350°-375°	8-12
Brownies	9" x 13"	2	350°	25-35
<b>BREADS, YEAST</b>				
Loaf	loaf	2 or 3	375°	20-30
Rolls		3	375°	15-20
<b>BREADS, QUICK</b>				
Loaf, Nut, Fruit	loaf	2 or 3	375°	50-60
Gingerbread	9" x 9"	3	350°	30-35
Cornbread	8" x 8"	3	400°	15-25
Cornbread Muffins		3	375°-400°	15-22
Biscuits		2 or 3	400°-425°	8-15
Muffins		3	375°-400°	15-22

\* The times given are on specific brands of mixes or recipes tested. Actual times will depend on the ones you bake.

## Roasting

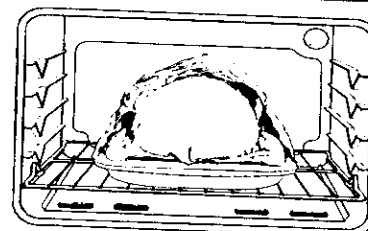

### General Roasting Recommendations

- *Preheating is not necessary.*
- For open pan roasting, place meat or poultry on the slotted portion of the two-piece pan included with the oven. Do not add water to the pan. Use open pan roasting for tender cuts of meat. Less tender cuts of meat need to be cooked by moist heat in a covered pan.
- For best results, a meat thermometer is the most accurate guide to degree of doneness. The tip of the thermometer should be located in the thickest part of a roast, not touching fat, bone, or gristle. For turkeys and large poultry products, insert the tip of the thermometer into the thickest part of the inner thigh.
- Place roast fat side up to allow self basting of meat during roasting.
- Since meats continue to cook after being removed from the oven, remove roast from oven when it reaches an internal temperature about 5 degrees below the temperature desired.
- For less loss of juices and easier carving, allow about 15 minutes "standing time" after removing meat from oven.
- For best results in roasting poultry, thaw completely. Due to the structure of poultry, partially thawed poultry will cook unevenly.
- Minutes per pound will vary according to the size, shape, quality, and initial temperature of meat as well as the electrical voltage in your area. Times are based on refrigerator cold meat.
- A larger cut of meat will usually require fewer minutes per pound to roast than a smaller cut of meat.
- Since the breast meat on a large turkey cooks more quickly than the thigh area, place a "foil cap" over the breast area after desired brownness is reached to prevent over browning. (See above.)
- A stuffed turkey will require an extra 30 to 60 minutes depending on size. Stuffing should reach an internal temperature of 165°F.
- Use meat roasting charts in standard cookbooks for recommended times and temperatures for roasting cuts of meat not found on page 20.

**NOTE:** A cooling fan will operate during baking and roasting. The fan may also continue to operate after the oven is turned off until the oven has cooled down.



## Roasting (Thawed Meats Only)

Variety and Cut of Meat	Approx. Weight (pound)	Oven Temperature (not preheated) °F	Internal Temperature Of Meat-End Of Roasting Time °F	Approx. Radiant Roasting Time (minutes per pound)
<b>BEEF</b>				
Rib Roast	4 to 8	325°	140° (rare)	25-30
Rib Eye Roast	4 to 6	325°	160° (medium)	30-35
Loin Tenderloin Roast	2 to 3	400°	140° (rare)	25-30
Round Eye Round Roast	4 to 5	325°	160° (medium)	30-35
Top Sirloin Roast	3 to 6	325°	140° (rare)	20-25
Round Tip Roast	4 to 6	325°	140° (rare)	25-30
			160° (medium)	30-35
<b>PORK</b>				
Shoulder Blade Roast Boneless	4 to 6	325°	170°	35-45
Shoulder Blade Roast	4 to 6	325°	170°	30-40
Loin Blade or Sirloin Roast	3 to 4	325°	170°	35-45
Leg (Fresh Ham)	10 to 16	325°	170°	25-35
Ham, Half (Fully Cooked)	5 to 7	325°	140°	25-35
Ham, Half (Cook before eating)	5 to 7	275°	160°	35-45
Arm Picnic Shoulder	5 to 8	325°	140°	25-30
<b>LAMB</b>				
Shoulder Roast, Boneless	3 to 5	325°	160° (medium)	35-40
Leg, Whole	5 to 7	325°	170° (well)	40-45
Leg, Shank Half	3 to 4	325°	160° (medium)	30-35
Leg, Sirloin Half	3 to 4	325°	170° (well)	35-40
			160° (medium)	35-40
			170° (well)	40-50
<b>VEAL</b>				
Rib Roast	3 to 5	325°	170°	40-45
Shoulder, Boneless	4 to 6	325°	170°	40-45
Leg, Half Boneless	3 to 5	325°	170°	40-50
<b>POULTRY</b>				
Turkey, unstuffed	8 to 12	325°	180° - 185°	20-22
Turkey, unstuffed	12 to 16	325°	180° - 185°	18-20
Turkey, unstuffed	16 to 20	325°	180° - 185°	16-18
Turkey, unstuffed	20 to 24	325°	180° - 185°	14-16
Turkey, Whole, Boneless	4 to 6	350°	180° - 185°	30-40
Turkey, Breast	3 to 8	325°	170° - 175°	30-40
Chicken, Fryer	2-1/2 to 3-1/2	375°	185°	20-24
Chicken, Roaster	4 to 6	375°	185°	20-25
Capon, unstuffed	5 to 8	375°	180° - 185°	20-25
Cornish Game Hen	1 to 1-1/2	375°	180° - 185°	45-55
Duck	4 to 6	350°	185°	20-25

## Broiling

### BASIC INSTRUCTIONS

1. Position oven rack.
2. Touch **Broil Pad**.
3. Turn Set Dial.

#### To set oven to broil:

1. Place oven rack on the rack position suggested in the chart on page 22. Distance from broil burner depends on foods being prepared. Rack position #4 is usually recommended unless otherwise stated.

2. Touch **Broil Pad**.

Indicator Word BROIL and 000° will appear in the Display.

**NOTE:** If more than 30 seconds elapses between touching **Broil Pad** and turning the Set Dial, the oven is not set and the Display will return to previous Display.

3. Turn Set Dial clockwise to select Hi Broil or counterclockwise to select Lo Broil.

Use Hi Broil for most broil operations. When broiling longer cooking foods such as pork chops, poultry or thick steaks, select Lo Broil. Low temperature broiling allows food to cook to the well done stage without excessive browning.

The broil burner will come on after a 45 to 60 second delay and the Indicator Word BROIL and ON will remain in the Display.

**EXAMPLE:** If at 4 o'clock you set the oven for broil (HI), the Display will show:



4. Place food on broiler grid and pan provided with oven. Preheat broil burner for 5 minutes. Oven door **MUST** be closed during a broil operation.
5. Touch **Cancel/Off Pad** to turn off oven when food is cooked.

**NOTE:** A fan comes on during the broil cycle. If the fan does not operate, contact your authorized Jenn-Air Service Contractor for repair.

## Roasting (Thawed Meats Only)

Variety and Cut of Meat	Approx. Weight (pound)	Oven Temperature (not preheated) °F	Internal Temperature Of Meat-End Of Roasting Time °F	Approx. Radiant Roasting Time (minutes per pound)
<b>BEEF</b>				
Rib Roast	4 to 8	325°	140° (rare)	25-30
Rib Eye Roast	4 to 6	325°	160° (medium)	30-35
Loin Tenderloin Roast	2 to 3	400°	140° (rare)	25-30
Round Eye Round Roast	4 to 5	325°	160° (medium)	30-35
Top Sirloin Roast	3 to 6	325°	140° (rare)	20-25
Round Tip Roast	4 to 6	325°	140° (rare)	25-30
			160° (medium)	30-35
<b>PORK</b>				
Shoulder Blade Roast Boneless	4 to 6	325°	170°	35-45
Shoulder Blade Roast	4 to 6	325°	170°	30-40
Loin Blade or Sirloin Roast	3 to 4	325°	170°	35-45
Leg (Fresh Ham)	10 to 16	325°	170°	25-35
Ham, Half (Fully Cooked)	5 to 7	325°	140°	25-35
Ham, Half (Cook before eating)	5 to 7	275°	160°	35-45
Arm Picnic Shoulder	5 to 8	325°	140°	25-30
<b>LAMB</b>				
Shoulder Roast, Boneless	3 to 5	325°	160° (medium)	35-40
Leg, Whole	5 to 7	325°	170° (well)	40-45
Leg, Shank Half	3 to 4	325°	160° (medium)	30-35
Leg, Sirloin Half	3 to 4	325°	170° (well)	35-40
			160° (medium)	35-40
			170° (well)	40-50
<b>VEAL</b>				
Rib Roast	3 to 5	325°	170°	40-45
Shoulder, Boneless	4 to 6	325°	170°	40-45
Leg, Half Boneless	3 to 5	325°	170°	40-50
<b>POULTRY</b>				
Turkey, unstuffed	8 to 12	325°	180° - 185°	20-22
Turkey, unstuffed	12 to 16	325°	180° - 185°	18-20
Turkey, unstuffed	16 to 20	325°	180° - 185°	16-18
Turkey, unstuffed	20 to 24	325°	180° - 185°	14-16
Turkey, Whole, Boneless	4 to 6	350°	180° - 185°	30-40
Turkey, Breast	3 to 8	325°	170° - 175°	30-40
Chicken, Fryer	2-1/2 to 3-1/2	375°	185°	20-24
Chicken, Roaster	4 to 6	375°	185°	20-25
Capon, unstuffed	5 to 8	375°	180° - 185°	20-25
Cornish Game Hen	1 to 1-1/2	375°	180° - 185°	45-55
Duck	4 to 6	350°	185°	20-25

## Broiling

### BASIC INSTRUCTIONS

1. Position oven rack.
2. Touch **Broil Pad**.
3. Turn Set Dial.

#### To set oven to broil:

1. Place oven rack on the rack position suggested in the chart on page 22. Distance from broil burner depends on foods being prepared. Rack position #4 is usually recommended unless otherwise stated.

2. Touch **Broil Pad**.

Indicator Word BROIL and 000° will appear in the Display.

**NOTE:** If more than 30 seconds elapses between touching **Broil Pad** and turning the Set Dial, the oven is not set and the Display will return to previous Display.

3. Turn Set Dial clockwise to select Hi Broil or counterclockwise to select Lo Broil.

Use Hi Broil for most broil operations. When broiling longer cooking foods such as pork chops, poultry or thick steaks, select Lo Broil. Low temperature broiling allows food to cook to the well done stage without excessive browning.

The broil burner will come on after a 45 to 60 second delay and the Indicator Word BROIL and ON will remain in the Display.

**EXAMPLE:** If at 4 o'clock you set the oven for broil (HI), the Display will show:



4. Place food on broiler grid and pan provided with oven. Preheat broil burner for 5 minutes. Oven door **MUST** be closed during a broil operation.
5. Touch **Cancel/Off Pad** to turn off oven when food is cooked.

**NOTE:** A fan comes on during the broil cycle. If the fan does not operate, contact your authorized Jenn-Air Service Contractor for repair.

Broiling Tips

- Tender cuts of meat or marinated meats are best for broiling. This includes rib and loin cuts of steak, ground beef, ham steaks, lamb chops, poultry pieces or fish. For best results, steaks should be at least 1" thick. Thinner steaks should be pan-broiled.
- Do not cover broiler grid with foil since this prevents fat drippings from draining into bottom of pan.
- Before broiling, remove excess fat from meat and score edges of fat (do not cut into meat) to prevent meat from curling. Salt after cooking.
- To prevent dry surface on fish or lean meats, brush melted butter on top.
- Food that requires turning should be turned only once during broiling. Turn meat with tongs to avoid piercing and loss of juices.

BROILING CHART (BROIL, PREHEATED)

Foods	Rack Position	Broil Setting	Approximate (Minutes/Side)	
			1st Side	2nd Side
<b>BEEF</b>				
Steak (1")				
Rare	4	Hi	5-6	4-5
Medium	4	Hi	7-8	5-6
Well	4	Lo	10-11	8-9
Hamburgers (3 oz.)				
Medium	4	Hi	5-6	4-5
Well	4	Lo	7-8	5-6
<b>PORK</b>				
Bacon - Thick Slice	3	Lo	3-4	1-2
Chops (1/2")	4	Hi	6-7	5-6
Chops (1")	3	Lo	12-13	10-11
Ham Steak	4	Hi	4	3
Sausage Links	4	Hi	4	3
Sausage Patties	4	Hi	3-4	3
<b>LAMB</b>				
Chops (1")				
Medium	4	Hi	5-6	5-6
Well	4	Hi	7-8	6-7
<b>POULTRY</b>				
Breast Halves	3	Lo	10-11	8-9
<b>SEAFOOD</b>				
Fish Fillets, Buttered (1/4")	4	Hi	8-10	No Flip
Fish Steaks (1")	4	Lo	10-12	No Flip
<b>MISCELLANEOUS</b>				
Hot Dogs	4	Hi	2-3	2-3
Toast	4	Hi	1-2	1-2

**NOTE:** This chart is a suggested guide. The times may vary with food being cooked. Rack position #4 is the second position from the top.

Oven Cleaning


How the Self-Cleaning Process Works

When the oven controls are set to CLEAN, the oven heats to temperatures that are higher than those used for cooking. The high temperatures cause food soil to burn off and substantially disappear. While this occurs, a device in the oven vent helps to consume normal amounts of smoke. The oven is vented at the bottom of the control panel.

How to Prepare Oven Before Operating the Self-Cleaning Process.

- Remove the broiler pan and any other utensils from the oven. These utensils cannot withstand the high temperatures of the cleaning process.
- Turn off oven light before self-cleaning process. The life of the bulb may be shortened if left on during the cleaning process.
- Clean spatters and spills from those areas which will not be cleaned during the self-cleaning process:
  - center front of oven and door near opening in door gasket.
  - porcelain oven door liner (area outside the door gasket).
  - oven front frame.

To clean these areas, use hot water and detergent, nonabrasive cleansers or soap filled steel wool pads. Rinse thoroughly, being careful not to use an excessive amount of water that would dampen the door gasket. *Soil left in these areas will be more difficult to remove after the self-cleaning process since the high heat will bake on any soil that is present.* **DO NOT USE COMMERCIAL OVEN CLEANERS TO CLEAN THESE AREAS.**

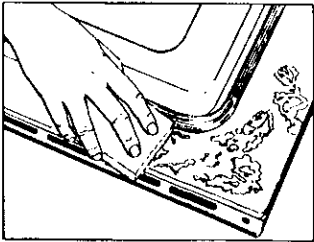

- **DO NOT ATTEMPT TO CLEAN, RUB, OR APPLY WATER TO GASKET ON OVEN DOOR.** The gasket is essential for a good door seal. Rubbing or cleaning will damage the gasket and may affect the seal.
- Wipe up excess grease and food spillovers which have not baked on the oven bottom. Large accumulations of soil can cause heavy smoke or fire in the oven during the cleaning process.

Broiling Tips

- Tender cuts of meat or marinated meats are best for broiling. This includes rib and loin cuts of steak, ground beef, ham steaks, lamb chops, poultry pieces or fish. For best results, steaks should be at least 1" thick. Thinner steaks should be pan-broiled.
- Do not cover broiler grid with foil since this prevents fat drippings from draining into bottom of pan.
- Before broiling, remove excess fat from meat and score edges of fat (do not cut into meat) to prevent meat from curling. Salt after cooking.
- To prevent dry surface on fish or lean meats, brush melted butter on top.
- Food that requires turning should be turned only once during broiling. Turn meat with tongs to avoid piercing and loss of juices.

BROILING CHART (BROIL, PREHEATED)

Foods	Rack Position	Broil Setting	Approximate (Minutes/Side)	
			1st Side	2nd Side
<b>BEEF</b>				
Steak (1")				
Rare	4	Hi	5-6	4-5
Medium	4	Hi	7-8	5-6
Well	4	Lo	10-11	8-9
Hamburgers (3 oz.)				
Medium	4	Hi	5-6	4-5
Well	4	Lo	7-8	5-6
<b>PORK</b>				
Bacon - Thick Slice	3	Lo	3-4	1-2
Chops (1/2")	4	Hi	6-7	5-6
Chops (1")	3	Lo	12-13	10-11
Ham Steak	4	Hi	4	3
Sausage Links	4	Hi	4	3
Sausage Patties	4	Hi	3-4	3
<b>LAMB</b>				
Chops (1")				
Medium	4	Hi	5-6	5-6
Well	4	Hi	7-8	6-7
<b>POULTRY</b>				
Breast Halves	3	Lo	10-11	8-9
<b>SEAFOOD</b>				
Fish Fillets, Buttered (1/4")	4	Hi	8-10	No Flip
Fish Steaks (1")	4	Lo	10-12	No Flip
<b>MISCELLANEOUS</b>				
Hot Dogs	4	Hi	2-3	2-3
Toast	4	Hi	1-2	1-2

NOTE: This chart is a suggested guide. The times may vary with food being cooked. Rack position #4 is the second position from the top.

Oven Cleaning


How the Self-Cleaning Process Works

When the oven controls are set to CLEAN, the oven heats to temperatures that are higher than those used for cooking. The high temperatures cause food soil to burn off and substantially disappear. While this occurs, a device in the oven vent helps to consume normal amounts of smoke. The oven is vented at the bottom of the control panel.

How to Prepare Oven Before Operating the Self-Cleaning Process.

- Remove the broiler pan and any other utensils from the oven. These utensils cannot withstand the high temperatures of the cleaning process.
- Turn off oven light before self-cleaning process. The life of the bulb may be shortened if left on during the cleaning process.
- Clean spatters and spills from those areas which will not be cleaned during the self-cleaning process:
  - center front of oven and door near opening in door gasket.
  - porcelain oven door liner (area outside the door gasket).
  - oven front frame.

To clean these areas, use hot water and detergent, nonabrasive cleansers or soap filled steel wool pads. Rinse thoroughly, being careful not to use an excessive amount of water that would dampen the door gasket. Soil left in these areas will be more difficult to remove after the self-cleaning process since the high heat will bake on any soil that is present. DO NOT USE COMMERCIAL OVEN CLEANERS TO CLEAN THESE AREAS.

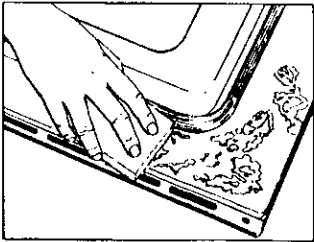

- DO NOT ATTEMPT TO CLEAN, RUB, OR APPLY WATER TO GASKET ON OVEN DOOR. The gasket is essential for a good door seal. Rubbing or cleaning will damage the gasket and may affect the seal.
- Wipe up excess grease and food spillovers which have not baked on the oven bottom. Large accumulations of soil can cause heavy smoke or fire in the oven during the cleaning process.


- Although smoke or fire in the oven is a normal occurrence and there is no safety problem, there will be venting of excessive smoke and odor.
- The oven racks can be cleaned in the oven. However, the oven racks will discolor, lose shininess, and become difficult to slide in and out if left in the oven during the cleaning process. **REMOVE RACKS FROM OVEN IF THIS DISCOLORATION WILL BE OBJECTIONABLE.** As a suggestion, do not leave the racks in the oven during each self-cleaning process if they do not need to be cleaned since they will discolor to a dull silver after many cleanings. Moderately soiled racks can be cleaned with a soapy S.O.S. pad or Scotch-Brite scour-pad. Stubborn stains need to be removed in the self-cleaning process. Be sure to read special tips on page 26 if oven racks are cleaned during the self-cleaning process.

#### BASIC INSTRUCTIONS

1. Close door.
2. Move door lock lever to locked position.
3. Touch **Clean Pad**.
4. Turn Set Dial to change cleaning time.  
(Light soil-2 hours; Average soil-3 hours; Heavy soil-4 hours.)

#### To set oven to clean:

1. Close the oven door.
2. Move door lock lever to locked position.

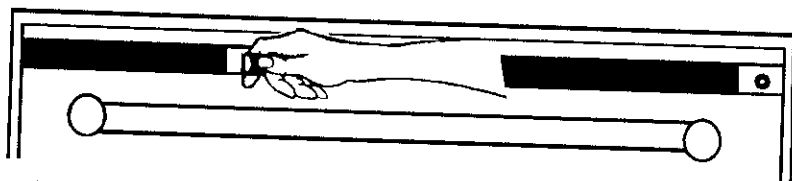


3. Touch **Clean Pad**.

Indicator Words SET CLEAN TIME will flash and Display will show "3 HR:00".  
**NOTE:** If door lever is not in locked position, "door" will flash in the Display.

4. If you wish to change cleaning time, turn Set Dial.

(Range is from 2 hours for light soil up to 4 hours for heavy soil.)

**EXAMPLE:** If at 9 o'clock PM you selected to self-clean your oven for 3 hours, the Display will show:

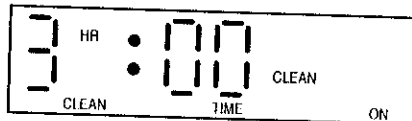

Three seconds after turning dial, the ON Indicator Word will come on and the oven will begin to clean. The LOCK Indicator Word will come on when the oven reaches cleaning temperatures.

When the clean function has been completed, the Indicator Words CLEAN and ON will go off. The Indicator Word LOCK and the cooling fan will remain on until the oven has cooled down.

#### To set oven to start cleaning at a later time:


1. Close door.
2. Move door lock lever to locked position.
3. Touch **Clean Pad**.
4. Turn Set Dial to change desired clean time.
5. Touch **Stop Time Pad**.

Indicator Words SET STOP TIME will flash in the Display. The calculated stop time will also appear in Display.


6. Turn Set Dial to enter stop time.

Set Dial must be turned clockwise. A stop time can only be accepted for later in the day.

**EXAMPLE:** If at 9 o'clock you set the oven to clean for 3 hours, the calculated stop time would be "12:00". The Display would show:

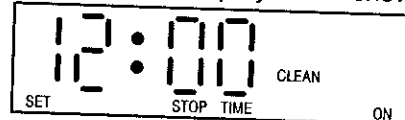

If you want the stop time to be 1 o'clock, turn the Set Dial until the Display shows:

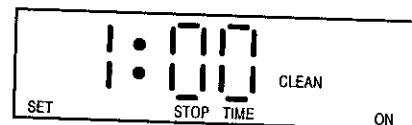

Three seconds after turning dial, the time of day returns to the Display. The Indicator Word DELAY will come on.

When the oven begins to clean, the Indicator Word ON and the cooling fan will come on and the Indicator Word DELAY will go off.

When the clean time has been completed, the Indicator Words CLEAN and ON will go off. The Indicator Word LOCK and the cooling fan will remain on until the oven has cooled down.

**To recall cleaning time or stop time:** Touch the appropriate time pad.

**To change cleaning time or stop time before cleaning begins:** Repeat the preceding steps.

**To cancel cleaning process:** Touch **Cancel/Off Pad**. The oven door will be locked while the LOCK Indicator Word remains in the Display. Depending on the length of time the oven has been self-cleaning, it may take up to one hour for the oven to cool down. After LOCK Indicator Word goes out of the Display, move the Door Lock Lever to the left.

**IMPORTANT:** Forcing the door lock lever to the left before the LOCK Indicator Word goes out of the display will damage the lock mechanism.

**NOTE:** A fan operates during a self-cleaning process. If the fan does not operate, contact your Jenn-Air Authorized Service Contractor for service.


- Although smoke or fire in the oven is a normal occurrence and there is no safety problem, there will be venting of excessive smoke and odor.
- The oven racks can be cleaned in the oven. However, the oven racks will discolor, lose shininess, and become difficult to slide in and out if left in the oven during the cleaning process. **REMOVE RACKS FROM OVEN IF THIS DISCOLORATION WILL BE OBJECTIONABLE.** As a suggestion, do not leave the racks in the oven during each self-cleaning process if they do not need to be cleaned since they will discolor to a dull silver after many cleanings. Moderately soiled racks can be cleaned with a soapy S.O.S. pad or Scotch-Brite scour-pad. Stubborn stains need to be removed in the self-cleaning process. Be sure to read special tips on page 26 if oven racks are cleaned during the self-cleaning process.

#### BASIC INSTRUCTIONS

1. Close door.
2. Move door lock lever to locked position.
3. Touch **Clean Pad**.
4. Turn Set Dial to change cleaning time.  
(Light soil-2 hours; Average soil-3 hours; Heavy soil-4 hours.)

#### To set oven to clean:

1. Close the oven door.
2. Move door lock lever to locked position.

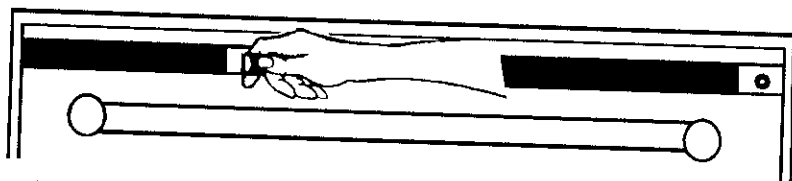


3. Touch **Clean Pad**.

Indicator Words SET CLEAN TIME will flash and Display will show "3 HR:00".  
**NOTE:** If door lever is not in locked position, "door" will flash in the Display.

4. If you wish to change cleaning time, turn Set Dial.

(Range is from 2 hours for light soil up to 4 hours for heavy soil.)

 **EXAMPLE:** If at 9 o'clock PM you selected to self-clean your oven for 3 hours, the Display will show:



Three seconds after turning dial, the ON Indicator Word will come on and the oven will begin to clean. The LOCK Indicator Word will come on when the oven reaches cleaning temperatures.

When the clean function has been completed, the Indicator Words CLEAN and ON will go off. The Indicator Word LOCK and the cooling fan will remain on until the oven has cooled down.

#### To set oven to start cleaning at a later time:


1. Close door.
2. Move door lock lever to locked position.
3. Touch **Clean Pad**.
4. Turn Set Dial to change desired clean time.
5. Touch **Stop Time Pad**.

Indicator Words SET STOP TIME will flash in the Display. The calculated stop time will also appear in Display.


6. Turn Set Dial to enter stop time.

Set Dial must be turned clockwise. A stop time can only be accepted for later in the day.

**EXAMPLE:** If at 9 o'clock you set the oven to clean for 3 hours, the calculated stop time would be "12:00". The Display would show:

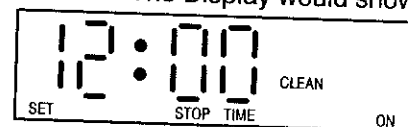

If you want the stop time to be 1 o'clock, turn the Set Dial until the Display shows:

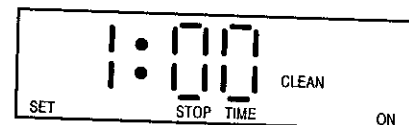

Three seconds after turning dial, the time of day returns to the Display. The Indicator Word DELAY will come on.

When the oven begins to clean, the Indicator Word ON and the cooling fan will come on and the Indicator Word DELAY will go off.

When the clean time has been completed, the Indicator Words CLEAN and ON will go off. The Indicator Word LOCK and the cooling fan will remain on until the oven has cooled down.

**To recall cleaning time or stop time:** Touch the appropriate time pad.

**To change cleaning time or stop time before cleaning begins:** Repeat the preceding steps.



**To cancel cleaning process:** Touch **Cancel/Off Pad**. The oven door will be locked while the LOCK Indicator Word remains in the Display. Depending on the length of time the oven has been self-cleaning, it may take up to one hour for the oven to cool down. After LOCK Indicator Word goes out of the Display, move the Door Lock Lever to the left.

**IMPORTANT:** Forcing the door lock lever to the left before the LOCK Indicator Word goes out of the display will damage the lock mechanism.

**NOTE:** A fan operates during a self-cleaning process. If the fan does not operate, contact your Jenn-Air Authorized Service Contractor for service.

## More Information on the Self-Cleaning Process

- A slight odor may be detected, and if an oven is heavily soiled, some smoke may be visible. Some smoke and odor during the cleaning process is a normal occurrence. Since the oven vent is at the bottom of the control panel, vapors, moisture, etc. may be seen coming from this area.
- During the cleaning process, do not be alarmed if an occasional flame is visible through the oven window. This is caused by excessive food soil that was not removed before the oven was set to clean.
- **SINCE THE DOOR AND WINDOW OF THE OVEN WILL GET WARM DURING THE SELF-CLEANING PROCESS, AVOID CONTACT.**
- Some types of soil may disintegrate but leave a light film or heavier deposit of ash. The amount of ash depends on the amount of soil which was in the oven. After oven has cooled, this ash may be removed with a damp sponge. If other dark deposits remain after wiping with a sponge, the time set for the length of cleaning was not enough. Increase the cleaning time for future cleanings or clean more frequently. The normal cleaning time is 3 hours. A maximum of 4 hours may be selected if necessary.

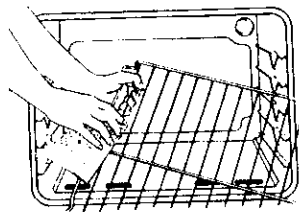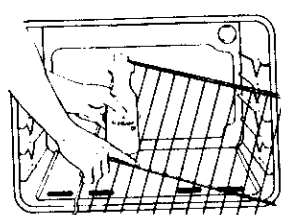

- If racks have been left in oven during the cleaning process, they should be treated as follows: After the cleaning process is completed and the oven has cooled, buff the underside of rack edges with Scotch-Brite scour-pad or rub *lightly* the underside of rack edges with a coating of vegetable oil. Use a light application of oil so it does not soil the oven. As a suggestion, use fingertips to apply oil. This will make the cleaned racks slide more easily.
- To remove occasional spillovers between cleanings, use a soap-filled scouring pad or mild cleanser; rinse well.
- It is better to clean the oven regularly rather than wait until there is a heavy build-up of soil in the oven.
- During the cleaning process, the kitchen should be well ventilated to help eliminate normal odors associated with cleaning.
- **DO NOT USE COMMERCIAL OVEN CLEANERS.**
- **DO NOT USE ALUMINUM FOIL OR OTHER LINERS IN THE OVEN.**
- During and immediately after a self-cleaning process, the microwave oven and the metal oven rack will be too hot to touch.

## Other Hints on Caring for Your Oven

### Cleaning Other Surfaces of Your Oven


**Door and control panel trim:** The metal trim around the door and the control panel can be cleaned with any nonabrasive cleanser such as Bon Ami or soapy water, rinse well. Be careful not to use an excessive amount of water.

**Glass on the oven door front:** To clean, use any suitable glass cleaner or soapy water. To prevent moisture from getting behind the glass, spray a cloth with glass cleaner then wipe the glass.

**Control Panel:** To clean, wipe with a damp cloth. Dry thoroughly. Do not use cleaning sprays, large amounts of soap and water, abrasives, or sharp objects on the panel. They can damage it.

### Oven Racks

To remove pull forward to the "stop" position; lift up on the front of the rack and pull out.

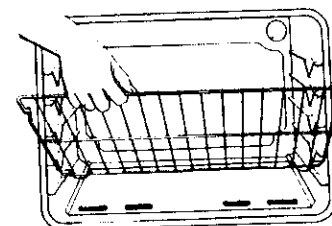


### Oven Light Bulb

Before replacing bulb, *disconnect power to oven at the main fuse or circuit breaker panel*. Be sure that the entire oven cavity including the light bulb is cool before attempting to remove.



#### To replace light bulb:

1. Carefully unscrew the glass light lens.
2. To obtain firm grasp on bulb, wear protective rubber gloves. Remove by turning bulb to the left. *Do not touch a hot oven light bulb with a damp cloth as bulb will break.*  
**NOTE:** If the bulb does break and you wish to remove it, be certain power supply is disconnected and wear protective gloves. You may contact your authorized Jenn-Air Service Contractor for service.
3. Replace bulb with a *40 watt oven-rated appliance bulb*. Bulb with brass base is recommended to prevent fusing of bulb into socket.
4. Replace bulb cover and reconnect power to oven. Reset clock.

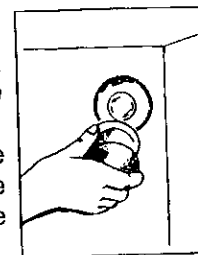

## More Information on the Self-Cleaning Process

- A slight odor may be detected, and if an oven is heavily soiled, some smoke may be visible. Some smoke and odor during the cleaning process is a normal occurrence. Since the oven vent is at the bottom of the control panel, vapors, moisture, etc. may be seen coming from this area.
- During the cleaning process, do not be alarmed if an occasional flame is visible through the oven window. This is caused by excessive food soil that was not removed before the oven was set to clean.
- **SINCE THE DOOR AND WINDOW OF THE OVEN WILL GET WARM DURING THE SELF-CLEANING PROCESS, AVOID CONTACT.**
- Some types of soil may disintegrate but leave a light film or heavier deposit of ash. The amount of ash depends on the amount of soil which was in the oven. After oven has cooled, this ash may be removed with a damp sponge. If other dark deposits remain after wiping with a sponge, the time set for the length of cleaning was not enough. Increase the cleaning time for future cleanings or clean more frequently. The normal cleaning time is 3 hours. A maximum of 4 hours may be selected if necessary.

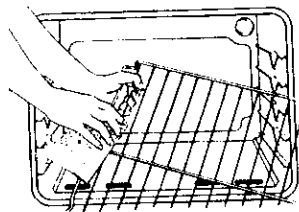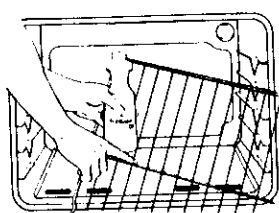

- If racks have been left in oven during the cleaning process, they should be treated as follows: After the cleaning process is completed and the oven has cooled, buff the underside of rack edges with Scotch-Brite scour-pad or rub *lightly* the underside of rack edges with a coating of vegetable oil. Use a light application of oil so it does not soil the oven. As a suggestion, use fingertips to apply oil. This will make the cleaned racks slide more easily.
- To remove occasional spillovers between cleanings, use a soap-filled scouring pad or mild cleanser; rinse well.
- It is better to clean the oven regularly rather than wait until there is a heavy build-up of soil in the oven.
- During the cleaning process, the kitchen should be well ventilated to help eliminate normal odors associated with cleaning.
- **DO NOT USE COMMERCIAL OVEN CLEANERS.**
- **DO NOT USE ALUMINUM FOIL OR OTHER LINERS IN THE OVEN.**
- During and immediately after a self-cleaning process, the microwave oven and the metal oven rack will be too hot to touch.

## Other Hints on Caring for Your Oven

### Cleaning Other Surfaces of Your Oven


**Door and control panel trim:** The metal trim around the door and the control panel can be cleaned with any nonabrasive cleanser such as Bon Ami or soapy water, rinse well. Be careful not to use an excessive amount of water.

**Glass on the oven door front:** To clean, use any suitable glass cleaner or soapy water. To prevent moisture from getting behind the glass, spray a cloth with glass cleaner then wipe the glass.

**Control Panel:** To clean, wipe with a damp cloth. Dry thoroughly. Do not use cleaning sprays, large amounts of soap and water, abrasives, or sharp objects on the panel. They can damage it.

### Oven Racks

To remove pull forward to the "stop" position; lift up on the front of the rack and pull out.

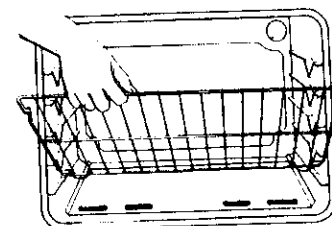


### Oven Light Bulb

Before replacing bulb, *disconnect power to oven at the main fuse or circuit breaker panel*. Be sure that the entire oven cavity including the light bulb is cool before attempting to remove.

#### To replace light bulb:

1. Carefully unscrew the glass light lens.
2. To obtain firm grasp on bulb, wear protective rubber gloves. Remove by turning bulb to the left. *Do not touch a hot oven light bulb with a damp cloth as bulb will break.*  
**NOTE:** If the bulb does break and you wish to remove it, be certain power supply is disconnected and wear protective gloves. You may contact your authorized Jenn-Air Service Contractor for service.
3. Replace bulb with a *40 watt oven-rated appliance bulb*. Bulb with brass base is recommended to prevent fusing of bulb into socket.
4. Replace bulb cover and reconnect power to oven. Reset clock.

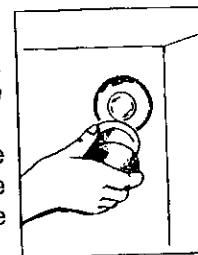




## Oven Bottom

Protect oven bottom against excessive spillovers especially acid or sugary spillovers as they may discolor the porcelain. Use the correct size cooking utensil to avoid boilovers. Never place cookware or aluminum foil directly on the oven bottom.

**To remove:** When cool, remove the oven racks. Slide the two catches, located at each rear corner of the oven bottom, toward the front of the oven.

Lift the rear edge of the oven bottom slightly, then slide it back until the front edge of the oven bottom clears the oven front frame. Remove oven bottom from oven.

**To replace:** Fit front edge of oven bottom into front frame. Lower rear of oven bottom and slide the catches back to lock oven bottom into place.

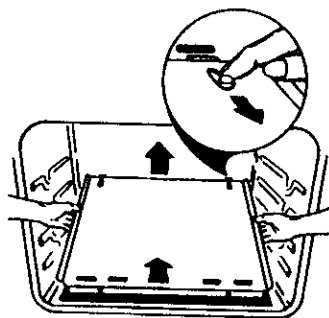

## How to Remove Oven for Cleaning and Servicing

Follow these procedures to remove appliance for cleaning or servicing.

1. Shut-off gas supply to appliance.
2. Disconnect electrical supply to appliance.
3. Disconnect gas supply tubing to appliance.
4. Remove screws that secure appliance to cabinet. Remove appliance from cabinet.
5. Reverse procedure to reinstall. If gas line has been disconnected, check for gas leaks after reconnection. (See Installation Instructions for gas leak test method.)

**NOTE:** A qualified servicer should disconnect and reconnect the gas supply to the appliance.

**WARNING:** Possible risks may result from abnormal usage, including excessive loading of the oven door and of the risk of tip over, should the appliance not be reinstalled according to the installation instructions.

## Adjusting Oven Temperature

The oven temperature can be adjusted if the actual oven temperature is too low or too high and the length of time to cook ALL foods is too long or too short. DO NOT adjust the temperature if only one or two items are not baking properly.

**To adjust the oven temperature:**


1. Press **Bake Pad**.
2. Turn Set Dial until 550° appears in the Display.
3. Immediately, press and hold the **Bake Pad** for several seconds until 00° appears in the Display.
4. Turn the Set Dial to select the temperature change desired. The oven temperature can be increased up to 35° or reduced by as much as 35° (display would show -35°) in 5° increments.
5. Press the **Cancel/Off Pad** and the time of day will reappear in the Display. The oven will now bake at the adjusted temperature.

**NOTE:** It is not necessary to readjust the oven temperature if there is a power interruption.

**IMPORTANT:** The oven temperature should be adjusted no more than 10° and then the oven should be tested. (We recommend baking 2-9 inch yellow layer cakes using a purchased box mix.) If the oven temperature is still too low or too high, repeat the procedure described above.

## Explanation of Fault Codes

Your appliance is equipped with an electronic control featuring built-in, self-diagnostic software. This software continuously monitors the control to insure safe and proper operation. If the software should detect a questionable situation, a **FAULT CODE** (F plus a number) will appear in the Display and continuous beeps will sound.

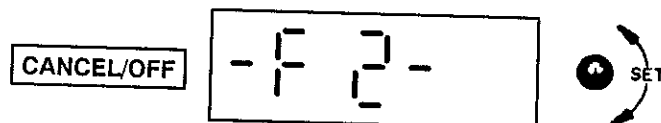

A fault code indicates that there may be functional error. As a safety precaution, the control will automatically cancel the program. Follow the procedures described below to check the appliance.

### During Normal Oven Cooking:

If a fault code appears in the Display and continuous beeps sound, press the **Cancel/Off Pad**. Then, reprogram the cooking operation.

If the fault code reappears in the Display, call a servicer. Do not use the oven until the control has been serviced.

### During a Self-Cleaning Process:

If the oven is heavily soiled, excessive smoke and flaring may result in a fault code. If this occurs, press the **Cancel/Off Pad** and allow the oven to cool for an hour. Then, reprogram the oven for the self-cleaning process.

If the fault code reappears in the Display, call a servicer. Do not use the oven until the control has been serviced.


## Oven Bottom

Protect oven bottom against excessive spillovers especially acid or sugary spillovers as they may discolor the porcelain. Use the correct size cooking utensil to avoid boilovers. Never place cookware or aluminum foil directly on the oven bottom.

**To remove:** When cool, remove the oven racks. Slide the two catches, located at each rear corner of the oven bottom, toward the front of the oven.

Lift the rear edge of the oven bottom slightly, then slide it back until the front edge of the oven bottom clears the oven front frame. Remove oven bottom from oven.

**To replace:** Fit front edge of oven bottom into front frame. Lower rear of oven bottom and slide the catches back to lock oven bottom into place.

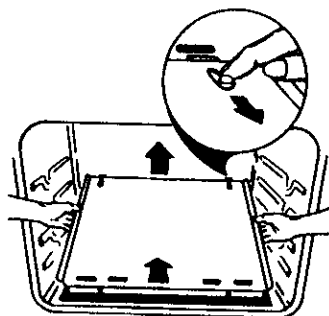

## How to Remove Oven for Cleaning and Servicing

Follow these procedures to remove appliance for cleaning or servicing.

1. Shut-off gas supply to appliance.
2. Disconnect electrical supply to appliance.
3. Disconnect gas supply tubing to appliance.
4. Remove screws that secure appliance to cabinet. Remove appliance from cabinet.
5. Reverse procedure to reinstall. If gas line has been disconnected, check for gas leaks after reconnection. (See Installation Instructions for gas leak test method.)

**NOTE:** A qualified servicer should disconnect and reconnect the gas supply to the appliance.

**WARNING:** Possible risks may result from abnormal usage, including excessive loading of the oven door and of the risk of tip over, should the appliance not be reinstalled according to the installation instructions.

## Adjusting Oven Temperature

The oven temperature can be adjusted if the actual oven temperature is too low or too high and the length of time to cook ALL foods is too long or too short. DO NOT adjust the temperature if only one or two items are not baking properly.

**To adjust the oven temperature:**


1. Press **Bake Pad**.
2. Turn Set Dial until 550° appears in the Display.
3. Immediately, press and hold the **Bake Pad** for several seconds until 00° appears in the Display.
4. Turn the Set Dial to select the temperature change desired. The oven temperature can be increased up to 35° or reduced by as much as 35° (display would show -35°) in 5° increments.
5. Press the **Cancel/Off Pad** and the time of day will reappear in the Display. The oven will now bake at the adjusted temperature.

**NOTE:** It is not necessary to readjust the oven temperature if there is a power interruption.

**IMPORTANT:** The oven temperature should be adjusted no more than 10° and then the oven should be tested. (We recommend baking 2-9 inch yellow layer cakes using a purchased box mix.) If the oven temperature is still too low or too high, repeat the procedure described above.

## Explanation of Fault Codes

Your appliance is equipped with an electronic control featuring built-in, self-diagnostic software. This software continuously monitors the control to insure safe and proper operation. If the software should detect a questionable situation, a **FAULT CODE** (F plus a number) will appear in the Display and continuous beeps will sound.

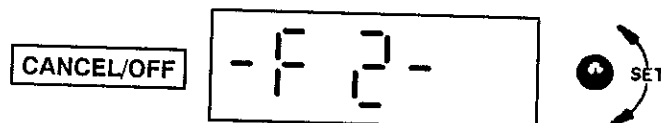

A fault code indicates that there may be functional error. As a safety precaution, the control will automatically cancel the program. Follow the procedures described below to check the appliance.

### During Normal Oven Cooking:

If a fault code appears in the Display and continuous beeps sound, press the **Cancel/Off Pad**. Then, reprogram the cooking operation.

If the fault code reappears in the Display, call a servicer. Do not use the oven until the control has been serviced.

### During a Self-Cleaning Process:

If the oven is heavily soiled, excessive smoke and flaring may result in a fault code. If this occurs, press the **Cancel/Off Pad** and allow the oven to cool for an hour. Then, reprogram the oven for the self-cleaning process.

If the fault code reappears in the Display, call a servicer. Do not use the oven until the control has been serviced.

## Before You Call for Service

Check the following list to be sure a service call is really necessary.

### If nothing on the oven operates:

- check for a blown circuit fuse or a tripped main circuit breaker.
- check if oven is properly connected to electric circuit in house.

### If clock, indicator words, and/or lights operate but oven does not heat:

- the controls may have been set incorrectly.
- clock controls may be set for delayed start of oven.

### If the oven light does not work:

- the light bulb is loose or defective.

### If oven will not go through self-cleaning process:

- controls may be improperly set.
- door may not be locked.
- check the "clean" and "stop" time settings and the current time of day on the clock.

### If oven did not clean properly:

- oven may need longer cleaning time.
- excessive spills were not removed prior to self-cleaning process.

### If oven door will not unlock:

- oven may not have cooled to safe temperature after self-cleaning process.
- electric current coming into the oven may be off.

### If foods do not broil properly:

- the control may not be set properly.
- check rack position.

### If baked food is burned or too brown on top:

- food may be positioned incorrectly in oven.
- oven not preheated properly.

### If foods bake unevenly:

- the oven may be installed improperly.
- check the oven rack with a level.
- stagger pans, do not allow pans to touch each other or oven wall.
- check instructions for suggested placement of pans on oven rack.

### If oven baking results are less than expected:

- the pans being used may not be of the size or material recommended for best results.
- there may not be sufficient room around sides of the pans for proper air circulation in the oven.
- check instructions for preheating, rack position and oven temperature.

### If baking results differ from previous oven:

- oven thermostat calibration may differ between old and new ovens. Follow recipe and use and care directions before calling for service since the calibration on the previous oven may have drifted to a too high or too low setting.

### If F plus a number appear in the Display:

- see instructions on page 29.

## If You Need Service

- call the dealer from whom your appliance was purchased or the authorized Jenn-Air Service Contractor listed in the Yellow Pages. Your Jenn-Air Service Contractor can provide better and faster service if you can accurately describe problems and give model and serial number of the appliance. Be sure to retain proof of purchase to verify warranty status. Refer to WARRANTY for further information of owner's responsibilities for warranty service.
- if the dealer or service company cannot resolve the problem, write to Jenn-Air Customer Assistance, c/o Maytag Customer Service, P.O. Box 2370, Cleveland, TN 37320-2370, 615-559-3646.
- use and care manuals, service manuals, and parts catalogs are available from Jenn-Air Customer Assistance, c/o Maytag Customer Service.

All specifications subject to change by manufacturer without notice.

## Before You Call for Service

Check the following list to be sure a service call is really necessary.

### If nothing on the oven operates:

- check for a blown circuit fuse or a tripped main circuit breaker.
- check if oven is properly connected to electric circuit in house.

### If clock, indicator words, and/or lights operate but oven does not heat:

- the controls may have been set incorrectly.
- clock controls may be set for delayed start of oven.

### If the oven light does not work:

- the light bulb is loose or defective.

### If oven will not go through self-cleaning process:

- controls may be improperly set.
- door may not be locked.
- check the "clean" and "stop" time settings and the current time of day on the clock.

### If oven did not clean properly:

- oven may need longer cleaning time.
- excessive spills were not removed prior to self-cleaning process.

### If oven door will not unlock:

- oven may not have cooled to safe temperature after self-cleaning process.
- electric current coming into the oven may be off.

### If foods do not broil properly:

- the control may not be set properly.
- check rack position.

### If baked food is burned or too brown on top:

- food may be positioned incorrectly in oven.
- oven not preheated properly.

### If foods bake unevenly:

- the oven may be installed improperly.
- check the oven rack with a level.
- stagger pans, do not allow pans to touch each other or oven wall.
- check instructions for suggested placement of pans on oven rack.

### If oven baking results are less than expected:

- the pans being used may not be of the size or material recommended for best results.
- there may not be sufficient room around sides of the pans for proper air circulation in the oven.
- check instructions for preheating, rack position and oven temperature.

### If baking results differ from previous oven:

- oven thermostat calibration may differ between old and new ovens. Follow recipe and use and care directions before calling for service since the calibration on the previous oven may have drifted to a too high or too low setting.

### If F plus a number appear in the Display:

- see instructions on page 29.

## If You Need Service

- call the dealer from whom your appliance was purchased or the authorized Jenn-Air Service Contractor listed in the Yellow Pages. Your Jenn-Air Service Contractor can provide better and faster service if you can accurately describe problems and give model and serial number of the appliance. Be sure to retain proof of purchase to verify warranty status. Refer to WARRANTY for further information of owner's responsibilities for warranty service.
- if the dealer or service company cannot resolve the problem, write to Jenn-Air Customer Assistance, c/o Maytag Customer Service, P.O. Box 2370, Cleveland, TN 37320-2370, 615-559-3646.
- use and care manuals, service manuals, and parts catalogs are available from Jenn-Air Customer Assistance, c/o Maytag Customer Service.

All specifications subject to change by manufacturer without notice.