




Dryer Operating Instructions

MODEL NUMBER
YE/YG225LV
YE/YG225LM

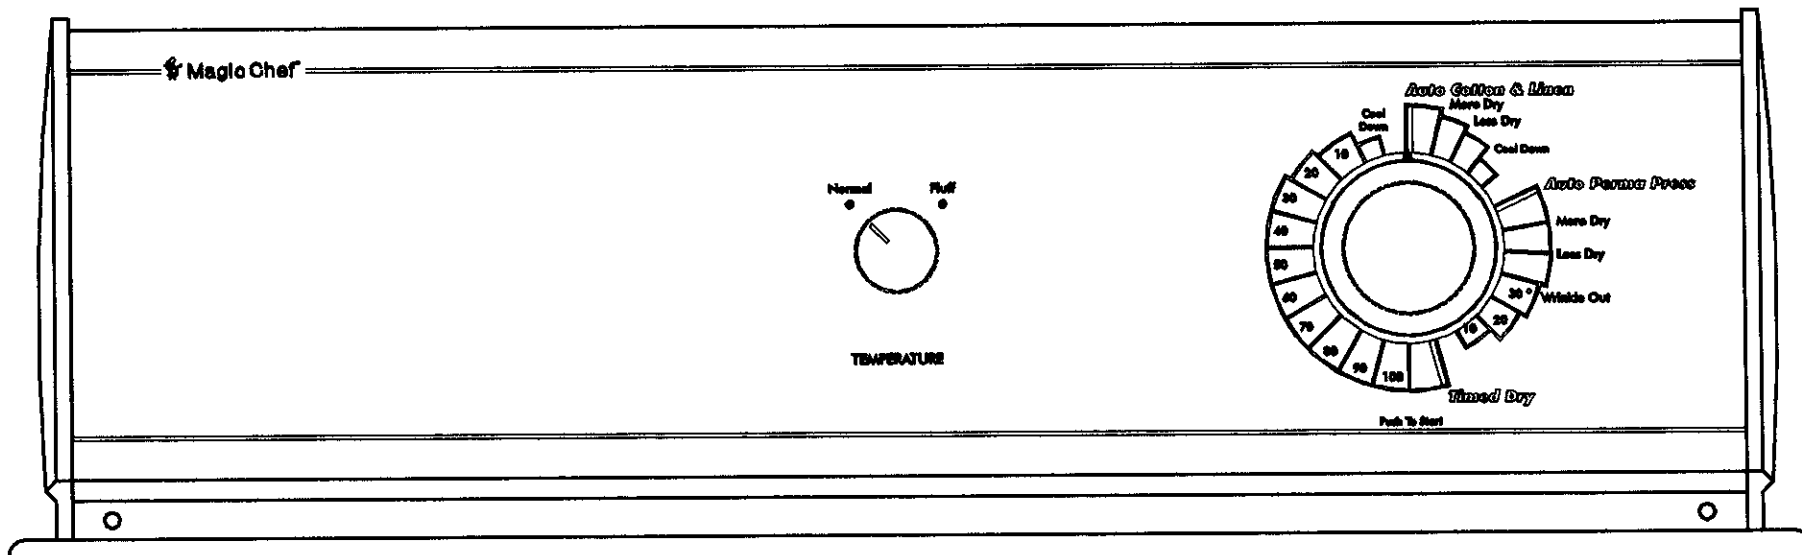

⚠ WARNING: To reduce the risk of fire, explosion, electric shock, or personal injury, read the **IMPORTANT SAFETY INSTRUCTIONS** before operating your DRYER.

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

FOR YOUR SAFETY

If you smell gas

1. Open windows.
2. Don't touch electrical switches.
3. Extinguish any open flame.
4. Immediately call your gas supplier.

READ THESE OPERATING INSTRUCTIONS CAREFULLY BEFORE YOU USE THE DRYER AND RETAIN FOR FUTURE REFERENCE.

Before operating your dryer be sure that all installation requirements are met. SEE **INSTALLATION INSTRUCTIONS**.

TO OPERATE:

1. **CHECK LINT FILTER.** Be sure the lint screen is clean and properly replaced. Never use the dryer without the Lint Filter in position.
2. **LOAD.** Generally, items that are washed together can be dried together, but the drying load should be sorted by weight, texture and bulk of fabrics within practical limits.

Overloading restricts tumbling action and results in uneven drying as well as excessive wrinkling of some fabrics.
3. **CLOSE LOADING DOOR.**
4. **SELECT CYCLE AND SET SELECTOR.**

TIME DRY

If you wish to regulate the drying time, use the **TIMED DRY** cycle. This cycle is used with either a **FLUFF** or **NORMAL** setting on the **SELECTOR**.

For timed drying, turn the Cycle Selector (large knob) clockwise until it points to the proper time setting in the Timed Dry cycle.

For heat-sensitive articles use the **FLUFF** setting, which will of course, require longer drying times.

AUTOMATIC CYCLES

Select **NORMAL** on **SELECTOR**.

Turn cycle selector (large knob) clockwise to **AUTOMATIC DRY** starting position of either **COTTON & LINEN** or **PERMA PRESS** cycles. Most loads will give satisfactory performance on "**LESS DRY**" setting. For very large or very bulky loads adjustment toward "**MORE DRY**" setting will be appropriate.

SELECTOR must be on **NORMAL** for automatic cycles to work correctly. If **FLUFF** is inadvertently selected the dryer will complete the cycle, but clothes will be wet.

5. **CLOSE LOADING DOOR.**
6. **PUSH TO START.**

The large control knob on the timer dial of your dryer serves as a Start Switch as well as a Cycle Selector. After the knob has been rotated to the desired drying cycle or drying time, it should be pressed in momentarily to start the dryer motor, gas burner/heating element and blower. The dryer loading door must be closed for the Start Switch to function.

7. **STOPS AUTOMATICALLY.**

A buzzer will sound to alert you to the end of the cycle. Remove the clothes immediately to minimize wrinkling.

FEATURES

AUTO-DRY PERMANENT PRESS—

is designed to dry all synthetic fabrics, Double Knits and Permanent Press fabrics automatically. The Auto Permanent Press Cycle also provides an automatic extended cool down to minimize wrinkles in Permanent Press fabrics. This WRINKLE OUT feature allows the clothes to tumble without heat for about 25 minutes after the permanent press cycle is complete.

A signal buzzer sounds after 12 minutes of WRINKLE OUT then every four minutes until the clothes are removed. The dryer will stop automatically when the WRINKLE OUT period is completed.

Clothes can be removed at anytime throughout WRINKLE OUT.

When the clothes are removed during the WRINKLE OUT period, turn the timer to the off position to shut off the buzzer.

AUTO-DRY COTTON & LINEN is designed to dry most cottons and linens automatically.

DEGREE OF DRYNESS:

Two levels of dryness can be preset on the automatic cycles by setting the cycle selector at the desired start dry settings.

1. **LESS DRY:** This setting to be used for delicate fabrics or items to be damp ironed or finished hanger dried.
2. **MORE DRY:** This setting to be used for heavy or bulky fabrics that require longer drying times.

TIMED DRY

If you wish to regulate the drying time use the TIMED DRY CYCLE.

The TIMED DRY CYCLE provides up to 110 minutes of drying time. The clothes will continue to tumble during cool down for approximately 10 minutes to cool them and reduce wrinkling.

Use Timed Dry for very small loads (under about 4 pounds). In mixed loads, fabrics vary in bulk and weight, therefore, some items will dry faster than others. Reset to the desired number of minutes in the TIMED DRY CYCLE to complete the drying of the remaining items.


FLUFF (no heat). For Fluff Drying use TIMED DRY and set selector on FLUFF for room temperature air drying. Use the FLUFF CYCLE to freshen articles, or dry foam or rubberized items..

COOL DOWN

This period allows the clothes to reach a temperature comfortable for handling and reduces the creation of wrinkles. Clothes can be removed at any time during this period. No significant energy usage is incurred as the heat is off and room temperature air is used. Cool Down occurs at the end of the cycle.

LINT FILTER

The Lint filter is located in the bottom of the loading port and is accessible when the loading door is open. It filters all the air circulated through the dryer and traps the considerable quantities of lint shed by most fabrics when they are dried after being washed. The Lint Filter should be removed at the conclusion of each drying cycle for cleaning. It should be lifted straight up until it clears the door opening.

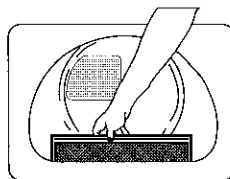

Remove the lint with your hands. Be sure the lint screen is properly replaced.

If a dryer fabric softener is used frequently, it may deposit on lint screen. Occasionally wash lint screen with soap and water (not detergent).

DOOR SAFETY SWITCH

As soon as the loading door is opened, the dryer will stop operating; the dryer drum will stop tumbling, the heaters will turn off. Inquisitive youngsters cannot see, much less touch, the drying drum while it is in motion. This safety feature will serve also as a practical convenience. It permits an over-looked

item to be added ... or a delicate garment to be withdrawn if it dries before the rest of the load ... or the progress of to be tested by hand.

After the drying door has been opened, the Start Switch must be activated by pressing in the Cycle Selector knob. When this is done, the original drying cycle will resume until it is completed.

DRYING GUIDE

DRYING LOAD	CYCLE SELECTOR	APPROX. MINUTES DRYING
PERMANENT PRESS AND DOUBLE KNIT		
4 Pounds or Less		
Delicate Fabrics	Timed	15-25
Medium Fabrics	Timed	25-30
5 Pounds and up	Permanent Press	—
All Textures and Weights	Automatic	
COTTONS AND LINENS		
4 Pounds or Less		
Delicate Fabrics	Timed	20-30
Medium Fabrics	Timed	30-40
5 pounds and up	Regular	—
All textures and weights	Automatic	
5 to 12 Pounds		
Heavy Fabrics	Timed	45-55
Medium Fabrics	Timed	35-45
Lightweight Fabrics	Timed	30-40
12 Pounds and Up		
Heavy Fabrics	Timed	70-90
Medium Fabrics	Timed	60-80
Lightweight Fabrics	Timed	45-65
SYNTHETICS		
6 Pounds or Less	Timed	20-30
6 to 9 Pounds	Timed	30-35
SPECIALTIES		
Plastic, Foam Rubber, etc.	Timed	Depends on Items
Feather Pillows, Stuffed Toys, etc.	Timed	Depends on Items
Sweaters, Canvas Shoes, etc.	Timed	Depends on Items

NOTE: Drying times listed do not include "Cool-Down" periods. Drying times also vary with washer performance and type of dryer exhaust.

AUTOMATIC IGNITION - GAS DRYER

At the beginning of each drying period the burner is automatically lighted by an electric ignitor. The burner is turned off and on to maintain the selected temperature in the drum.

DRYER MAINTENANCE AND CARE

- Occasionally wipe exterior with a clean damp sponge or cloth. Polish with a soft dry cloth. If desired, occasionally polish, being careful NOT to use polish on plastic parts.
- After every load, clean lint filter and screen.
- Lifetime lubrication is done at the factory, so your dryer never needs to be oiled or greased.
- Do not lay heavy or sharp objects on top of your dryer.
- The top of both washer and dryer should not be used for removing stains from garments. Some stain removers, such as rust remover, will mar the finish.
- Remove pins, buckles or other sharp objects from clothes to prevent scratching interior parts.
- Clothes should not be stored in dryer.
- Remove all spills with a damp, soft cloth, as some laundry products will remove the glossy finish.
- Once every year check exhaust system for clogged lint and clean if necessary.
- Do not overload for best results and long use.

- CLEANING THE DRUM**—Keep dryer drum clean at all times. After drying a load of heavily starched, newly-dyed or tinted fabrics, or non-color-fast garments, wipe the drum with warm soapy water and rinse with a damp cloth to remove starch or dye.

DO NOT POUR WATER INTO THE DRUM.

- Check the drum after each load for loose buttons, buckles, etc. which may have fallen off in the tumbling process.

BEFORE YOU CALL FOR SERVICE

Review Operating Instructions

If dryer will not start, or there is no heat:

- is the electrical cord plugged in correctly?
- has the fuse blown or is the circuit breaker tripped?
- are the controls set correctly?
- is dryer door closed?
- is lint screen in correctly?

If articles are slow to dry:

- is lint screen or exhaust pipe clogged?
- is timer dial set correctly?
- is clothing unusually wet or bulky?

If dryer is noisy:

- are there foreign objects, such as buttons, coins, or nails in the dryer. Not only do they cause noise they may damage clothing as well as the dryer.

KEY FACTS: **AUTOMATIC DRYER**
BRAND NAME: **MAGIC CHEF**
MODEL NO.: **YE/YG225L**

Type	Electric Dryer	Gas Dryer
Dimensions:		
Cabinet Height	36" (91.4 CM)	36" (91.4 CM)
w/Backguard	44" (111.7 CM)	44" (111.7 CM)
Width	27" (68.5 CM)	27" (68.5 CM)
Depth	27" (68.5 CM)	27" (68.5 CM)
Clearance Required For Loading Door	50" (127 CM)	50" (127 CM)
Electrical Requirements:		
Volts	240V	120V
Frequency & Phase	60HZ	60HZ
Type & Size of Circuit	No. 10 AWG Copper	No. 12 AWG Copper
Fuse Size	30 AMP	15 AMP Time Delay
Supply Cord	Non Supplied	Supplied
Dryness Control	Thermostatic	Thermostatic
Heat Selections:	2 Positions; Normal, Fluff	
Number/Types of Cycles:	3 Cycles	
	Auto Reg.	Auto Perm. Press Timed Dry
Gas Requirements:		
Rated Input	18,000 BTU/HR.	
Type:	Natural Gas	
Inlet Connection Size	¾" - 18 N.S.	
Type of Ignition System:	Intermittent	
Venting:	Rear, Bottom, Right or Left Side	Rear, Bottom or Right Side
	4" Diameter Duct	4" Diameter Duct
Outside Venting	Recommended	Required