
Whirlpool AUTOMATIC WASHER

Use & Care Guide

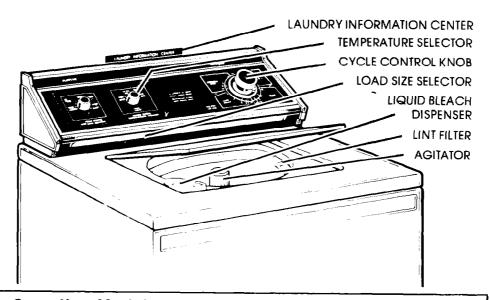

Copy Your Model and Serial Numbers Here

When you need service, or call with a question, have this information ready:

- 1. **Complete** Model and Serial Numbers (from the plate under the lid near the hinge).
- 2. Purchase date from sales slip (or date installed).

Copy this information in these spaces. Keep this book in the Laundry Information Center with your *Laundry Guide*, sales slip and warranty

1.1 des 12 de pare	
 er (1, m) er	
 - 2 mgs. i mjojim po	
 en I organization (Reference)	

Before using your Washer

Please read this booklet to be sure your washer is installed and used properly. It will help you get the best results and longest life your washer was designed to give

You are personally responsible for making sure that your washer...

- Is installed by a qualified installer.
- Is properly installed and leveled on a floor that can support the weight
- Is connected to the right kind of outlet, electric supply, water supply and drain.
- Is properly electrically grounded
- Is used only for obsinormally expected of home automatic washers
- Is properly maintained
- Is pirotected from the weather.
- Is not run by children or anyone unable to operate it properly.

Remove the Consumer Buy Guide label. It will be easier to remove before the washer is used.

You may want to wipe out the basket with a damp cloth before using to remove dust from storing or shipping.

SPECIAL INSTRUCTIONS: See the Laundry Guide for tips on detergents, other laundry aids and instructions for washing special items.

See the Installation Instructions for complete information

SAFETY FIRST

Do not permit children to operate or play with the washer.

CAUTION: Store laundry detergent and additives in a cool, dry place where children can't reach them.

SPINNING SAFETY

If the lid is opened while the basket is spinning, the basket will automatically stop in a few seconds. DO NOT ADD OR REMOVE ITEMS UNTIL THE BASKET STOPS COMPLETELY.

SPECIAL CAUTION

Flammable gases may build up in hot water pipes and heater. This can happen when hot water hasn't been used for a while (usually two weeks or more).

To prevent injury or damage, allow any gases to escape by running hot water from the faucet nearest the washer for several minutes. Don't smoke near the faucet while it is open, and turn off any open flame.

Contents

Before Using Your Washer	2
Loading Your Washer	5
Understanding Your Washer	÷
Cleaning the Lint Filter	3
Using Your Washer	. Z.
Water Levels and Load Sizes	Ę
Liquid Bleach Dispenser	. 5
Important Detergent Information	. 6
	. Ó
Using the SUDS-MISER System	- •
for Spinning Only	- 7
Cycle Operation	. 8
PERMANENT PRESS	غ
KNITS GENTLE	ع .
REGULAR HEAVY	ع .
SOAK CYCLE	10
PRE-WASH	
If You Need Service or Help	1()
Before Calling for Service	1()
2 If You Need Service	4 '
3 If You Have a Problem	11:

Loading your Washer



For best washing results and energy savings, sort the laundry carefully.

1. Sort the Laundry into Loads.

- Group the laundry into loads that can be washed and dried together.
 See the Laundry Guide for information and samples of typical loads.
- Try to mix large and small items for best movement in the washer.

2. Measure Detergent; Add to Washer Basket.

- See detergent information on page 6 and in Section IV of the Laundry Guide.
- Add dry bleach or water conditioner (not fabric softener) if used.
 Follow the package directions carefully.

3. Load the Washer.

- Spread the load evenly. (Don't put all the towels on one side and a few wash cloths on the other.) An unbalanced load can cause the washer to shake during spinning.
- Load without packing so items can move freely for best cleaning and least wrinkling.

4. Pour Liquid Bleach into the Dispenser.

• See page 5 and the "Laundry Aids" section of the Laundry Guide for more information.

5. Add Diluted Fabric Softener only to the Deep Rinse Cycle.

 DO NOT ADD FABRIC SOFTENER TO THE WASH. Fabric softeners can combine with soap or detergent to make greasy stains on fabrics.

Understanding your Washer

This automatic washer has cycle settings with different agitation and spin speeds for different fabric types. For example, the REGULAR HEAVY Cycle has high agitation and high spin speeds. The PERMANENT PRESS Cycle, has high agitation speeds, but low spin speeds.

The washer has a LOAD SIZE SELECTOR that lets you adjust the water level to match the size of the load.


It has a **TEMPERATURE SELECTOR**. You can select the wash and rinse water temperatures best for the amount of soil and fabric type in each load.

Sections in this Use & Care Guide go into detail on the "what and why" of each setting. Read this and the Laundry Guide carefully to get the best cleaning results.


Cleaning the Lint Filter

Water runs through the lint filter whenever the washer agitates. Check it often to make sure it's clean and filtering at its best.

To remove it for cleaning, press the release and pull straight out. Instructions for cleaning are printed on the bottom of the filter.

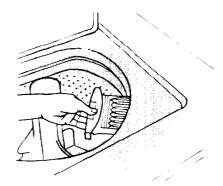

Using your Washer

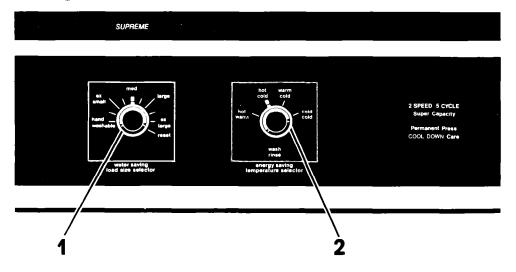

Your auton at consider is easy to use 15 make it even easier, read the following steps before starting your first load.

Start your washer lafter you put in detergent, the load, and any other laundry aids according to information on page 3 and page 6.

1. Set the LOAD SIZE SELECTOR.

- Select the water leve that matches the size of the load. See page 5 for more information.
- To change the setting on the LOAD SIZE SELECTOR, first move it to RESET.
 Then move it back to the setting you want.

IMPORTANT: For the best cleaning results with the least wrinkling, make sure the load has enough water for items to move freely.

2. Set the TEMPERATURE SELECTOR.


- Match the wash and rinse water temperatures to the type of fabrics and soils being washed. (See the instructions under the washer lid and on page 14 in your Laundry Guide.
- Be sure to use a cold rinse for PERMA-NENT PRESS and KNITS GENTLE Cycles

Cold water rinses save energy and help prevent wrinkles from setting into fabrics.

3. Select a Cycle and Start the Washer.

- Push the Cycle Control Knob in and turn it to the right (clockwise).
- Stop when the pointer is on the *number of minutes* of washing you want in the cycle you want.
- Instructions for which cycles to use for each fabric type are under the lid.
- To start the washer, pull the Cycle Control Knob out. When the cycle is over, the washer will stop.
- To stop the washer at any time during a cycle, push the Control Knob in. Pull it out to restart the washer.
- To change a setting, push the Control Knob in to stop the washer. Then turn the Control Knob to the right (clockwise) to the setting you want. Pull the knob out to start the washer.
- Pages 8-11 show what happens in each cycle.



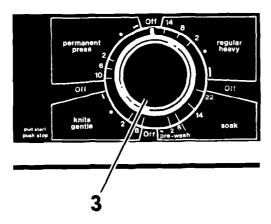

Water Levels and Load Sizes

The LOAD SIZE SELECTOR lets you control the amount of water that fills the washer. The selector can be set at any water level between HANDWASH-ABLE and EXTRA LARGE.

WATER LEVELS	
\$etting	Gallons/Liters
HANDWASHABLE	7.8 - 29.5
MEDIUM	13.9 52.6
FXTRAIARGE	20.5 77.6

Approximate fill with load.

To change the water level setting, move the LOAD SIZE SELECTOR to RESET. Then move it to the setting you want. To save water and energy, match the water level to the load size.

For the best cleaning results, the load should move freely in the water. Watch for rollover. An item (like a sock) should sink in the middle and come up later on the outside.

Be sure to read pages 11 - 13 in your *Laundry Guide*. You will find more information on loading and load sizes.

IMPORTANT:

- The HANDWASHABLE setting is designed for very small loads. It uses very little water. Too big a load in this amount of water may tear some items.
- Water may splash if you use very low water levels with REG / HEAVY. If this happens, move the LOAD SIZE SELECTOR to RESET. Then move it to a higher setting.

Liquid Bleach Dispenser

The bleach dispenser is under the lid of the washer in the front corner. It has the words, LIQUID BLEACH, on it.

- Before starting the washer, but after loading it, add the bleach.
- Use a measuring cup with a pouring spout to help avoid spilling or spattering the bleach
- Follow the directions on the bottle for the amount to use. Never use more than 1 cup (250 mL) for a full load. Use less with lower water level settings.

Use a standard measuring cup with a pouring spout to fill dispensers.

 Do not let any bleach run down into the washer basket. Concentrated bleach will damage any fabric.

Important Detergent Information

Detergents and soaps clean by loosening soil, and by holding it in the water so it drains away. If not enough detergent is used, soil and lint can settle back on the items in the load.

SOAP works best in soft water (0-4 grains hardness). In harder water, both the wash and rinse water should be softened. Use enough soap to make about 11-2 to 2 inches (3.8 to 5.5 cm) of suds.

DETERGENT works in hard or soft water. Package directions are usually based on soft water and

washers with normal-size tubs. **Use** more detergent...

- 1. for hard water.
- 2. for loads and water levels larger than MEDIUM.
- 3. for heavy greasy or oily soils.
- 4. if the detergent is low phosphate.
- for cold-water washes.**DETERGENT SUDS.** There are

high, normal and low sudsing powdered detergents. If the recommended amount of detergent makes too much suds, switch to a lower sudsing brand. DO NOT REDUCE THE AMOUNT of detergent.

Use the following chart as beginning suggestions for powdered and liquid detergent amounts. See your Laundry Guide for more information (pages 14-22).

RECOMMENDED AMOUNT OF DETERGENT *- FULL TUB

	WATER HARDNESS IN GRAINS			
	0-4 Grains	4-10 Grains	10-20 Grains	
Powdered Detergents				
Low Suds	11/2 cups (300 mL)	112 cups (350 mL)	13 4-2 cups	
			(425-475 mL)	
Normal Suds	13 ₄ cups (425 mL)	21 z cups (600 mL)	3 cups (700 mL)	
High Suds	2 cups (475 mL)	3 cups (700 mL)	312 cups (825 mL)	
No phosphate	– Follow package recommendations –			
Liquid Detergents 13 to 113 cups (80 to 325 mL), dep			ng on the brand	
	and amount of soil. Follow package recommendations.			

- * These recommendations do not apply...
- In areas where phosphates are banned.
- In areas with laws limiting (by weight or percentage) the amount of detergent used in a wash load.


For Rinsing Only

Your washer can be set to rinse only. Use the setting for an extra rinse, or for laundry that only needs a rinse and spin.

There is a dot just after the numbers in PERMANENT PRESS, REGULAR HEAVY and KNITS GENTLE. If you push in on the Cycle Control Knob, turn the pointer to one of those dots and pull the Control Knob out, the washer will fill, agitate, drain and spin.

If you want high agitation and a high-speed spin use the dot in REGU-

LAR HEAVY. If you want low agitation and a low-speed spin, use the dot in KNITS GENTLE. Use the dot in PERMANENT PRESS if you want high agitation and a low-speed spin.

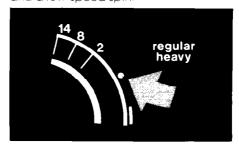

Model LA5805XK Only

Using the Suds-Miser® System

If your washer has the SUDS-MISER* System, it has two drain hoses. One hose drains wash water into the storage tub, the other carries rinse water to the drain.

The storage tub should hold at least 20 gallons (76 liters). If you do not want to re-use wash water, leave the stopper out of the storage tub so the water drains away.

The basket in your super capacity washer holds more than 20 gallons (74 liters) when the **LOAD SIZE SELECTOR** is set on EX LARGE. Because so many storage tubs hold only 20 gallons, your washer is designed to save most of the wash water and pump the rest down the drain.

If you have a storage tub big enough to hold about 25 gallons (95 liters), you can have a qualified installer convert your washer to save all the wash water.

To Save Wash Water

Be sure the stopper is in the storage tub. The SUDS-MISER system does not save wash water from the PERMANENT PRESS Cycle.

In the PERMANENT PRESS Cycle, part of the wash water is drained away (with part of the detergent).

Then the washer fills again with cold water. This helps keep permanent press fabrics from wrinkling during the spin.

To Re-Use Wash Water

To pump the used wash water back into the washer, push in the Cycle Control Knob. Turn it to the right (clockwise) so it points to **SUDS** just before the time numbers in the REGULAR HEAVY Cycle.

Pull the Control Knob out. The washer will start pumping the used water into the basket. About an inch of water will stay in the storage tub. This water will contain most of the soil that settles out.

When the washer is finished pumping, fresh water will finish filling the basket to the selected level.

When the washer stops filling, push the Cycle Control Knob in. Add about half the recommended amount of detergent. (See page 6.)

Add the load of laundry; pull the Cycle Control Knob out.

IMPORTANT: The REGULAR HEAVY Cycle follows **SUDS**. If you don't want to start with REGULAR HEAVY, push the Cycle Control Knob in, turn it to another cycle and pull it out to start the washer.


For Spinning Only

There may be times when you want to drain out all the wash water and start over. To stop the washer at any time, just push in on the Cycle Control Knob.

To set the washer so it drains and spins water out of the load, push in on the Control Knob, turn the dial to the right (clockwise) so the pointer is touching the bar just before OFF in any cycle.

The washer will drain, spin out water and stop. If you want a low-speed

spin, use the bar on PERMANENT PRESS or KNITS GENTLE. All the other cycle settings have a high-speed spin.

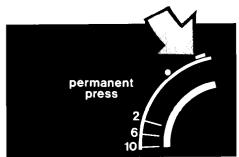


Cycle Operation

Nour wash in tractive cycles on the Evalent ordroid of an exide is designed human. If exact it type with presset a attachment as the misseed. The numbers in each cycle are for the number of minutes you want the washer to agitate before it drains and fills for the rinse. You will want longer agitation times for heavily soiled loads.

You choose the wash and rinse


WHAT HAPPENS IN EACH CYCLE:

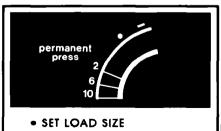


- SET WATER TEMPERATURES
- PUSH IN KNOB, TURN TO CYCLE AND TIME
- PULL OUT TO START

PERMANENT PRESS CYCLE

Use for permanent press fabrics. Cooling of the wash water and low spin speeds help prevent the setting of wrinkles

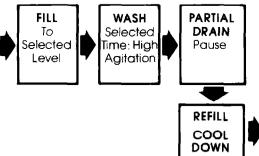


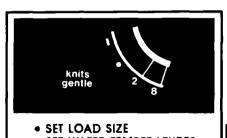


- SET WATER TEMPERATURES
- PUSH IN KNOB, TURN TO CYCLE AND TIME
- PULL OUT TO START

KNITS GENTLE CYCLE

Use for delicate items and washable synthetic knits such as polyester, nylon acrylic. Wash nylon hose or panty hose in a net laundry bag.

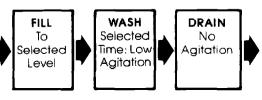

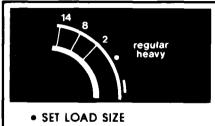

- SET WATER TEMPERATURES
- PUSH IN KNOB, TURN TO CYCLE AND TIME
- PULL OUT TO START

REGULAR HEAVY CYCLE

Use for sturdy white and colorfast cottons, and for heavy work clothes. High agitation and spin speeds are preset for best cleaning results.



water temperature; you want with the

TEMPERATURE SELECTOR.


You set the amount of water triat tills the tuble to the LOAD SEZE.

SELECTOR.

NOTE: You highly that same


of the SPINI cycles have **SPRAY RIN-SES**. Cold water is sprayed on the spinning load to help rinse and remove literagent residue.

If you furn to a cycle and start the washer, but change your mind push in a title Cycle Control Knob and turn for the right (clockwise) to the setting you want Their built out.

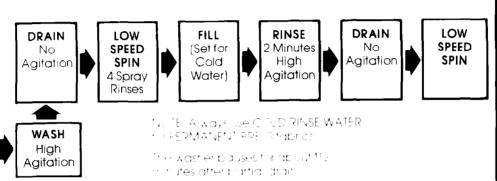



NOTE A: ways use COLD RINSE WATER for Knits and Delicate Items

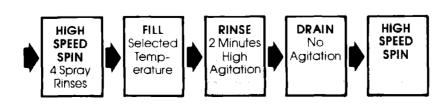



- SET LOAD SIZE
- SET WATER TEMPERATURE
- PUSH IN KNOB, TURN TO CYCLE AND TIME
- PULL OUT TO START

SOAK CYCLE

This cycle is riot for washing, it soaks, agitates spins out the water and stops (no rinse. Use it for stained, yellowed, grey or heavily soiled laundry with a detergent or pre-soak product. Chlorine bleach. If wanted should be added to the cycle you. use after the SOAK Cycle is over





- SET WATER TEMPERATURE
- PUSH IN KNOB, TURN TO CYCLE AND TIME
- PULL OUT TO START

PRE-WASH CYCLE

Use for heavily soiled items that may need two washes use enough detergent for a single wash. When the washer stops, add more detergent and select a cycle *




If You Need Service or Help, We suggest You **Follow These Three** Steps:

1. Before calling for service

Problems are sometimes caused. by little things you can correct without tools. Check this list before you call for service

IF YOUR WASHER DOES NOT FILL:

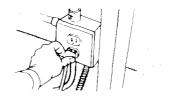


- Is the power supply cord plugged in?
- Are both water faucets open?




- Is a fuse blown or circuit-breaker tripped?
- Are the water supply hoses kinked?
- Is the Cycle Control Knob set and pulled out?

* Dissolve enzyme pre-soak and detergent powders to help prevent spot fading on colored Items. If you use chlorine bleach, it MUST be diluted with a quart of warm water and added after the washer fills. Do not use bleach dispenser. See Laundry Guide for more information.

Betweendaging developent tin was not be to be obtained water or use of the arm water or

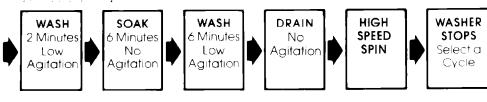

* Dissolve enzyme pre-soak and detergent powders to help prevent spot fading on colored items. If you use chlorine bleach, it MUST be diluted with a quart of warm water and added after the washer fills. Do not use bleach dispenser. See *Laundry Guid*e for more information.

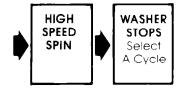

The second control of the second control of

IF YOUR WASHER DOES NOT SPIN:

- Is the lid closed
- Is the power supply bord plugged in
- Is a fuse blown a recor breaker tripped?

IF WASHER FILLS AND DRAINS WITHOUT RUNNING:

 Make sure that I - Liville I ontro-Knob is pointing to inhum ber in the cycle.

IF YOUR WASHER STOPS DURING THE PERMANENT PRESS CYCLE.

 Remember, the washer will stop for about 112 minutes after the partial drain during the cool-down period in this cycle.

MAKE SURE THE DRAIN HOSE IS HIGHER THAN THE WATER LEVEL IN THE WASHER. IF IT ISN'T...

- The washer may seem to be draining during wash and mise cycles.
- Water can sphore out See installations instructions."

2. If you need service:



If vour WHIRLPOOL appliance ever needs service anywhere in the United States, help is just a phone call away. It to your nearest Whirlpool franchised TECH-CARE service representative.

Whirlpoo: maintains a nationwide set work of franchised TECH-CARE service companies to fulfill your warranty and provide after-warranty service and maintenance to keep your WHIRLPOOL appliance in peak condition.

Vou'l' find your nearest TECH-CARE service company I sted in vour loca telephone book Yellow Pages under APPLIANCES — HOUSEHOLD — MAJOR SERVICE & REPAIR Should you not find a listing, dial free, the Whirlpool COOL-LINE service assistance telephone number.
When calling from:

Michigan ... (800) 632-2243 Alaska & Hawaii ... (800) 253-1121 All other states ... (800) 253-1301

If you move... To make sure that your appliance is correctly installed and to insure its continued satisfactory operation, please telephone your nearest TECH-CARE' service company for installation or to get the name of a qualified installer. (Installation cost will, of course, be paid by you.)

Helpful hints.... You can in explication. TECH-CARE service representative give you taster service if you include the mode and serial riumber of your appliance when requesting service. A scilietair your sales slip and warranty to verify your warranty status.

Remember... Your TECH-CARE service representative is specially trained in the expert repairing and servicing of your WHIRLPOOL appliances. He can help you maintain the quality originally built into your WHIRLPOOL appliance. So why not take the time, now, to look up his telephone number and jot it down in the space provided on the cover.

3. If you have a problem:

Call Whirlpool Corporation in Benton Harbor at the COOL-LINE service assistance telephone number (see Step 2) or write

Mr Guy Turner, Vice President Whirlpool Corporation Administrative Center 2000 U.S. 33 North Benton Harbor, Michigan 49022

If you must call or write, please provide: your name, address, telephone number, type of appliance, brand, model, serial number, date of purchase, the dealer's name, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.



Is a registered trademark of Whiriped Temporation for qualify parts, thou for this symbol of tip and wherever you need the producer entitle the forevoir. Whiriped applicance ETF reportament parts.

A Efficient and working title hause they are made to the same exacting specifications used to build every health things in appropriation.





Quality. Our way of life.

Benton Harbor, Michigan, Automatic Washers, Clothes Dryers, Freezers, Refrigerator-Freezers, Loe Makers, Dishwashers, Built-in Ovens and Surface Units, Ranges, Microwave Ovens, Compactors, Room Air Conditioners, Dehumidifiers, Central Healing and Air Conditioning Systems.

Part No. 380480 Rev B Printed in U.S.A