


Model GLE7900XK

 Whirlpool DRYER

Use & Care Guide

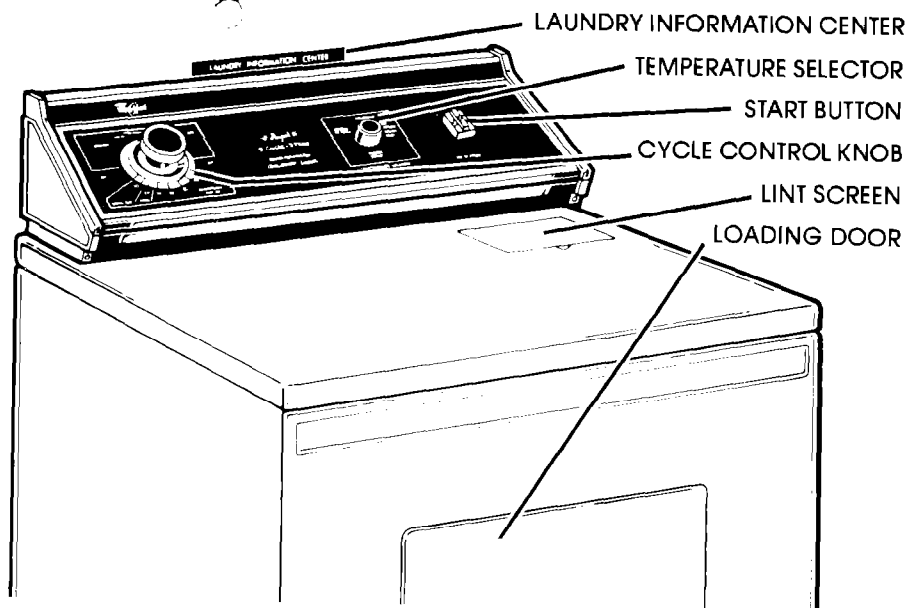

Copy Your Model and Serial Numbers Here

When you need service, or call with a question, have this information ready:

1. **Complete** Model and Serial Numbers (from the plate just behind the door).
2. Purchase date from sales slip (or date installed).

Copy this information in these spaces. Keep this book in the Laundry Information Center with your *Dryer Guide*, sales slip and warranty.

_____ Model Number

_____ Serial Number

_____ Purchase/Installation Date

_____ Service Company and Phone Number

12-92

Before using your Dryer

Please read this booklet to be sure your dryer is installed and used properly. It will help you get the best results and longest life your dryer was designed to give.

You are personally responsible for making sure that your dryer...

- Is installed by a qualified installer.
- Is properly installed and leveled in a well ventilated room on a floor that can support the weight
- Is connected to the right kind of outlet, electric supply and grounding
- Is properly connected to fuel and exhaust systems
- Is used only for jobs normally expected of home clothes dryers.
- Is properly maintained
- Is out of the weather
- Is not run where there may be explosive fumes
- Is not used by children or anyone unable to operate it properly

Remove the Consumer Buy Guide label before using your dryer. It will be easier to remove.

Wipe out the drum with a damp cloth to remove any dust.

SPECIAL INSTRUCTIONS: See the **Dryer Guide for drying tips, information about permanent press and knits, instructions for drying special items and for things not to be dried in your dryer.**

* See the Installation Instructions for complete information.

FOR YOUR SAFETY

If you smell gas:

1. Open windows
2. Don't touch electrical switches
3. Extinguish any open flame
4. Immediately call your gas supplier.

SAFETY FIRST:

To prevent serious injury, **DO NOT** allow children to operate, play with, or crawl inside the dryer.

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

SAFETY

Never operate your dryer without replacing all panels (lower front, access or service).

Please read this manual. Follow the instructions to help you get the best drying results. Save the manual for future use.

Contents

Before Using Your Dryer	2
Loading Your Dryer	3
Understanding Your Dryer	3
Lint Screen	3
Using Your Dryer	4
Selecting Cycles and Temperature Settings	5
Setting Drying Times	6
FLUFF AIR	6
TUMBLE PRESS® Control	6
If You Need Service or Help	
1. Before Calling for Service	6
2. If You Need Service	7
3. If You Have a Problem	7

Loading your Dryer



For best drying results and energy savings, sort dryer loads carefully.

Separate loads according to the type of fabric and weight. For example

- Dry heavy fabrics (denims, towels, cottons) separately from light fabrics (permanent press, synthetics).
- Separate lint givers (towels, sweat-shirts, etc.) from lint takers (synthetics, blends, permanent press).
- Keep dark colors and light colors separate.
- Keep colorfast items away from non-colorfast fabrics.

Allow room for items to tumble freely. The load will dry faster with fewer wrinkles.

When drying permanent press, **dry smaller-than-normal** loads for the best wrinkle removal.

Use a mesh bag to hold small items such as baby socks.

Read the Dryer Guide for more hints on sorting and loading.

Understanding your Dryer

Your dryer has five cycles. The EXTRA HEAVY, HEAVY, MEDIUM and LIGHT Cycles are designed to tumble laundry for a certain length of time...depending on the load. You select the drying temperature you want.

In all these cycles, the heat shuts off 5 minutes before the dryer stops tumbling. This helps cool down the load.

The cool-down time is built-in so the laundry will not be too hot when the dryer stops tumbling.

1. When a load of hot laundry is not tumbling, wrinkles can set in.
2. A load of hot laundry can be too hot to handle comfortably.

The other cycle is PERMANENT PRESS. This cycle has a longer cool-down time at the end. This extra time is designed to give permanent press fabrics the extra wrinkle protection they need.


This *Use & Care Guide* contains suggestions on the way to use your dryer to get the best results and longest useful life from your dryer. Please read it carefully.

Lint Screen

The lint screen is under the lid on top of the dryer.

Clean the lint screen before each load. A screen that's blocked by lint can cause longer drying times.

CAUTION: Do not operate the dryer with the lint screen removed or not securely in place as it may cause overheating, possible damage to fabrics and dryer parts or create a fire hazard.

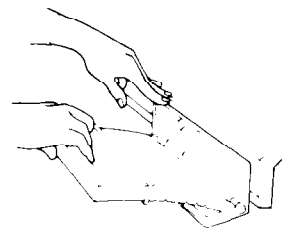

To remove the screen, open the lid and pull the screen straight out. Roll the lint off the screen with your fingers.

DO NOT rinse the screen or wash it. Wet lint is hard to remove.

When replacing the screen, push it firmly into place. Close the lid.

Using your Dryer


1. Put the sorted load in the dryer and close the door tightly.
2. Turn the Cycle Control Knob to the cycle you want.
 - Use LIGHT for small loads of light-weight fabrics. The LIGHT Cycle runs for the least time. Use LIGHT also to damp dry loads for ironing.
 - Use MED for normal size loads of light or medium weight fabrics (sheets, pillowcases, shirts, etc.).
 - Use HEAVY for normal size loads of heavy fabrics (towels, jeans, corduroys).
 - Use EX HEAVY for large loads or for heavy bulky items (quilts, spreads, blankets, etc.).

SUGGESTION:


You can set the Cycle Control Knob anywhere past, between or below the EX HEAVY and LIGHT settings. For the first few loads:

- Set the pointer in the middle of the load setting.
- If the load is drier than you want, set it to the right (for less time) the next time.
- If the load is not as dry as you want, set it to the left (for more time) the next time.

For example:

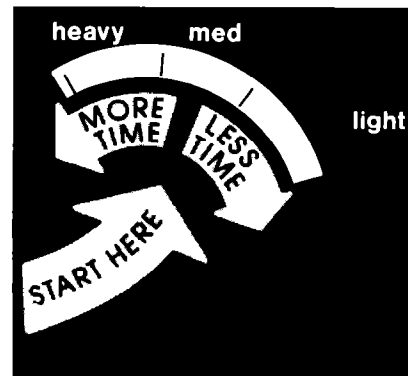

BE CAREFUL NOT TO OVERDRY. Overdrying can cause shrinkage, static cling and damage to some fabrics.

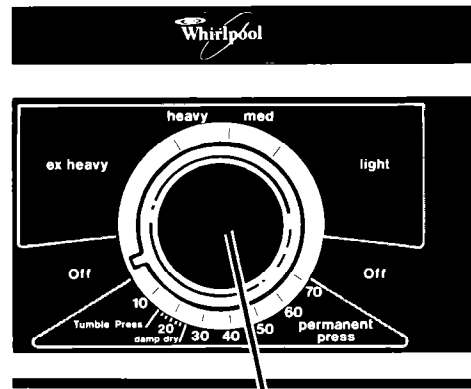

- Use PERMANENT PRESS for a longer period of cool-down time. Set the pointer for the number of minutes of drying time you want. (See Setting Drying Times on page 6.)
- If laundry is left in the dryer after it has stopped tumbling, use the Tumble Press® Control setting (page 6) to help remove the wrinkles.

3. Set TEMPERATURE SELECTOR.

- Turn the TEMPERATURE SELECTOR to the drying temperature needed for the load. See page 5 for suggested settings.

4. Push the Start Button.


- Make sure the door is closed and Cycle Control is set. If the door is opened during the cycle, the dryer will stop. **To restart the dryer**, close the door and push the Start Button.

5. To stop the dryer:

- Open the door.
- Or, turn the Cycle Control Knob to one of the OFF positions.
- **To change the setting while the dryer is running**, turn the Cycle Control Knob, either way, so it points to the setting you want.

NOTE: The Cycle Control Knob should point to OFF when the dryer is not being used.

IMPORTANT: To help reduce wrinkling, take the load from the dryer as soon as tumbling stops. This is very important for permanent press, knits and other synthetic fabrics.

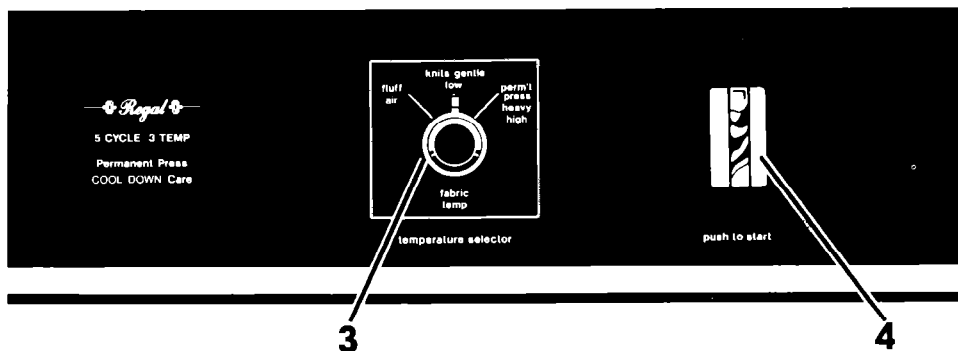

SELECTING CYCLES AND TEMPERATURE SETTINGS

Choose the correct settings according to the chart below:

<u>TYPE OF LOAD</u>	<u>CYCLE</u>	<u>TEMPERATURE SELECTOR</u>
COTTONS – LINENS		
<i>EXTRA HEAVY</i> , very large loads – Bedspreads, mattress pads, quilts	EX HEAVY	PERM'T PRESS- HEAVY HIGH
<i>HEAVY FABRICS</i> – Towels, jeans, corduroys, work clothes	HEAVY	PERM'T PRESS- HEAVY HIGH
<i>MEDIUMWEIGHT COTTONS</i> – Sheets, pillowcases, cotton underwear, diapers	MEDIUM	PERM'T PRESS- HEAVY HIGH
<i>LIGHTWEIGHT COTTONS</i> or damp dry – Batistes, organdies, lingerie	LIGHT	PERM'T PRESS- HEAVY HIGH
PERMANENT PRESS – SYNTHETIC FIBERS AND BLENDS		
<i>HEAVYWEIGHT FABRICS</i> – Work clothes, jackets, raincoats, etc.	40-50 MIN.	PERM'T PRESS- HEAVY HIGH
<i>MEDIUMWEIGHT FABRICS</i> – Shirts, play clothes, sheets, slacks	30-40 MIN.	PERM'T PRESS- HEAVY HIGH
<i>LIGHTWEIGHT FABRICS</i> – Lingerie, blouses, dresses, etc.	20-30 MIN.	PERM'T PRESS- HEAVY HIGH
KNITS		
<i>HEAVYWEIGHT</i> – COTTONS, RAYONS, BLENDS – T-shirts, slacks, shirts, etc.	PERM'T PRESS 40-50 MIN.	PERM'T PRESS- HEAVY HIGH
<i>LIGHTWEIGHT</i> – SYNTHETIC FABRICS (polyester, acrylic, etc.) and Blends – Lingerie, blouses, dresses, etc.	30-40 MIN.	KNITS GENTLE-LOW
<i>DELICATELY CONSTRUCTED FABRICS</i> – Curtains (2 or 3 panels,) Sheers	20-30 MIN.	KNITS GENTLE-LOW
FOAM RUBBER ARTICLES – Pillows, bras, etc.	PERM'T PRESS 20-30 MIN.	FLUFF AIR
To Damp Dry clothes for ironing, set control in LIGHT setting or PERMANENT PRESS cycle for 20 minutes.		
HEAT SENSITIVE FABRICS – Olefin, nylon, etc.	20-30 MIN.	FLUFF AIR

MIXED LOADS

If you dry a mixed load of various weights of fabrics, select the cycle for the lighter weight fabric. When dryer stops, remove the dry articles and reset the control.

Setting Drying Times

Modern dryers are designed with drying temperatures needed to safely handle modern fabrics. Cool-down times have been added to heat settings. You might notice slightly longer drying times.

The time it takes to dry a load depends on:

- *The kind of fabric, its weight, and the size of the load.* A large load of jeans will take a lot longer to dry than a small load of light synthetics.
- *The amount of moisture in the load.* Towels hold a lot of moisture; synthetics don't. Synthetics dry faster.
- *Temperature of the rinse water.* Cold rinses help save on energy and wrinkles, but a cold load will take slightly longer to dry than a warm one.
- *Amount of lint on the screen.* A full lint screen slows the air flow and can make drying time longer.
- *Room temperature.* The dryer heats room air. If the room air temperature is not above 45 F (7.2 C), drying time will be longer and removal of wrinkles may be poor.
- *Proper installation and exhaust systems.* For the fastest possible drying time, installing and exhausting your dryer properly is important. See installation instructions.

Be careful not to overdry. Overdrying can cause shrinkage, damage to some fabrics and static cling.

FLUFF AIR

This temperature setting is useful for fluffing bedding, pillows and clothing, or dusting drapes. It is also best to use when damp-drying heat-sensitive items.

Drying plastic or rubber items with heat may damage the items or be a fire hazard.

FLUFF AIR should be used for such items as plastic shower curtains or tablecloths, rubber-backed rugs, some pillows, stuffed toys, etc.


- Turn the **TEMPERATURE SELECTOR** to FLUFF AIR.

- Turn the Cycle Control Knob to the number of minutes you want in the PERMANENT PRESS Cycle.
- Push the Start Button.

TUMBLE PRESS[®] Control

This setting is useful for removing wrinkles from packing in suitcases or closets. TUMBLE PRESS will help put them back into their pre-set shape.

- Set Cycle Control Knob to TUMBLE PRESS.

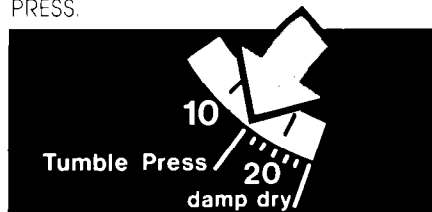

- Set **TEMPERATURE SELECTOR** to PERMIT PRESS HEAVY HIGH.
- Push the Start Button.

For best results, TUMBLE PRESS only a few items at a time; put them on hangers or fold them as soon as the dryer stops.


If You Need Service or Assistance, We Suggest You Follow These Four Steps:

1. Before calling for assistance...


Performance problems often result from little things you can find and fix yourself without tools of any kind.

DRYER DOES NOT RUN:

- Is electric power cord plugged in?

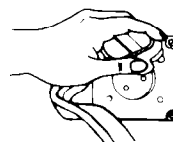

- Is the dryer door closed tightly? Your dryer has a switch by the door that shuts off the dryer if the door is opened.

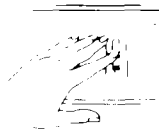

- Did you push the Start Button?
- Check circuit breakers or both fuses in the fuse box.

DRYER RUNS BUT DOES NOT HEAT:

- Is the Cycle Control Knob pointing to at least 10 minutes or LIGHT? (The last minutes are cool-down time.)
- Check the circuit breakers or fuses in the fuse box. An electric dryer will have two fuses. If one is blown, the dryer may run, but not heat.

DRYING TIME IS LONGER THAN USUAL:

- Check the lint screen. Remove lint. Keep the screen clean for best drying results and times.
- Modern dryers are designed to dry at the cooler temperatures needed by modern fabrics. They may need more time than you are used to.
- Room temperature is cold.

2. If you need assistance* ...

When stationed overseas... contact your local exchange. In-warranty service is available.



Call the Whirlpool COOL-LINE® service assistance telephone number. Dial free from:

**Continental U.S. (800) 253-1301
Michigan (800) 632-2243
Alaska & Hawaii (800) 253-1121**

and talk with one of our trained Consultants. The Consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

3. If you need service* ...

Whirlpool has a nationwide network of franchised TECH-CARE® Service Companies. TECH-CARE service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate TECH-CARE service in your area, call our COOL-LINE service assistance telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

APPLIANCES— HOUSEHOLD— MAJOR—SERVICE & REPAIR	OR	ELECTRICAL APPLIANCES—MAJOR— REPAIRING & PARTS
WHIRLPOOL APPLIANCES FRANCHISED TECH-CARE SERVICE		WHIRLPOOL APPLIANCES FRANCHISED TECH-CARE SERVICE
<i>SERVICE COMPANIES</i> XYZ SERVICE CO 123 Maple	999-9999	<i>SERVICE COMPANIES</i> XYZ SERVICE CO 123 Maple
		999-9999

**OR
WASHING MACHINES, DRYERS
& IRONERS—SERVICING**

WHIRLPOOL APPLIANCES
FRANCHISED TECH-CARE SERVICE

SERVICE COMPANIES
XYZ SERVICE CO
123 Maple

999-9999

4. If you have a problem* ...

Call our COOL-LINE service assistance telephone number (see Step 2) and talk with one of our Consultants, or if you prefer, write to:

Mr. Guy Turner, Vice President
Whirlpool Corporation
Administrative Center
2000 US-33 North
Benton Harbor, MI 49022

*If you must call or write, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.

SETTING DRYING TIMES / FLUFF AIR / TUMBLE PRESS / BEFORE CALLING ASSISTANCE

WHEN YOU RETURN TO THE UNITED STATES

Migratory Policy

We realize that you're purchasing a Whirlpool appliance for what may be a temporary stay in a particular area. If you are transferred to the United States and find that your Whirlpool appliance requires service within the warranty period, simply contact a Whirlpool authorized dealer or service agent. All he'll require is proof of the purchase date of the appliance. Service will be supplied at no charge.



FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance.

FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.



Benton Harbor, Michigan. Automatic Washers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-in Ovens and Surface Units, Ranges, Microwave Ovens, Compactors, Room Air Conditioners, Dehumidifiers, Central Heating and Air Conditioning Systems.