

Owner's Guide

for

Electric Ranges with Electronic Controller

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	1-4	Roasting and chart	16
CLOCK AND OVEN CONTROL	5	Automatic oven cooking feature	17-18
SURFACE COOKING	6	Broiling and chart	19
Control knobs	6	CONTINUOUS CLEANING OVEN	
Cooking tips	6	(Chateau Range)	20
Cookware	6	SELF-CLEAN OVEN	21-22
Heat setting guide	6	CARE AND CLEANING CHART	23-24
SMOOTHTOP COOKTOP	7-8	MAINTENANCE	25-26
COIL ELEMENT COOKTOP	9	Cooktop light	25
OVEN USE	10-19	Oven light	25
Oven light	10	Back panel light (Chateau Range)	25
Oven vent	10	Upper oven light (Chateau Range)	25
Oven characteristics	10	Cooktop	26
Fan	10	Oven door	26
Oven racks	11	Storage drawer	26
How to set oven	12	Leveling legs	26
Preheating	12	SERVICE INFORMATION	27-29
Use of aluminum foil	12	Explanation of fault codes	27
Upper oven (Chateau Range)	13	Adjusting oven temperature	27
General baking tips	14	Before you call for service chart	28
Common baking problems chart	15	How to obtain service	29

INSTALLER Please leave this manual with this appliance.

Be sure appliance has been properly installed.

CONSUMER To save you time, energy and money, read and keep this manual for future reference.

The model and serial numbers are found on the rating plate located on the range front frame. Open the storage drawer or oven door to see the rating plate.

Model Number: _____

Serial Number: _____

Date of Purchase: _____

Please keep your sales receipt and/or your cancelled check as proof of purchase should warranty service be needed. Store these documents with this booklet.

7/10/00

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance.

ABOUT YOUR APPLIANCE

Congratulations on your choice of this range. As you use your new range, we know you will appreciate the many features that provide excellent performance, ease of cleaning, convenience and dependability.

New features have dramatically changed today's cooking appliances and the way we cook. It is therefore very important to understand how your new electric range operates BEFORE you use it for the first time.

In this Owner's Guide, you will find a wealth of information regarding all aspects of your appliance. By following the instructions carefully, you will be able to fully enjoy and properly maintain your new range. NOTE: Your appliance may not be equipped with some of the features referred to in this manual.

Should you have any questions about using your new electric appliance, please write to us at this address:

Customer Assistance
c/o Maytag Customer Service
P.O. Box 2370
Cleveland, TN 37320-2370

Be sure to include the model and serial numbers of your appliance. For your convenience, we have provided space on the front cover to record this information.

In our continuing effort to improve the quality of our cooking products, it may be necessary to make changes to the appliance without revising this manual.

IMPORTANT INSTRUCTIONS

Instructions on the following pages are based on safety considerations and must be strictly followed to eliminate the potential risks of fire, electric shock, or personal injury.

	<p>! WARNING</p>
	<ul style="list-style-type: none"> • ALL RANGES CAN TIP AND CAUSE INJURIES TO PERSONS. • INSTALL ANTI-TIP DEVICES PACKED WITH RANGE. • FOLLOW ALL INSTALLATION INSTRUCTIONS.

WARNING: To reduce the risk of tipping of the appliance from abnormal usage or by excessive loading of the oven door, the appliance must be secured by a properly installed anti-tip device.

If the range is moved from the wall for cleaning, be sure the anti-tip device is engaged when the range is replaced. Remove storage drawer, if equipped, and look underneath range to verify that one of the rear leveling legs is properly engaged in the bracket slot. The anti-tip device secures the rear leveling leg to the floor when properly engaged.

Be sure appliance is properly installed and grounded by a qualified technician.

Locate and mark circuit breaker or fuse. Never replace a blown fuse or reset a circuit breaker until you know what caused the problem. Always replace a blown fuse with one of the correct amperage, do not use a substitute.

To ensure proper operation and avoid possible injury or damage to unit do not attempt to adjust, repair, service, or replace any part of your appliance unless it is specifically recommended in this book. All other servicing should be referred to a qualified installer or servicer. Always disconnect power to unit **before** any servicing by tripping circuit breaker to the OFF position or removing the fuse.

TO PREVENT FIRE OR SMOKE DAMAGE

Be sure all packing materials are removed from the appliance before operating it.

Do not store or use gasoline or other flammable materials, vapors and liquids in the oven, near surface units or in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.

If appliance is installed near a window, proper precautions should be taken to prevent curtains from blowing over surface elements.

Do not leave any items on the cooktop. The hot air from the vent may ignite flammable items and may increase pressure in closed containers which may cause them to burst.

Many aerosol-type spray cans are **EXPLOSIVE** when exposed to heat and may be highly flammable. Avoid their use or storage near an appliance.

Many plastics are vulnerable to heat. Keep plastics away from parts of the appliance that may become warm or hot. Do not leave plastic items on the cooktop as they may melt or soften if left too close to the vent or surface element.

To eliminate the hazard of reaching over hot surface elements, cabinet storage should not be provided directly above a unit. If such storage is provided, it should be limited to items which are used infrequently and which are safely stored in an area subjected to heat from an appliance. Temperatures may be unsafe for some items, such as volatile liquids, cleaners or aerosol sprays.

IN CASE OF FIRE

Turn off appliance and ventilating hood to avoid spreading the flame. Extinguish flame then turn on hood to remove smoke and odor.

Use dry chemical or foam-type extinguisher or baking soda to smother fire or flame. Never use water on a grease fire.


If fire is in the oven or broiler pan, smother by closing oven door.

If fire is in a pan on the surface element, cover pan. Never attempt to pick up or move a flaming pan.

CHILD SAFETY

Do not leave children alone or unsupervised near the appliance when it is in use or is still hot. Children should never be allowed to sit or stand on any part of the appliance.

Children must be taught that the appliance and utensils in or on it can be hot. Let hot utensils cool in a safe place, out of reach of small children. Children should be taught that an appliance is not a toy. Children should not be allowed to play with controls or other parts of the unit.

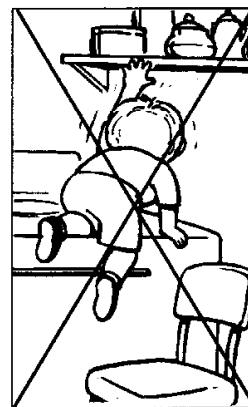

CAUTION: Do not store items of interest to children in cabinets above an appliance or on the backguard of a range. Children climbing on the appliance or on the appliance door to reach items could be seriously injured.

ABOUT YOUR APPLIANCE

To prevent injury or damage to the appliance, do not use appliance as a space heater to heat or warm a room. Also, do not use the cooktop or oven as a storage area for food or cooking utensils.



The oven vent is located at the rear of the cooktop or at the right rear element. Keep oven vent duct unobstructed. Blockage of the vent prevents proper oven air circulation and will affect oven performance. Avoid touching vent area while oven is on and for several minutes after oven is turned off. Some parts of the vent and surrounding areas may become hot enough to cause burns.


Do not touch surface or oven elements, areas near elements or interior surface of oven. Heating elements may be hot even though they are dark in color. Areas near surface elements and interior surfaces of an oven may become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact heating elements, areas near elements, or interior surfaces of oven until they have had sufficient time to cool.

Other surfaces of the appliance may become hot enough to cause burns – among these surfaces are the cooktop, surfaces facing the cooktop, oven vent opening and surfaces near the vent opening, oven door, and oven window.

Do not allow aluminum foil, meat probes or any other metal object, other than a utensil on a surface element, to contact heating elements.

Do not touch a hot oven light bulb with a damp cloth as the bulb could break. If bulb breaks, disconnect power to the appliance to avoid electrical shock then remove bulb.

CAUTION: Do not use an appliance as a step stool to cabinets above. Misuse of appliance doors or drawers, such as stepping, leaning or sitting on the door or drawer, may result in possible tipping of the appliance, breakage of door, and serious injuries.

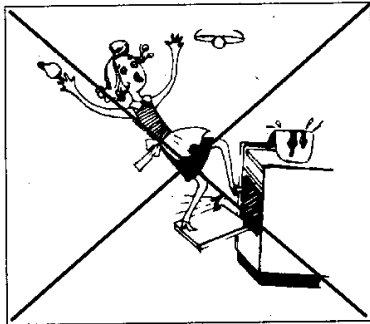

COOKING SAFETY

Always turn off surface element or the oven when cooking is completed.

It is normal for some parts of the cooktop, especially areas surrounding the surface elements, to become warm or hot during surface cooking operations. Therefore, do not touch the cooktop until it has had sufficient time to cool. If necessary, use dry pot holders to protect hands.


Do not cook on a broken ceramic glass cooktop. If cooktop should break, cleaning solutions and spillovers may penetrate the broken cooktop and create a risk of electric shock. Contact a qualified technician immediately.

Make sure drip bowls are in place. Absence of these bowls during cooking may subject wiring or components underneath to damage.

Always place a pan on a surface element before turning it on. Be sure you know which knob controls which surface element. Make sure the correct element is turned on. Begin

cooking on a higher heat setting then reduce to a lower setting to continue cooking. For smoothtops: To prevent boilovers, reduce to the desired heat setting just as the food begins to cook or water begins to boil.

Never leave a surface cooking operation unattended especially when using a high heat setting or when deep fat frying. Boilovers cause smoking and greasy spillovers may ignite. Clean up greasy spills as soon as possible. Do not use high heat for extended cooking operations.

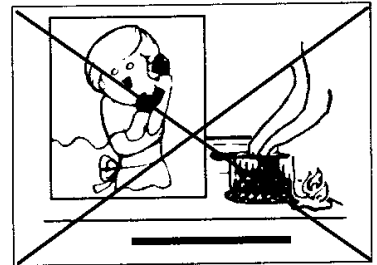


Always let quantities of hot fat used for deep fat frying cool before attempting to move or handle.

Never heat an unopened container as pressure build-up may cause container to burst resulting in serious personal injury or damage to the appliance.

Use dry, sturdy pot holders. Moist or damp pot holders on hot surfaces may cause burns from steam. Do not let pot holders touch hot heating elements. Do not use a towel or other bulky cloth.

Do not let cooking grease or other flammable materials accumulate in or near the appliance, vent hood or vent fan. Clean hood frequently to prevent grease from accumulating on hood or filter. When flaming foods under the hood turn the fan off as the fan may spread the flame.

Use caution when wearing garments made of flammable material to avoid clothing fires. Loose fitting or long hanging-sleeved apparel should not be worn while cooking. Clothing may ignite or catch utensil handles.

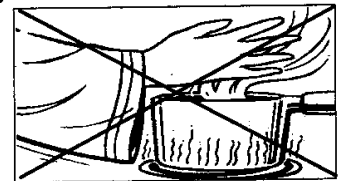

Always place oven racks in the desired positions while oven is cool. Slide oven rack out to add or remove food; avoid reaching into the oven. If a rack must be moved while oven is hot, use a dry pot holder and avoid touching hot element in oven.

Use care when opening the oven door. Let hot air or steam escape before removing or replacing food.

PREPARED FOOD WARNING: Follow food manufacturer's instructions. If a plastic frozen food container and/or its cover distorts, warps, or is otherwise damaged during cooking, immediately discard the food and its container. The food could be contaminated.


UTENSIL SAFETY

Use proper pan size. This appliance is equipped with one or more surface elements of different sizes. Select utensils having flat bottoms large enough to cover the surface element. The use of undersized utensils will expose a portion of the heating element to direct contact and may result in ignition of clothing. Proper relationship of utensil to element will also improve efficiency.

Use pans with flat bottoms and handles that are easily grasped and stay cool. Avoid using unstable, warped, easily tipped or loose handled pans. Pans that are heavy to move when filled with food may also be hazardous.

Be sure utensil is large enough to properly contain food and avoid boilovers. Pan size is particularly important in deep fat frying. Be sure pan will accommodate the volume of food that is to be added as well as the bubble action of fat.

To minimize burns, ignition of flammable materials and spillage due to unintentional contact with the utensil, do not extend handles over adjacent surface elements. Always turn pan handles toward the side or back of the appliance, not out into the room where they are easily hit or reached by small children.

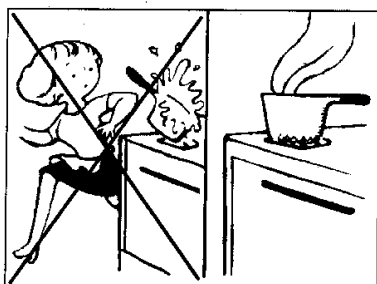

Never let a pan boil dry as this could damage the utensil and the appliance.

Follow the manufacturer's directions when using oven cooking bags.

Only certain types of glass, glass/ceramic, ceramic, earthenware or glazed utensils are suitable for cooktop or oven usage without breaking due to the sudden change in temperature.

This appliance has been tested for safe performance using conventional cookware. Do not use any devices or accessories that are not specifically recommended in this manual. Do not use eyelid covers for the surface units, stove top grills, or add-on oven convection systems. The use of devices or accessories that are not expressly recommended in this manual can create serious safety hazards, result in performance problems, and reduce the life of the components of the appliance.

CLEANING SAFETY

Turn off all controls and wait for appliance parts to cool before touching or cleaning them. Clean appliance with caution. Use

care to avoid steam burns if a wet sponge or cloth is used to wipe spills on a hot surface. Some cleaners can produce noxious fumes if applied to a hot surface.

Do not soak or immerse removable heating elements in water. Immersing element in water would damage element and insulating material inside element.

Do not use aluminum foil or foil liners to line drip bowls, cover an oven rack or line the oven bottom. Improper use of these liners may result in a risk of electric shock, or fire and may cause oven to overheat. Use foil only as recommended in this booklet.

SELF-CLEAN OVEN

Clean only parts listed in this booklet. Do not clean door gasket. The door gasket is essential for a good seal. Care should be taken not to rub, damage, or move the gasket. Do not use oven cleaners or oven liner protective coatings of any kind in or around any part of the self-clean oven.

Before self-cleaning the oven, remove broiler pan, oven racks, and other utensils, and wipe off excessive spillovers to prevent excessive smoke or flare ups. **CAUTION:** Do not leave food or cooking utensils, etc. in the oven during the self-clean cycle.

On some models, a fan should be heard during the self-clean cycle. If not, cancel the clean cycle and call a qualified technician before self-cleaning again. Refer to the Table of Contents for location of self-clean instructions and for fan information, if equipped.

It is normal for the cooktop of the range to become hot during a self-clean cycle. Therefore, avoid touching or lifting the cooktop during a clean cycle.


IMPORTANT SAFETY NOTICE AND WARNING

The California Safe Drinking Water and Toxic Enforcement Act of 1986 (Proposition 65) requires the Governor of California to publish a list of substances known to the State of California to cause cancer or reproductive harm, and requires businesses to warn customers of potential exposures to such substances. Users of this appliance are hereby warned that when the oven is engaged in the self-clean cycle, there may be some low level exposure to some of the listed substances, including carbon monoxide. Exposure to these substances can be minimized by properly venting the oven to the outdoors during the self-clean cycle by opening the windows and/or door in the room where the appliance is located..

SAVE THESE INSTRUCTIONS

CLOCK AND OVEN CONTROL

All indicator words are displayed to show their location. The touch pads on your range may not look like this illustration but they will operate as described in this manual.

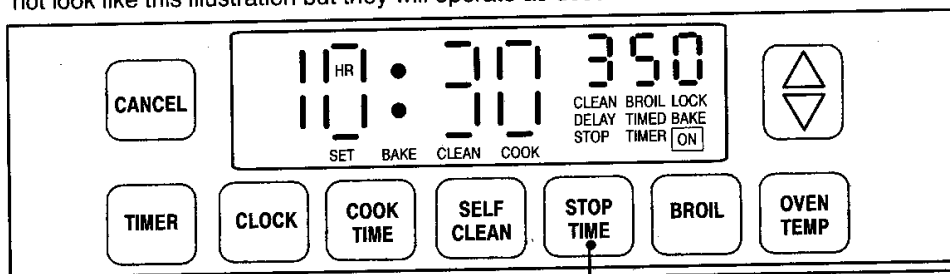

This function pad on your range will be labeled either STOP TIME or OVEN STOP. This pad will operate as described below.

CANCEL

Press this pad to cancel all programming except the clock and timer.

▲ and ▼ Pads

Press or press and hold these pads to enter the desired time or temperature or to select Hi or Lo broil.

TIMER

1. Press TIMER pad.
2. Set desired time using the ▲ and ▼ pads.

Press or press and hold either pad to change the time by 1 minute, 5 minutes or 10 minutes.

TIMER can be set from 1 minute (0 HR:01) up to 9 hours and 50 minutes (9 HR:50).

The timing operation will start automatically. Colon flashing in the display indicates a timing operation. One long continuous beep signals the end of the timing operation. The time of day will automatically reappear in the display. The TIMER does not control the oven.

To cancel: Press and hold TIMER pad. Time of day will reappear after a slight delay.

CLOCK

1. Press CLOCK pad.
2. Set the correct time of day using the ▲ and ▼ pads.

To change the time by one minute, press either pad **once**. To change the time in increments of 10 minutes, **press and hold** either pad.

When power is first supplied to the oven or if there has been a power failure, the display will flash.

Press CLOCK pad to recall time of day when another function is displayed.

Clock time cannot be changed when oven is set for a cook, timed bake, or self-clean operation. Cancel operation to set the clock.

OVEN TEMP

1. Press OVEN TEMP pad.
2. Press the ▲ or ▼ pad to set oven temperature.

See pages 12 to 15 for additional information.

BROIL

1. Press BROIL pad.
2. Press ▲ or ▼ pad to select Hi broil or Lo broil.

See page 19 for additional information.

CLEAN

1. Close and lock oven door.
2. Press CLEAN pad.
3. Oven will automatically clean for 3 hours. Or press the ▲ or ▼ pad to select 2 to 4 hours.

"door" will appear in display until the door is properly locked. See pages 21 and 22 for additional information.

COOK TIME/STOP TIME or OVEN STOP

1. Press COOK TIME pad. Enter desired cooking time with the ▲ or ▼ pad.
2. To delay the start of cooking: Press STOP TIME or OVEN STOP pad. Enter time you wish the oven to turn off with the ▲ or ▼ pad.
3. Press OVEN TEMP pad. Enter oven temperature with the ▲ or ▼ pad.

The oven will automatically turn on and off at the preset times. Beeps will signal the end of cooking. Press CANCEL pad to cancel end-of-cooking beeps. See pages 17 and 18 for additional information.

ADDITIONAL INFORMATION

A beep sounds each time a pad is pressed. The oven will automatically turn off if it is left on for 12 hours. If a fault code (example: F 2) is displayed and beeps sound, press CANCEL pad. If fault code continues, see page 27.

CONTROL KNOBS

Your cooktop is equipped with control knobs that provide an infinite choice of settings from LOW to HIGH. The knob can be set on or between any of the numbered settings.

To operate push in and turn the knob in either direction to the desired setting. An indicator light will glow when a surface element is turned on. The indicator light will remain on until the element is turned off. After a cooking operation, be sure the element and indicator light are off.

GENERAL COOKING TIPS

To prevent damage to the range or utensil, never operate surface unit without a pan in place, never allow a pan to boil dry and never operate an element on HIGH for extended periods of time.

Food will not cook any faster at a higher setting than needed to maintain a gentle boil. Water boils at the same temperature whether boiling gently or vigorously. If a high setting is used, excessive spattering will occur and food may stick or burn onto the bottom of the pan.

If a higher heat setting is used to bring liquid to a boil or to begin cooking, always **reduce** to a lower setting once liquid comes to a boil or food begins cooking. **Never leave food unattended during a cooking operation.**

Fit the size of the cookware to the size of the element. This conserves energy.

CANNING

Use HIGH just until water comes to a boil or pressure is reached in the pressure canner. Then, **reduce** to the lowest heat setting that maintains the boil or pressure. Prolonged use of HIGH or the use of incorrect canning utensils will produce excessive heat. Excessive heat can cause permanent damage to the porcelain cooktop, coil element and the drip bowl. See page 9 for additional information.

COOKWARE

Cooking performance is greatly affected by the type of cookware used. Proper cookware will reduce cooking times, use less energy and produce more even cooking results. For best results use a heavy gauge metal pan with a smooth flat bottom and a tight fitting lid.

Cookware with uneven, warped, or grooved bottoms do not make good contact with the heating surface, will reduce heat conductivity and result in slower, less even heating.

Different types of cookware materials require different heat settings for the same cooking operation. The chart below is based on heavy gauge aluminum cookware. Lower the heat setting if using a thinner gauge metal or other materials.

Oversized cookware and cookware that rests across two elements are not recommended as they may trap enough heat to cause damage to the cooktop or elements. This is especially important when canning.

Do not use woks equipped with round metal rings. The ring, which is designed to support the wok above the element, will trap heat and may damage the element and the cooktop.

SUGGESTED HEAT SETTING GUIDE


Refer to cookware manufacturer's recommendations for suggested heat settings. Some manufacturers do not recommend the use of HIGH, or the use of HIGH for extended cooking operations.

HEAT SETTINGS	USES
HIGH	To bring liquid to a boil, blanch, preheat skillet, or reach pressure in a pressure cooker. Always reduce to a lower heat setting when liquids just begin to boil or foods begin to cook.
Medium-High 7-9	To brown or sear meat; heat oil for deep fat frying; scald; to saute or fry. Maintain fast boil for large amounts of liquids.
Medium 4-6	To maintain moderate to slow boil for large amounts of liquids. To continue cooking uncovered foods and for most frying operations.
Medium-Low 1-3	To continue cooking covered foods and to maintain pressure in most pressure cookers. Stew, braise or steam operations. To maintain boil for small amounts of liquid, poach, steam or simmer.
LOW	To keep foods warm before serving. Melt chocolate.

COOKING AREAS

On Canadian models only: The surface units will **not** operate during a clean cycle. This is normal.

The four cooking areas on your range are identified by permanent patterns in the cooktop. There are two large (8-inch) and two small (6-inch) areas. The patterns on your cooktop may not look like the cooktop in this illustration but your cooktop will operate as described in this manual.

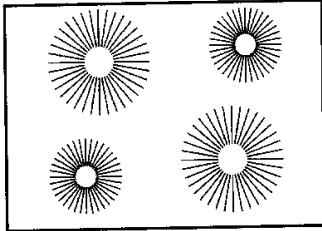

Before using the cooktop for the first time, clean it thoroughly as directed on the cleaning chart on page 24. This will protect the smoothtop and will guarantee a clean cooktop when the elements are turned on.

During the first few hours of use, you may notice that the cooktop emits a slight burning odor and a light smoke. Both of these conditions are normal.

When a cooking area is turned on, the coil element under the cooktop will heat up and glow red. To maintain the heat setting the element will cycle on and off. It is normal to see a red glow through the smoothtop when the element cycles on.

HOT SURFACE LIGHT

Your range is equipped with a HOT SURFACE light located at the center-back of the smoothtop. This red light will turn on to indicate that the smoothtop is hot and will remain on until the top has cooled.

RETAINED HEAT

The smoothtop cooking area retains heat for a period of time after the element has been turned off. Turn the element off a few minutes before food is completely cooked and use the retained heat to complete the cooking operation. After 30 minutes, the cooktop may be too cool to keep foods warm. However, the TOP MAY STILL BE TOO WARM TO TOUCH. When the HOT SURFACE light turns off, the top will be cool enough to touch.

COOKING TIPS

When cooking delicate foods which easily scorch or overcook, start with a lower heat setting then gradually increase the setting until you find the optimum setting. Boilovers are more likely to occur if you start out on HIGH then reduce to the lower setting. If you do begin cooking on HIGH, reduce to a lower setting before liquids come to a full boil.

If food is cooking too fast or if a boilover occurs, remove lid or remove cookware from cooking area and reduce to a lower setting. Allow enough time for the cooking area to adjust to the new setting.

COOKWARE TIPS

Aluminum foil will damage the smoothtop if it melts onto the glass. Do not use aluminum foil or foil-type disposable containers such as popcorn poppers under any circumstances. They may leave metal marks or may permanently melt onto the smoothtop. Do not use cooktop if metal or aluminum foil melts onto the smoothtop. Call an authorized servicer. Do not attempt to repair cooktop yourself.

Aluminum cookware will cause metal marks on the glass if you slide them across the smoothtop. Remove any metal marks immediately using Cooktop Cleaning Creme.

Glass ceramic, earthenware, porcelain over metal, heat-proof glass or glazed cookware may scratch the smoothtop cooktop if you slide them across the top.

TO PROTECT SMOOTHTOP

- Do not use the top as a work surface or as a cutting board. Do not cook food directly on the cooktop.
- Do not use a trivet or metal stand (such as a wok ring) between the utensil and the cooktop. These items can mark or etch the surface and affect cooking efficiency.
- Do not place plastics on a warm or hot cooking area. They will melt and adhere to the smoothtop. The smoothtop may chip or pit in attempting to remove melted plastic from the top.
- To prevent scratching or damage to the smoothtop, do not leave sugar, salt, sand, soil, shortening or other fats on the cooking area. Be sure area is free from these before turning on cooking area.
- Be sure the bottom of the cookware is smooth and free of nicks, scratches or rough areas as they may scratch the smoothtop.
- Do not allow a pan to boil dry. This could cause permanent damage to the smoothtop.

CARE INFORMATION

To help keep cooktop clean, be sure cooking area and cookware bottom are clean and dry before each use.

To prevent possible damage to the cooktop, always rinse the bottom of cookware to completely remove any cleaning agent residue. This is especially important when using a copper or aluminum cleaner. In the presence of heat, the cleaning residue may stain, discolor or etch the smoothtop.

Carefully blot up spillovers around the outside of the cooking area as they occur with dry paper towels. **BE CAREFUL NOT TO BURN HANDS WHEN WIPING UP SPILLS. DO NOT USE A DAMP CLOTH WHICH MAY CAUSE STEAM BURNS.**

CAUTION: Do not use cooktop if the smoothtop is cracked, broken, or if metal melts onto the cooktop. Call an authorized servicer. Do not attempt to repair the cooktop yourself.

When surface is cool, clean as directed in the chart on page 24. **DO NOT USE** the following cleaning agents:

- Abrasives (metal scouring pads, cleansing powders, scouring cleaners or pads) will scratch the smoothtop.
- Chemicals (oven cleaners, chlorine bleaches, rust removers or ammonia) may damage the finish of the smoothtop.
- Glass cleaners containing ammonia may harm the smoothtop.
- Soiled cloth or sponge will leave an invisible film on the cooktop which may scratch or cause discoloration the next time the cooktop is used.

IMPORTANT: Watch sugary solutions carefully to avoid boilovers. If a sugar solution (such as jam, jelly, candy) boils over, it may pit the smoothtop. Turn element to LOW and clean sugary boilovers **immediately**. See page 24 for complete cleaning instructions.


PROBLEM SOLVING CHART

PROBLEM	CAUSE	TO PREVENT
Tiny scratches or abrasions	Coarse particles (dust, salt and sand) between cookware bottom and cooktop. Incorrect cleaning materials. Sliding glassware or metal across top or using cookware with rough bottoms.	Tiny scratches are not removable and do not affect cooking. In time, the scratches will become smoother and less visible. Be sure cookware bottoms and cooktop are clean before use. Use cookware with a smooth, non-scratching bottom. Do not slide cookware across cooktop.
Metal-marking	Sliding or scraping metal utensils or oven racks across cooktop.	Do not slide metal object across cooktop. When cool, clean with Cooktop Cleaning Creme.
Brown streaks and specks	Boilovers, incorrect cleaning materials, used soiled cloth or sponge, soiled cookware.	Remove boilovers before reusing the cooktop. Use a clean cloth or sponge. Be sure cookware, especially bottoms, are clean and dry.
Areas of discoloration with a metallic sheen	Mineral deposits from water and foods.	Use cookware with bottoms that are clean and dry. Use correct heat setting to prevent boilovers.
Pitting or flaking.	Sugary boilovers from sugar syrups, candy, jams, jellies, dessert sauces, etc.	Use correct heat setting and large enough utensil. Watch cooking operation to prevent boilovers or spattering.

COIL SURFACE ELEMENTS

- Coil surface elements are self-cleaning.
- Do not immerse elements in water.
- When an element is turned on, it will cycle on and off to maintain the heat setting.
- To prevent damage to the range, **NEVER** operate surface element without a pan in place and **NEVER** allow a pan to boil dry.

To remove: When cool, raise element and carefully pull out and away from the receptacle.

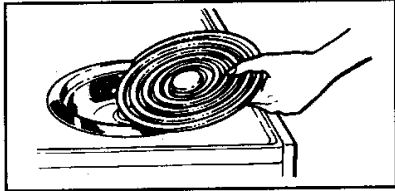

To replace: Insert the terminals on the element into the receptacle. Gently lift up on outer edge of element (opposite terminal-side of element) while inserting terminals into receptacle. Gently press down on outer edge of element until element sits level on drip bowl.

Be sure drip bowls are properly installed. Notch on trim ring should be centered over the screw securing the receptacle to the maintop. If trim ring is not installed properly and rests on this screw, the trim ring and drip bowl will "rock".

DRIP BOWLS

- Be sure drip bowls, located under each element, are in place.
- Absence of these bowls during cooking may subject wiring or component parts underneath the cooktop to damage.
- To prevent risk of electric shock or fire, do not line drip bowls with aluminum foil.

Your range will be equipped with either chrome plated or porcelain coated steel drip bowls.

Chrome drip bowls will turn blue or gold over time or if overheated. This type of discoloration is permanent and will not affect cooking performance.

To protect the chrome or porcelain finish, avoid using high settings for long periods of time. Reduce to a lower setting once food begins cooking. Do not use oversized cookware. Pan should not extend more than 2 inches from the element.

If the oven vent is located at the right rear element, be sure the drip bowl for this element has a hole in the center to allow proper oven venting. To prevent baking problems, never block the vent opening by placing a solid drip bowl in this location or by covering the hole in the center of the drip bowl with aluminum foil.

CANNING ELEMENT ACCESSORY KIT

(MODEL CE1)

The use of oversized cookware or large canners on the coil element cooktop may result in damage to the porcelain enamel finish. A special canning element has been designed to protect the finish when using this type of cookware. The canning element and chrome drip bowl are available as an optional accessory kit.

For information on the Canning Element Accessory Kit, contact your dealer or write to Maytag Customer Service, P.O. Box 2370, Cleveland, TN 37320-2370.

NOTE: For additional canning information contact your local County Extension Office. Or, contact Alltrista Consumer Products Company, marketer of Ball brand home canning products at 800-240-3340 or write: Alltrista Corp., Consumer Affairs Dept., P.O. Box 2729, Muncie, IN 47307-0729.

OVEN LIGHT

The oven light switch is located on the control panel. To turn the oven light on, push in the bottom half of the switch.

OVEN VENT

The oven vent is located at the rear of the cooktop or at the right rear surface element. When the oven is in use, this area may feel warm or hot to the touch. To prevent baking problems, do not block the vent opening in any way.

OVEN CHARACTERISTICS

Because each oven has its own personal baking characteristics, do not expect that your new oven will perform exactly like your previous oven. You may find that the cooking times, oven temperatures, and cooking results differ somewhat from your previous range. Allow a period of adjustment. If you have questions concerning baking results, please refer to pages 12, 14, 15 and 28 for additional information.

FAN

Slide-in, drop-in and Chateau ranges are equipped with a fan which automatically turns on whenever the oven is set for a cooking or a cleaning operation. After the operation, the fan will automatically turn off when the oven has cooled.

OVEN RACKS

The two oven racks are designed with a safety lock-stop position to keep the racks from accidentally coming completely out of the oven when pulling the rack out to add or remove food.

CAUTION: Do not attempt to change the rack positions when the oven is hot.


To remove: Be sure the rack is cool. Pull the rack straight out until it stops at the lock-stop position. Tilt the front end of the rack up and continue pulling the rack out of the oven.

To replace: Place the rack on the rack supports and tilt the front end of the rack up slightly. Slide it back until it clears the lock-stop position. Lower the front and slide the rack straight in. Pull the rack out to the lock-stop position to be sure it is positioned correctly and then return it to its normal position.

It is important that air can circulate freely within the oven and around the food. To help ensure this, place food on the center of the oven rack. Allow two inches between the edge of the utensil(s) and the oven walls.

For optimum baking results of cakes, cookies or biscuits, use one rack. Position the rack so the food is in the center of the oven. Use either rack position 2 or 3.

If cooking on more than one rack, stagger the food to ensure proper air flow.

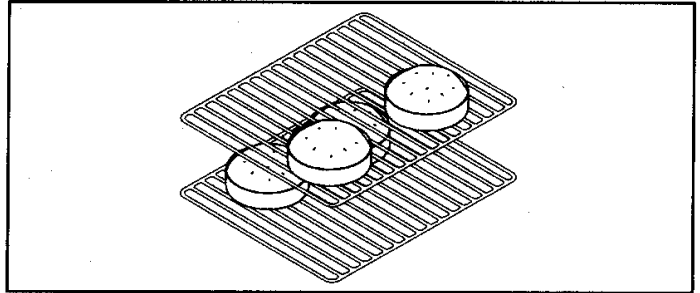


If cooking on two racks, use rack positions 2 and 4 for cakes and rack positions 1 and 4 when using cookie sheets. Never place two cookie sheets on one rack.

If roasting a large turkey, place the turkey on rack 1 and the side dishes on rack 5.

RACK POSITIONS

RACK 5 (highest position)	Used for toasting bread, or for two-rack baking.
RACK 4	Used for most broiling and two-rack baking.
RACK 3	Used for most baked goods on a cookie sheet or jelly roll pan, or frozen convenience foods, or for two-rack baking.
RACK 2	Used for roasting small cuts of meat, large casseroles, baking loaves of bread, cakes (in either tube, bundt, or layer pans) or two-rack baking.
RACK 1	Used for roasting large cuts of meat and large poultry, pies, souffles, or angel food cake, or for two-rack baking.

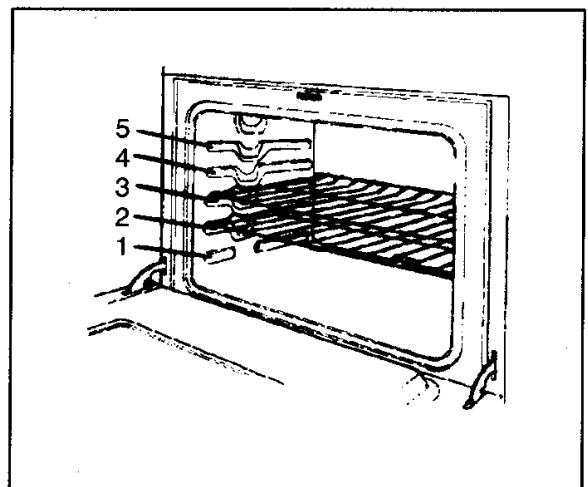

HOW TO SET OVEN

1. When oven is cool, position the oven racks in the oven.
2. Press the OVEN TEMP pad.
 - 000° and BAKE indicator words will appear in the display.
3. Press the ▲ or ▼ pad. Then press either pad until the desired oven temperature is displayed.
 - 350° will appear in the display when either pad is pressed once.
 - The oven temperature can be set from 170° to 550°.
 - The ON indicator word and 75° or the actual oven temperature, whichever is higher, will appear in the display.
 - The temperature in the display will increase in 5° increments until the oven reaches the preset temperature.
 - Allow 10 to 15 minutes for the oven to preheat. A single beep will sound when the oven is preheated.
4. Place the food in the center of the oven allowing a minimum of 1 to 2-inches between the utensil and the oven walls.
5. Check food for doneness at the minimum cooking time. Cook longer if needed. Cooking time may vary from oven to oven.
6. At the end of cooking, turn the oven off by pressing the CANCEL pad. Remove food from the oven.

PREHEATING

Preheating is necessary for baking. To preheat, set the oven to the desired temperature and allow about 10 to 15 minutes for the oven to preheat. A single beep will indicate that the oven is preheated. It is not necessary to preheat for roasting.

Selecting a temperature higher than desired will NOT preheat the oven any faster, and may have a negative effect on baking results.

ADDITIONAL INFORMATION

- Do not move the door lock lever to the right during a cooking operation. If the door is locked, the cooking operation will be cancelled. If the oven is hot enough to engage the internal lock, the oven door will not open. If this occurs, allow the oven to cool up to one hour, then unlock and open the door.
- If you press the OVEN TEMP pad and do not set an oven temperature within 30 seconds, the program will automatically cancel and the time of day will reappear in the display.
- To recall the preset temperature during preheat, press the OVEN TEMP pad.
- To change the oven temperature during cooking, press the ▲ or ▼ pad until the desired temperature is displayed.
- The oven features an automatic shut-off. If the oven is left on for 12 hours it will automatically turn off.

USE OF ALUMINUM FOIL

Do not cover the oven bottom or an entire rack with foil or place foil directly under cookware. To catch spillovers, place a piece of foil a little larger than the pan, on the rack below the pan. For ranges with one rack, it will be necessary to place the foil directly under the utensil. Cut a small opening in the foil to allow heat to the bottom of the pan. This is especially important when baking pies.

UPPER OVEN (Chateau Range Only)

The upper oven of the Chateau range will feature either a microwave oven or a conventional baking oven.

Microwave oven: Refer to the separate Use and Care Book for microwave oven operating instructions.

Conventional oven: This oven is equipped with an electric bake element and features the Continuous Cleaning Oven. See page 20 for additional information on the Continuous Cleaning Oven feature.


The size of the upper oven makes it convenient for cooking smaller quantities of food. However, it does have some limitations. Do not use a large cooking sheet, pan or other large bakeware. Large bakeware will block the air flow and affect cooking results.

For optimum results, use the lower oven for critical cooking and delicate baking.

Do not use the upper oven for cooking items that are heavy or bulky to handle, especially if considerable amounts of hot fat or liquids are involved. Removing such foods from the oven is difficult and can be hazardous.

To set upper oven:

1. When cool, place the oven rack in the desired rack position.
2. Push in and turn the thermostat knob to the desired setting.

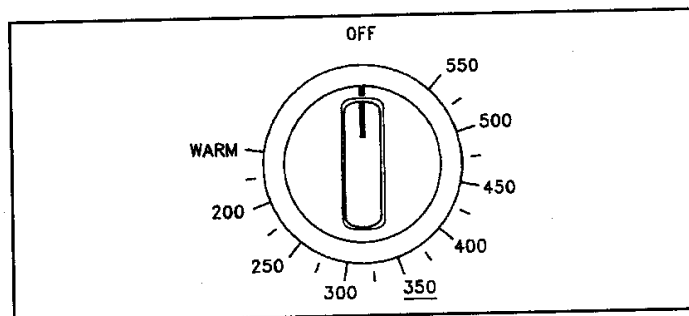

3. Allow the oven to preheat for 10 to 15 minutes.
4. Place the food in the center of the oven, allowing a minimum of two inches between the utensil(s) and the oven walls and oven door.
5. Check the food for doneness at the minimum time given in the recipe. Cook longer if necessary. Opening the oven door frequently causes heat loss which may affect cooking results and increase cooking time.
6. Turn the thermostat knob to OFF and remove the food from the oven.

GENERAL BAKING TIPS

Use a **reliable recipe** and accurately measure fresh ingredients. **Carefully follow directions** for oven temperature and cooking time.

Preheat oven if recommended in the recipe or package directions. Selecting a temperature higher than the desired temperature will not preheat the oven any faster. In fact, this may have a negative effect on baking results.

Use the correct rack position. Baking results may be affected if the wrong rack position is used. For optimum results, bake foods on one rack. Select a rack position that locates the food in the center of the oven. If baking on two racks, select rack positions #2 and 4, #1 and 4 or #2 and 5.

- Top browning may be darker if food is located toward the top of the oven.
- Bottom browning may be darker if food is located toward the bottom of the oven.
- When using two racks for baking, allow enough space between the racks for proper air circulation. Browning and cooking results will be affected if air flow is blocked.

Cookware material plays an important part in baking results. Always use the type and size of pan called for in the recipe. Cooking times or cooking results may be affected if the wrong size is used.

- **A shiny metal pan** reflects heat away from the food. This type of pan produces lighter browning and a softer crust. Use shiny pans for baking cakes or cookies.

- **A dark, dull, anodized or satin-finish metal pan** absorbs heat and produces darker browning with a crisper crust. Use dark pans for pies, pie crusts or bread.
- For optimum baking results, bake cookies and biscuits on a **flat** cookie sheet. If the pan has sides, such as a jelly roll pan, browning may not be even.
- If using **heat-proof glassware**, or **dark pans such as Baker's Secret or Wilton** reduce the oven temperature by 25°F except when baking pies or bread. Use the same baking time as called for in the recipe.

Allow hot air to flow freely through the oven for optimum baking results. Improper placement of pans in the oven will block air flow and may result in uneven browning. For optimum browning and even cooking results:

- Do not crowd a rack with pans. Never place more than one cookie sheet, one 13x9x2-inch cake pan or two 9-inch round cake pans on one rack.
- Stagger pans when baking on two racks so one pan is not directly over another pan.
- Allow one to two inches between the pan and the oven walls.

Check the cooking progress at the minimum time recommended in the recipe. If necessary, continue checking at intervals until the food is done. If the oven door is opened too frequently, heat will escape from the oven; this can affect baking results and wastes energy.

If you add additional ingredients or alter the recipe, expect cooking times to increase or decrease slightly.

COMMON BAKING PROBLEMS AND WHY THEY HAPPEN

PROBLEM	CAUSE
<i>Cakes are uneven.</i>	<ul style="list-style-type: none"> • Pans too close or touching each other or oven walls. • Batter uneven in pans. • Temperature set too low or baking time too short. • Oven not level. • Undermixing. • Too much liquid.
<i>Cake high in middle.</i>	<ul style="list-style-type: none"> • Temperature set too high. • Baking time too long. • Overmixing. • Too much flour. • Pans touching each other or oven walls. • Incorrect rack position.
<i>Cake falls.</i>	<ul style="list-style-type: none"> • Too much shortening or sugar. • Too much or too little liquid. • Temperature set too low. • Old or too little baking powder. • Pan too small. • Oven door opened frequently. • Added incorrect type of oil to cake mix. • Added additional ingredients to cake mix or recipe.
<i>Cakes, cookies, biscuits don't brown evenly.</i>	<ul style="list-style-type: none"> • Incorrect rack position. • Oven door not closed properly. • Door gasket not sealing properly or properly attached to door. • Incorrect use of aluminum foil. • Oven not preheated. • Pans darkened, dented or warped. <p>For optimum results, bake on one rack. If baking cakes on two racks, place pans toward the front of the oven on the upper rack and toward the back of the oven on the lower rack.</p>
<i>Cakes, cookies, biscuits too brown on bottom.</i>	<ul style="list-style-type: none"> • Oven not preheated. • Pans touching each other or oven walls. • Incorrect rack position. • Incorrect use of aluminum foil. • Placed 2 cookie sheets on one rack. • Used glass, dark, stained warped or dull finish metal pans. (Use a shiny cookie sheet.) <p>Follow cookware manufacturer's instructions for oven temperature. Glassware and dark cookware such as Ecco's Baker's Secret may require lowering the oven temperature by 25°F.</p>
<i>Cakes don't brown on top.</i>	<ul style="list-style-type: none"> • Incorrect rack position. • Temperature set too low. • Overmixing. • Too much liquid. • Pan size too large or too little batter in pan. • Oven door opened too often.
<i>Excessive shrinkage.</i>	<ul style="list-style-type: none"> • Too little leavening. • Overmixing. • Pan too large. • Temperature set too high. • Baking time too long. • Pans too close to each other or oven walls.
<i>Uneven texture.</i>	<ul style="list-style-type: none"> • Too much liquid. • Undermixing. • Temperature set too low. • Baking time too short.
<i>Cakes have tunnels.</i>	<ul style="list-style-type: none"> • Not enough shortening. • Too much baking powder. • Overmixing or at too high a speed. • Temperature set too high.
<i>Cake not done in middle.</i>	<ul style="list-style-type: none"> • Temperature set too high. • Pan too small. • Baking time too short. <p>If additional ingredients were added to mix or recipe, expect cooking time to increase.</p>
<i>Pie crust edges too brown.</i>	<ul style="list-style-type: none"> • Temperature set too high. • Pans touching each other or oven walls. • Edges of crust too thin; shield with foil.
<i>Pies don't brown on bottom.</i>	<ul style="list-style-type: none"> • Used shiny metal pans. • Temperature set too low. • Incorrect rack position. • Some frozen pies should be placed on a cookie sheet, check package directions.
<i>Pies have soaked crust.</i>	<ul style="list-style-type: none"> • Temperature too low at start of baking. • Filling too juicy. • Used shiny metal pans.

ROASTING

Roasting is the method for cooking large, tender cuts of meat uncovered, without adding moisture. Most meats are roasted at 325°F. It is not necessary to preheat the oven. Place the roasting pan on either of the two lowest rack positions.

Roasting Tips

Use tender cuts of meat weighing three pounds or more. Some good choices are: Beef rib, ribeye, top round, high quality tip and rump roast, pork loin roast, leg of lamb, veal shoulder roast and cured or smoked hams.

Season meat, if desired, either before or after roasting. Rub into the surface of the roast if added before cooking.

Place the meat fat-side-up on a rack in a shallow roasting pan. Placing the meat on a rack holds it out of the drippings,

thus allowing better heat circulation for even cooking. As the fat on top of the roast melts, the meat is basted naturally, eliminating the need for additional basting.

The cooking time is determined by the weight of the meat and the desired doneness. For more accurate results, use a meat thermometer. Insert it so the tip is in the center of the thickest part of the meat. It should not touch fat or bone.

Remove the roast from the oven when the thermometer registers the desired temperature.

NOTE: For more information about food safety, call USDA's Meat & Poultry Hotline at 1-800-535-4555. For cooking information write to the National Live Stock and Meat Board, 444 North Michigan Avenue, Chicago, Illinois 60611.

ROASTING CHART (Thawed meats only)

Cut of Meat	Approximate Weight (pounds)	Oven Temperature in °F	Internal Temperature	Approximate* Roasting Time (min. per lb.)
Beef				
Rib Roast (cut-side-down)	4 to 8	325°F	160°F (medium)	30-35
Rib Eye Roast	4 to 6	350°F	160°F (medium)	30-35
Top Sirloin Roast	3 to 6	325°F	160°F (medium)	30-35
Pork, Fresh				
Shoulder Blade Roast, (boneless)	4 to 6	325°F	160°F	35-45
Shoulder Blade Roast	4 to 6	325°F	160°F	30-40
Loin Blade or Sirloin Roast	3 to 4	325°F	160°F	35-40
Boneless Pork Loin	6 to 8	325°F	160°F	25-35
Pork, Smoked				
Ham, Half (fully cooked)**	5 to 7	325°F	140°F	25-35
Ham, Half (cook-before-eating)	5 to 7	325°F	160°F	35-45
Poultry				
Turkey, unstuffed***	12 to 16	325°F	180°-185°F	18-20
	16 to 20	325°F	180°-185°F	16-18
	20 to 24	325°F	180°-185°F	14-16
Turkey, Breast	3 to 8	325°F	180°F	30-40
Chicken, Fryer	2 1/2 to 3 1/2	350-375°	180°F	20-24
Chicken, Roaster	4 to 6	350-375°F	180°F	20-25
Lamb				
Leg (boneless)	2 to 3	325°F	160°F	35-40
			170°F	40-45
Whole Leg	5 to 7	325°F	160°F	30-35

* Cooking times are approximate and may vary depending on the shape of the roast. A meat thermometer is the most accurate way to determine doneness.

** Add water and follow package directions.

*** Stuffed turkey requires additional roasting time. Shield legs and breast with foil to prevent overbrowning and drying of skin.

AUTOMATIC OVEN COOKING

The Automatic Oven Cooking feature is used to turn the oven on and off at a preset time of day. This feature can be used to:

- Turn the oven on immediately (**immediate start**).
- Delay the start of cooking (**delay start**).

The feature can be used with either oven cooking or the self-cleaning oven feature. See page 22 for instructions on delaying the start of a clean cycle.

The clock must be functioning and set at the correct time of day for the Automatic Oven Cooking feature to operate properly.

IMPORTANT

- Highly perishable foods such as dairy products, pork, poultry, seafood, or stuffing are not recommended for Delay Start cooking.
- If cooking more than one food, select foods that cook for the same length of time and at the same oven temperature.

To recall the preset cook time or stop time, press the corresponding pad.

To cancel the Automatic Oven Cooking operation, press the CANCEL pad.

At the end of the Automatic Oven Cooking operation, the oven will automatically turn off and continuous beeps will sound to remind you to remove food from the oven. Press the CANCEL pad to cancel the beeps.

This feature will only delay cooking up to eleven hours and fifty five minutes (11:55).

If you delay more than 30 seconds between pressing a pad and the ▲ or ▼ pad, the display will either:

- Return to the previous setting.
- Beep and flash to indicate the next entry.
- Return to the current time of day and cancel the operation.

IMMEDIATE START**To set oven:**

1. Place food in the oven.
2. Press the COOK TIME pad.
 - The words SET COOK TIME will flash in the display.
3. Press the ▲ or ▼ pad to enter the cooking time.
4. Press the OVEN TEMP pad.
 - The words BAKE and 000° will appear in the display.
5. Press the ▲ or ▼ pad to enter the oven temperature.

The oven will immediately turn on. The words TIMED BAKE ON will appear in the display and the display will begin counting down the cooking time.

At the end of the preset cooking time, the oven will automatically turn off and END will appear in the display. Continuous beeps will remind you to remove the food from the oven.

Press the CANCEL pad to cancel the beeps. The current time of day will reappear in the display when the CANCEL pad is pressed. Remove the food from the oven.

Example For Immediate Start

Food is to cook for one hour and thirty minutes (1:30) at 375°F.

1. Press the COOK TIME pad.
2. Press the ▲ pad until 1:30 (one hour and thirty minutes) is displayed.
3. Press the OVEN TEMP pad.
4. Press the ▲ pad until 375° is displayed.

The oven will turn on immediately and will automatically turn off at the preset time. Press the CANCEL pad to cancel the beeps.

DELAY START**To set oven:**

1. Place food in the oven.
2. Press the COOK TIME pad.
 - The words SET COOK TIME will flash in the display.
3. Press the ▲ or ▼ pad to enter the cooking time.
 - The cooking time will be displayed in hours and minutes.
4. Press the STOP TIME or OVEN STOP pad.
 - The words SET STOP TIME will flash in the display.
5. Press the ▲ or ▼ pad to enter the time you wish the oven to turn off.
6. Press the OVEN TEMP pad.
 - The words BAKE and 000° will appear in the display.
7. Press the ▲ or ▼ pad to enter the oven temperature.
8. Press the CLOCK pad and the current time of day will reappear in the display.
 - DELAY BAKE will appear in the display to indicate that the oven is set for a delay start cooking operation.

The control will automatically determine when to turn on the oven based on the COOK TIME and STOP TIME or OVEN STOP time you set. It is NOT necessary to set a start time.

At the preset time, the oven will automatically turn on and TIMED BAKE ON will appear in the display. The display will begin counting down the cooking time.

At the end of the preset cooking time, the oven will automatically turn off and END will appear in the display. Continuous beeps will remind you to remove the food from the oven.

Press the CANCEL pad to cancel the beeps and remove the food from the oven. The current time of day will appear in the display when the CANCEL pad is pressed.

Example For Delay Start

Food is to cook for one hour and thirty minutes (1:30) at 375°F. You wish the food to be cooked by 6:00.

1. Press the COOK TIME pad.
2. Press the ▲ pad until 1:30 (one hour and thirty minutes) is displayed.
3. Press the STOP TIME or OVEN STOP pad.
4. Press the ▲ pad until 6:00 is displayed.
5. Press the OVEN TEMP pad.
6. Press the ▲ pad until 375° is displayed.

The oven will automatically turn on and off at the preset times. Press the CANCEL pad to cancel the beeps.

BROILING

Broiling is a method of cooking tender meats by direct heat. The cooking time is determined by the distance between the meat and the broil element, the desired degree of doneness and the thickness of the meat.

Broiling Tips

Broiling requires the use of a broiler pan and insert. The broiler insert must be in place to allow fat and liquid to drain to the pan below to prevent spatters, smoke and flare-ups. Improper use may cause grease fires.

For easier clean up, line the broiler pan with foil and spray the insert with a non-stick vegetable spray. Do not cover the broiler insert with aluminum foil as this prevents fat from draining into pan below.

Trim excess fat and slash remaining fat to help keep meat from curling and to reduce smoking and spattering. Season meat after cooking.

Place oven rack in the correct rack position when oven is cool. For darker browning, place meat closer to the broil element. Place meat further down if you wish meat to be well done or if excessive smoking or flaring occurs.

See Care and Cleaning Chart on page 23 for instructions on cleaning the broiler pan and insert.

To set oven to broil:

1. When the oven is cool, position the rack in the oven.
2. Press the BROIL pad.
000° and BROIL indicator words will appear in the display.
3. Press the ▲ pad to select HI for normal broiling or press the ▼ pad to select Lo for low temperature broiling.
4. For optimum browning results, remove the broiler pan and preheat the broil element for 3 minutes.
5. Broil with the oven door opened to the broil stop position (opened about 6-inches). Turn meat once about half way through cooking. Check for doneness by cutting a slit in the meat near the center for desired color.
6. At the end of cooking, remove the broiler pan and press the CANCEL pad to cancel the broil operation. The current time of day will reappear in the display.

Use HI BROIL for most broil operations. Select Lo BROIL when broiling longer cooking foods such as poultry. The lower temperature allows food to cook to the well done stage without excessive browning. Cooking time will increase if Lo BROIL is selected.

Broil times will increase if oven is installed on a 208-volt circuit.

BROILING CHART

TYPE OF MEAT	RACK POSITION*	DONENESS	TOTAL TIME (MINUTES)**
BACON	#4	Well Done	6 to 10
BEEF STEAKS 1-inch thick	#4 #4	Medium Well Done	15 to 18 19 to 23
CHICKEN Pieces	#3 or #4	Well Done	LO BROIL 30 to 45
FISH Fillets Steaks, 1-inch thick	#4 #4	Flaky Flaky	8 to 12 10 to 15
GROUND BEEF PATTIES 3/4-inch thick	#4	Well Done	15 to 18
HAM SLICE, precooked 1/2-inch thick	#4	Warm	8 to 12
PORK CHOPS 1-inch thick	#4	Well Done	22 to 26

* The top rack position is position #5.

** Broiling times are approximate and may vary depending on the meat.

CHATEAU RANGE CONVENTIONAL UPPER OVEN ONLY

The upper oven door liner is porcelain enamel. For cleaning instructions, refer to the cleaning chart on page 24.

WHAT IS THE CONTINUOUS CLEANING OVEN?

The finish of the Continuous Cleaning Oven is identified by its dark gray color, and rough, porous texture. The rough texture prevents grease spatters from forming beads which run down the walls leaving unsightly streaks. Rather, the rough texture absorbs spatters and allows them to spread, thus exposing a larger area to the hot oven air. The catalyst, when exposed to heat, speeds the oxidation of soil.

Cleaning action automatically begins whenever the oven is turned on for baking or roasting. The oven **MUST** be "on" for cleaning to take place. No cleaning will occur when the oven is off. The special catalytic finish must be exposed to hot oven air before soil will begin to gradually reduce in size.

FACTORS AFFECTING LENGTH OF CLEANING TIME

The higher the oven temperature, the faster the cleaning action. The length of cleaning time will depend on these factors: Type of soil, amount or size of soil, oven temperature and length of time oven is in use. Time may vary from a few minutes to several hours. Soil deposited at the end of a cycle may still be visible. This will usually fade with continued oven use until the soil gradually disappears or can be wiped up manually. The oven will appear presentably clean, even though some spatters may be present.

MANUALLY CLEANING HEAVY SPILLOVERS

The special finish will clean most spatters during normal oven use unless there is a heavy buildup of soil. Heavy spillovers such as pie or casserole boilovers will not clean

effectively without some manual help. The crusty or varnish-like stains that form from these spillovers clog the pores and prevent the special finish from being exposed to the hot oven air. This greatly reduces the cleaning effectiveness of the finish.

These crusty or varnish-like stains must either be removed or broken up before cleaning can effectively take place.

TO MANUALLY CLEAN HEAVY SPILLOVERS

Brush off heavy soil with a nylon brush or plastic pad. **DO NOT USE** paper towels, cloths or sponges for the oven walls are porous and particles of these materials will rub off on the walls. Rinse area with clear water only.

Brittle crusts or stains can be loosened by **GENTLY** tapping stain with a wooden or plastic utensil. Brush away any loose soil that flakes off. Varnish type stains usually need to be softened with a small amount of water or damp cloth. Remaining soil will gradually reduce with continued oven use at normal baking temperatures.

DO NOT USE ANY TYPE OF OVEN CLEANER, POWDERED CLEANSERS, SOAP, DETERGENT OR PASTE ON ANY CONTINUOUS CLEANING SURFACE. ALSO, DO NOT USE ANY ABRASIVE MATERIALS, STEEL WOOL, SHARP INSTRUMENTS OR SCRAPERS FOR THEY WILL DAMAGE THE FINISH.

Avoid spillovers by using utensils that are large enough to hold food. A cookie sheet or piece of aluminum foil, just a little larger than the pan, can be placed on the rack directly below the rack holding the utensil to catch spills.

Over a period of time, wear marks may appear on the embossed rack supports. This is normal and results from sliding the racks in and out of the oven. Wear marks will not affect the cleaning action of the oven.

On Canadian models only: The Smoothtop Cooktop will not operate during a clean cycle. This is normal.

The self-clean oven uses temperatures above normal cooking temperatures to automatically clean the entire oven interior.

CAUTION: It is normal for parts of the range to become hot during a clean cycle. Therefore, during a clean cycle, avoid touching the cooktop, oven vent area, oven door and window.

It is better to clean the oven regularly rather than to wait until there is a heavy build-up of soil in the oven.

Turn off the oven light before a clean cycle. If the oven light is left on, the light bulb will burn out during the clean cycle.

BASIC INSTRUCTIONS

1. Remove oven racks. Close and lock oven door.
2. Press CLEAN pad.
3. Press the ▲ or ▼ pad to select cleaning time.
 - Light soil - 2 hours
 - Average soil - 3 hours
 - Heavy soil - 4 hours

BEFORE SELF-CLEANING

Remove broiler pan, all pans and the oven racks from the oven. **The racks will discolor and may not slide easily after a clean cycle.**

Clean oven frame, door frame and around the oven vent with a non-abrasive cleaning agent such as Bon Ami or detergent and water. These areas are not exposed to cleaning temperatures and should be cleaned to prevent soil from baking on during the clean cycle.

Wipe up excess grease or spillovers from the oven bottom to prevent excessive smoking and flare-ups during the clean cycle.

Wipe up sugary spillovers and acid spillovers such as lemon juice, tomato sauce or milk-based sauces. Porcelain enamel is acid resistant, not acid proof. The porcelain finish may discolor if acid spills are not wiped up immediately.

Do not use oven cleaners on the self-clean oven finish or around any part of the oven as they will damage the finish or parts.

To prevent damage, do not clean or rub the gasket around the oven door. The gasket is designed to seal in heat during the clean cycle.

DURING SELF-CLEANING

When the door is locked and the CLEAN pad is pressed, the oven will automatically begin to heat to cleaning temperatures.

On slide-in, drop-in and Chateau ranges: A fan will automatically turn on during the self-clean cycle and will automatically turn off after the clean cycle when the oven has cooled.

As the oven reaches cleaning temperatures, the LOCK indicator will appear in the display to show that an internal lock mechanism has engaged. At this point, the oven door can not be unlocked and opened.

To prevent damage to the door and lock lever, do not force the door open when the LOCK indicator is displayed.

The first few times the oven is cleaned, some smoke and odor may be detected. This is normal and will lessen or disappear with use. If the oven is heavily soiled, or if the broiler pan was accidentally left in the oven, smoke and odor may occur.

As the oven heats and cools, you may hear sounds of metal parts expanding and contracting. This is normal and will not damage your appliance.

AFTER SELF-CLEANING

About one hour after the end of the clean cycle, the internal lock will disengage and the LOCK indicator will turn off. At this point, the door can be unlocked and opened. Move the door lock lever to the left or unlocked position and open the door. The oven may still be hot.

Some soil may leave a light gray, powdery ash which can be removed with a damp cloth. If soil remains, it indicates that the clean cycle was not long enough. The soil will be removed during the next clean cycle.

If the oven racks were left in the oven and do not slide smoothly after a clean cycle, wipe racks and embossed rack supports with a small amount of vegetable oil to restore ease of movement.

Clean around the oven vent opening at the rear of the cooktop if there is a deposit from the fumes vented during the clean cycle. Use detergent and water and a cloth or non-abrasive pad.

Fine, hair-like lines may appear in the oven interior or oven door. This is a normal condition resulting from heating and cooling of the porcelain finish. These lines do not affect the performance of the oven.

IMMEDIATE START

To set oven for a self-clean cycle:

1. Remove the oven racks and close the door.
2. Move the door lock lever to the right until it rests in the locked position.
3. Press the CLEAN pad.
 - "door" will appear in the display and beeps will sound if the door is not locked.
 - 3 HR:00 will appear in the display and SET CLEAN TIME will flash in the display.
 - After a few seconds delay, the oven and fan will automatically turn on. CLEAN TIME and ON will remain in the display.
4. The oven will automatically clean for 3 hours. Or, select 2 hours for light soil up to 4 hours for heavy soil by pressing the ▲ or ▼ pad.
5. Press the CLOCK pad and the current time of day will reappear in the display. CLEAN and ON will remain in the display to show that the oven is in a clean cycle.

If the door is not locked or the clean time is not entered within 30 seconds of pressing the CLEAN pad, the program will automatically be cancelled.

About one hour after the clean cycle ends, the LOCK indicator will turn off and the oven door can be unlocked and opened.

The oven door and door lock lever will be damaged if the oven door is forced to open when the LOCK indicator is still displayed.

DELAY START

To delay the start of a clean cycle:

1. Remove the oven racks and close the door.
2. Move the door lock lever to the right or locked position.
3. Press CLEAN pad.
4. Press the ▲ or ▼ pad to select the cleaning time.
5. Press STOP TIME or OVEN STOP pad and press the ▲ or ▼ pad to select the time of day you wish the oven to turn off. The stop time and CLEAN DELAY STOP TIME will appear in the display.
6. Press the CLOCK pad and the current time of day will reappear in the display. CLEAN DELAY will remain in the display to show that the oven is set for a delayed clean operation.
7. At the end of the clean cycle, continuous beeps will sound. Press the CANCEL pad to cancel the beeps.

To cancel clean cycle:

1. Press the CANCEL pad.
2. If the LOCK indicator is displayed, allow the oven to cool for up to one hour. Once the LOCK indicator turns off, the door can be unlocked and opened.

If the LOCK indicator is not displayed, the oven door can be unlocked and opened.

ABOUT CLEANING PRODUCTS

READ THE MANUFACTURER'S INSTRUCTIONS to be sure the cleaner can be safely used on this appliance. Also, read and carefully follow the manufacturer's directions when using any cleaning product.

To determine if a cleaning product is safe, test a small inconspicuous area using a very light pressure to see if the surface may scratch or discolor. This is particularly important for porcelain enamel, metal, plastic or highly polished, shiny, or painted surfaces.

Glass Cleaners – Bon Ami, Cinch, Glass Plus, Windex.

Dishwashing Liquid Detergents – Dawn, Dove, Ivory, Joy.

Mild Liquid Spray Cleaners – Fantastik, Formula 409.

Non-Abrasive Cleaners – Bon Ami, paste of baking soda and water.

Mildly Abrasive Powder or Liquid Cleansers – Ajax, Barkeepers Friend, Cameo, Comet, Soft Scrub.

Non-Abrasive or Scratchless Plastic or Nylon Scouring Pads or Sponges – Chore Boy Plastic Cleaning Puff, Scrunge Scrub Sponges, or Scotch-Brite No Scratch, Cookware or Kitchen Sponge.

Abrasive Scouring Pads – S.O.S., Brillo Steel Wool Soap, Scotch-Brite Wool Soap Pads.

(Brand names for the above cleaning products are registered trademarks of the respective manufacturers.)

Be sure appliance is off and all parts are cool before handling or cleaning to avoid damage and possible burns. If a part is removed, be sure it is correctly replaced.

To prevent staining or discoloration, clean cooktop after each use.

CARE AND CLEANING CHART

PARTS	CLEANING AGENTS	DIRECTIONS
Enamel, baked or painted <ul style="list-style-type: none"> • Backguard • Oven door • Side panels • Storage drawer Enamel, porcelain <ul style="list-style-type: none"> • Cooktop 	<ul style="list-style-type: none"> • Soap and water • Mild liquid cleaner • Glass cleaner 	<p>Use a dry towel or cloth to wipe up spills, especially acid (milk, lemon juice, fruit, mustard, tomato sauce) or sugary spills. Surface may discolor or dull if soil is not immediately removed. This is especially important for white surfaces.</p> <p>When surface is cool, wash with warm soapy water, rinse and dry. For stubborn soil, use mildly abrasive cleaning agents such as baking soda paste or Bon Ami. If desired, a thin coat of mild appliance wax can be used to protect the side panels. A glass cleaner can be used to add "shine" to the surface.</p> <p>NOTE: Do not use abrasive, caustic or harsh cleaning agents such as steel wool pads or oven cleaners. These products will scratch or permanently damage the surface.</p> <p>NOTE: Never wipe a warm or hot surface with a damp cloth as this may damage the surface and may cause a steam burn.</p>
Broiler Pan and Insert, if equipped	<ul style="list-style-type: none"> • Detergent and water • Plastic or soap-filled scouring pad • Dishwasher 	<p>Pretreat the broiler pan and insert with a non-stick vegetable coating such as Pam or Mazola to make cleaning easier.</p> <p>Remove from oven after use. Cool then pour off grease. Place soapy cloth over insert and pan; let soak to loosen soil. Wash in warm soapy water. Use soap filled scouring pad to remove stubborn soil. Broiler pan and insert can be cleaned in the dishwasher.</p>
Control Knobs	<ul style="list-style-type: none"> • Detergent and water • Mild liquid sprays • Glass cleaners 	<p>For ease of cleaning, turn off knob and remove by pulling forward. Wash, rinse, and dry. Do not use abrasive cleaning agents as they may scratch the finish and remove the markings. Turn on each element to be sure knobs have been correctly replaced.</p>
Drip Bowls, Chrome <ul style="list-style-type: none"> • Brown food stains <ul style="list-style-type: none"> • Blue/gold heat stains 	<ul style="list-style-type: none"> • Detergent and water • Plastic scouring pads • Mild abrasive cleaners <ul style="list-style-type: none"> • Flitz Metal Polish (Follow package directions) 	<p>Bowls can permanently discolor over time or if exposed to excessive heat or if soil is allowed to bake on. The discoloration will not affect the cooking performance.</p> <p>After each use, wash, rinse and dry to prevent difficult soils. If heavily soiled, gently scrub with plastic scouring pad. If soil is allowed to burn on, it may be impossible to remove.</p> <p>Do not cover with aluminum foil.</p> <p>These stains are caused by overheating, and normally occur over a period of time. They are usually permanent. To minimize:</p> <ol style="list-style-type: none"> 1. Avoid excessive use of the high heat setting. Use HIGH only to start cooking, then lower the setting to finish cooking. 2. Use flat bottom pans that do not extend more than two inches from the surface element. <p>A non-abrasive metal polish such as Flitz may be used to help remove stains. Flitz is available in many automotive supply and hardware stores.</p>
Drip Bowls, Porcelain	<ul style="list-style-type: none"> • Detergent and water • Mild abrasive cleaners • Plastic scouring pads • Dishwasher 	<p>After each use, wash, rinse and dry to prevent difficult soils. To clean by hand, soak in hot sudsy water, then use mild abrasive cleaner and plastic scouring pad. Porcelain may discolor or craze over time or if overheated. This is normal and will not affect cooking performance. Do not cover with aluminum foil.</p>

CARE AND CLEANING CHART, Continued


PARTS	CLEANING AGENTS	DIRECTIONS
Elements, Oven and Coil		Elements are self-cleaning. Soil will burn off as elements are used. Do not spray oven cleaner on elements, electrical hook up or connection. Do not immerse coil-type surface elements in water.
Glass • Oven window	<ul style="list-style-type: none"> • Detergent and water • Glass cleaner 	To prevent staining of the oven window, avoid using excessive amounts of water which may seep under or behind glass. Wash with detergent and water. Remove stubborn soil with paste of baking soda and water. Do not use abrasive materials such as scouring pads, steel wool or powdered cleaning agents. They will damage glass. Rinse with clear water and dry.
Metal finishes including brushed aluminum and chrome • Backguard • Cooktop • Door handle • Manifold panel • Oven door • Storage door • Trim parts	<ul style="list-style-type: none"> • Soap and water • Glass cleaner • Plastic or non-abrasive pad or sponge 	<p>Wash with soap and water or a glass cleaner and a soft cloth. NOTE: To prevent scratching or dulling of the finish, do not use mildly abrasive, abrasive, harsh or caustic cleaners or oven cleaners.</p> <p>To clean brushed aluminum backguard: Use only soap and water or a soft cloth and glass cleaner to prevent scratching or dulling.</p> <p>To clean stubborn soil on the brushed chrome cooktop or door: Use a paste of baking soda and water and a soft cloth. Rub with the grain to prevent scratching, dulling or streaking of the surface. To restore luster or to remove fingerprints, use a soft cloth and mineral oil. Remove excess with a clean cloth. Or, clean with an automotive chrome cleaner or polisher.</p>
Oven Interior	<ul style="list-style-type: none"> • Follow instructions on page 20 for the Continuous Clean Oven. • Follow instructions on pages 21-22 for Self-Cleaning Oven. 	Wipe up all spills immediately with a dry cloth - especially acid spills (milk, fruits, tomato, etc.). Never wipe a warm or hot surface with a damp cloth as cracking and chipping may result.
Oven Racks	<ul style="list-style-type: none"> • Detergent and water • Plastic scouring pad • Cleansing powders • Soap-filled scouring pads 	Clean with soapy water. Remove stubborn soil with cleansing powder or soap filled scouring pad. Rinse and dry. Racks will permanently discolor and may not slide smoothly if left in the oven during a self-clean operation. If this occurs, wipe the rack and embossed rack supports with a small amount of vegetable oil to restore ease of movement, then wipe off excess oil.
Plastic Finishes • Door handles • Backguard trim • Knobs • End caps	<ul style="list-style-type: none"> • Soap and water • Non-abrasive plastic pad or sponge • Glass cleaner 	When surface is cool, clean with soap and water; rinse, and dry. Use a glass cleaner and a soft cloth. NOTE: Never use oven cleaners, abrasive or caustic liquid or powdered cleansers on plastic finishes. These cleaning agents will scratch or mar finish. NOTE: To prevent staining or discoloration, wipe up fat, grease or acid (tomato, lemon, vinegar, milk, fruit juice, marinade) immediately with a dry paper towel or cloth.
Porcelain Enamel • Cooktop, coil elements • Cooktop trim, smoothtop • Door liner on Chateau upper oven	<ul style="list-style-type: none"> • Detergent and water • Paste of baking soda and water • Non-abrasive plastic pad or sponge 	Porcelain enamel is glass fused on metal and may crack or chip with misuse. Porcelain enamel is acid resistant, not acid proof. All spillovers, especially acidic or sugar spillovers, should be wiped up immediately with a dry cloth. This is especially important around the vent opening for smoothtop cooktop models. Surface may discolor or dull if soil, especially acidic soil, is not removed. Never wipe off a warm or hot surface with a damp cloth. This may cause cracking and chipping. Never use oven cleaners, abrasive or caustic cleaning agents on exterior finish of range or in the Self-clean or Continuous Clean Oven.
Smoothtop Cooktop • Light to moderate soil • Heavy soil or brown/gray stains from hard water or metal marks • Burned-on or crusty soils or residue • Sugar, plastic, aluminum foil	<ul style="list-style-type: none"> • Cooktop Cleaning Creme • Detergent and water • Paste of baking soda and water • Cooktop Cleaning Creme • Single-edge safety razor blade • Cooktop Cleaning Creme • Single-edge safety razor blade held with a potholder or a wooden handled stainless steel spatula 	<p>Wait until cooktop has cooled before cleaning. Gently apply cleaning agent with a non-abrasive plastic brush, nylon or plastic pad, paper towel or clean cloth. Rinse thoroughly and completely dry.</p> <p>Gently scrub with cleaning creme and clean cloth or paper towel. Reapply cleaner. Cover with damp paper towels to keep cleaner moist. Let stand for 30 to 45 minutes. Scrub to remove remaining stain. Rinse and dry.</p> <p>Hold razor blade scraper at 30° angle and very carefully scrape off soil. Clean remaining soil with cleaning creme.</p> <p>Immediately turn element to LOW and scrape from hot surface to a cool area. Then turn element OFF and cool. Clean residue with razor blade scraper and cleaning creme.</p> <p>NOTE: Call an authorized servicer if the smoothtop should crack, break or if metal or aluminum foil should melt on the cooktop.</p>

Before replacing the light bulb or fluorescent tube, **DISCONNECT POWER TO RANGE**. Be sure the bulb is cool. Do not touch a hot bulb with a damp cloth as the bulb may break.

COOKTOP LIGHT, if equipped

To turn on cooktop light: Press and hold rocker switch until the light turns on. The oven light switch is located on the backguard.

To replace cooktop light: Be sure bulb is cool. Grasp the top trim of the backguard with your thumbs under the front edge and pull outward while lifting to release trim from catches at each end.

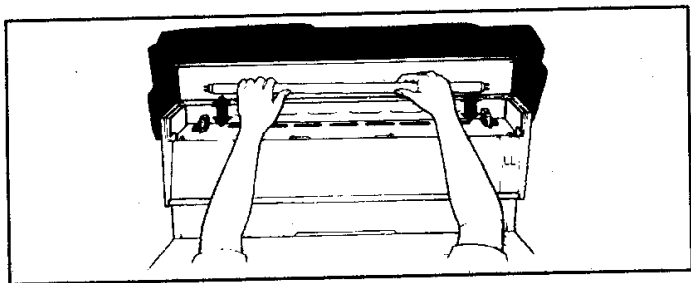


Remove fluorescent tube and replace with an 18 watt fluorescent tube. Snap top trim back into place and reconnect power to range. Reset the clock.

OVEN LIGHT

To turn on oven light: Push the rocker switch located on the backguard or on the control panel.

To replace oven light: Be sure bulb is cool. Use a dry potholder, to prevent possible harm to hands, and very carefully unscrew bulb cover and bulb.

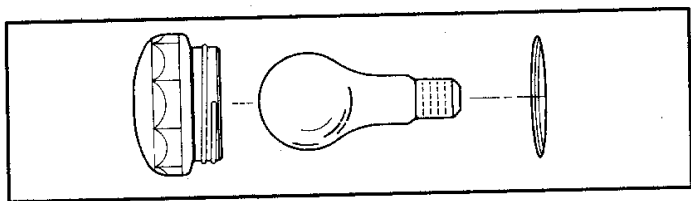

Replace with a 40 watt appliance bulb. Replace bulb cover and reconnect power to range. Reset the clock.


BACK PANEL LIGHT (Chateau Range Only)

On conventional upper oven: To turn on light, press button marked "BACK PANEL" which is located at the base of the control panel.

On microwave oven model: To turn on light, press "ON" pad located at base of microwave control panel.

To replace fluorescent panel light: Be sure bulb is cool. Remove three screws holding trim piece along top edge of glass OR two screws holding trim piece along side edge of glass. Support glass while removing screws so glass will not fall forward. Remove bulb and replace. Reconnect power to range, check light operation prior to replacing glass panel and reset the clock.

On microwave oven model: Refer to the separate microwave oven use and care booklet for instructions on removing the cooktop light bulb.

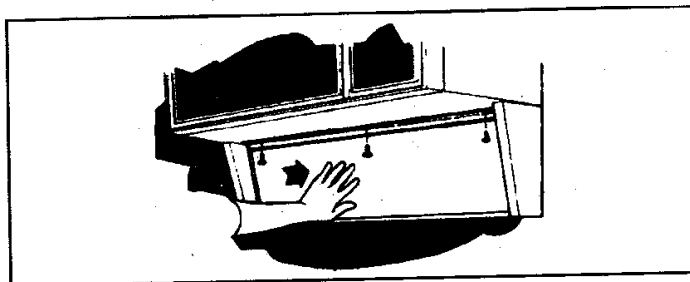

UPPER OVEN LIGHT (Chateau Range Only)

On conventional oven only: To turn on oven light, push in button, located at base of control panel.

On microwave oven: Oven light turns on whenever the door is opened or when the oven is in a cook or defrost operation.

To replace conventional oven light: Be sure bulb is cool. Use a dry potholder and very carefully remove bulb. Replace with a 40 watt APPLIANCE bulb. Reconnect power to range and reset the clock.

On microwave oven model: Refer to the separate microwave oven use and care booklet for instructions on removing the oven light bulb.


COOKTOP

To prevent staining or discoloration, clean cooktop after each use. Wipe acid or sugar stains as soon as the cooktop has cooled as these stains may discolor or etch the porcelain.

Freestanding ranges with a coil element cooktop will feature a lift-up cooktop.

Cooktops on the following models do not lift up: Smoothtop cooktops, slide-in or drop-in ranges and ranges for Canada.

To raise the cooktop: When cool, grasp the front edge of the cooktop and gently lift up until the two support rods at the front of the cooktop snap into place.

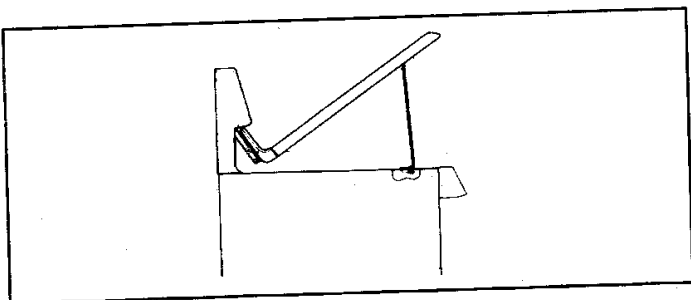

To lower the top: Hold the front edge of the cooktop and carefully push back on each support rod to release the notched support. Then gently lower the top into place. The support rods will slide into the range frame.

OVEN DOOR


Do not place excessive weight on an open oven door or stand on an open oven door as, in some cases, it could cause the range to tip over, break the door or cause serious injury to the user.

When opening the oven door, allow steam and hot air to escape before reaching in oven to check, add or remove food.

Do not attempt to open or close door until the door is completely seated on the hinge arms. Never turn on the oven unless door is properly in place. When baking, be sure the door is completely closed. Baking results will be affected if the door is not securely closed.

CAUTION: Hinge arms are spring mounted and will slam shut against the range if accidentally hit. **Never place hand or fingers between the hinges and the front oven frame.** You could be injured if hinge snaps back.

To remove lift-off door: When cool, open the door to the "stop" position (opened about 6 inches) and grasp the door at each side. Do not use the door handle to lift the door. Lift up evenly until the door clears the hinge arms.

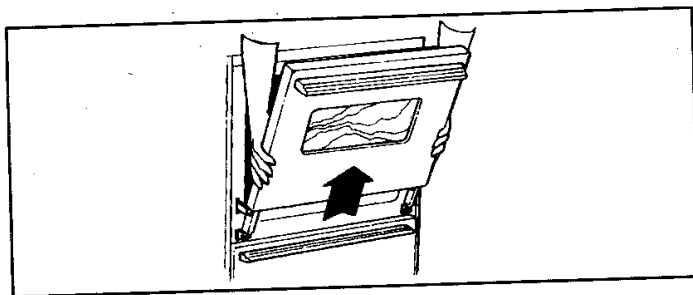

To replace door: Grasp the door at each side, align slots in the door with the hinge arms and slide the door down onto the hinge arms until it is completely seated on hinges.

DOOR LOCK LEVER

The oven door is locked for a self-clean operation only. Do not move the door lock lever to the right or locked position during a cooking operation. If the door is locked, the operation will automatically be cancelled and "door" will appear in the display. If the oven is hot enough to engage the internal lock, the oven door will not open. Allow the oven to cool for up to an hour, then unlock and open the door.

STORAGE DRAWER, if equipped


The storage drawer at the bottom of the range is safe and convenient for storing metal and glass cookware. **DO NOT** store plastic, paperware, food or flammable material in this drawer. Remove drawer to clean under range.

To remove: Empty drawer then pull drawer out to the first stop position. Lift up front of drawer and pull to the second stop position. Grasp sides and lift up and out to remove drawer.

To replace: Fit the ends of the drawer glides onto the rails. Lift up drawer front and gently push in to first stop position. Lift up drawer again and continue to slide drawer to the closed position.

LEVELING LEGS

Some floors are not level. For proper baking, your range must be level. Leveling legs are located on each corner at the base of the range. Level by turning the legs. To prevent range from accidentally tipping,

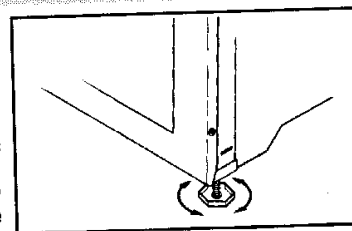

range should be secured to the floor by sliding a rear leveling leg into the anti-tip bracket supplied with the range.

EXPLANATION OF FAULT CODES

Your appliance is equipped with self-diagnostic software which continuously monitors the control to ensure safe and proper operation. If the software detects a questionable situation, a FAULT CODE (F plus a number) will appear in the display, continuous beeps may sound and as a safety precaution, the operation will be cancelled.

If a fault code appears in the display and continuous beeps sound, press the CANCEL pad. Then, reprogram the cooking operation. If the fault code reappears in the display, call an authorized servicer. Do not use the oven until the appliance has been serviced.

If the oven is heavily soiled, excessive smoke and flaring may result in a fault code during a self-clean cycle. If this occurs, press the CANCEL pad and allow the oven to cool for an hour.

ADJUSTING OVEN TEMPERATURE

If you have carefully followed the recipe, reviewed the baking tips in this manual and still feel cooking results do not meet your expectations, you can adjust the oven temperature. **DO NOT ADJUST THE TEMPERATURE** if only one or two items are not baking properly.

If you think the oven should be hotter or cooler, you can adjust it yourself. To decide how much to change the thermostat, set the oven temperature 25°F higher or lower than the temperature in your recipe, then bake. The results of the "test" should give you an idea of how much to adjust the thermostat.

To adjust the thermostat:

1. Press the OVEN TEMP pad.
2. Press the ▲ pad until 550° is displayed.
3. **Press and hold** the OVEN TEMP pad for several seconds. The display will show the ambient oven temperature for a few seconds then 00° will appear in the display.
 - If 00° does not appear in the display, press the CANCEL pad and begin again.
 - If the oven temperature was previously adjusted, the change will be displayed. For example, if the temperature was reduced by 15°, -15° will be displayed.
4. Press the ▲ or ▼ pad to select the temperature change desired.
 - The oven temperature can be increased up to 35° or reduced by as much as 35° (-35°) in 5° increments.
 - If you delay in selecting a temperature, the program will automatically cancel and 00° will disappear. Begin again if the program cancels.
5. Press the CANCEL pad and the time of day will reappear in the display. The oven will now bake at the adjusted temperature.

It is not necessary to readjust the oven temperature if there is a power interruption. This adjustment will not affect broil or clean temperatures.

BEFORE YOU CALL FOR SERVICE CHECK THESE POINTS

Part or all of your electric range does not operate

- Is the range plug loose or disconnected from the electrical outlet?
- Are any house fuses blown or circuit breakers tripped?
- Has the power supply to the home been interrupted?
- Are the oven controls properly set?
- Was the electronic control correctly set?
- Was the door left in the locked position following a self-clean cycle?
- Is the oven set for automatic oven cooking?

Surface elements fail to turn on or heat the food properly.

- Is the range plug loose or disconnect from the electrical outlet?
- If the range has coil elements, are they properly plugged into the receptacles?
- Were appropriate utensils used? (See page 6.)
- Are the surface element controls properly set?
- Is voltage to the house reduced?
- CANADIAN MODELS ONLY: The smoothtop cooktop will not operate during a self-clean operation. This is normal.

Food not baking or cooking correctly

- Are the oven racks properly placed for baking?
- Have you used aluminum foil correctly?
- Was the oven preheated as recommended?
- Are the controls properly set?
- Is there 1 to 2 inches of space between pans and the oven walls?
- Are the range and oven racks level?
- Was good cookware/bakeware of the proper size used?
- Was the oven vent covered or blocked on the range surface?
- Are you using a tested recipe from a reliable source?
- Have you used aluminum foil correctly?

Baking results differ from previous oven

- Oven thermostat calibration may differ between old and new oven. The newer oven thermostat may be more accurate than the one on your previous oven. Follow a reliable recipe and review baking information on pages 14 to 15. If you still feel the oven temperature is incorrect see page 27 for information on adjusting the oven thermostat.

Food does not broil correctly

- Was the control set properly for broiling? (See page 19.)
- Was the proper rack position used? (See page 19.)
- Did you allow time for the broil element to preheat?
- Was aluminum foil used on the broiler insert, blocking the slits for fat drainage?
- Was the oven door opened to the broil stop position?

Oven light does not operate

- Is the bulb loose or burned out?
- Is the light switch in the On position?

Oven will not self-clean

- Is the self-clean control set properly? (See pages 21-22.)
- Is the oven set for a delayed clean operation?
- Is the oven door properly locked?
- Was the oven heavily soiled?

Oven door will not lock

- Are the controls properly set for the self-clean cycle?

Oven door will not unlock

- Has the self-clean cycle been completed for at least one hour?
- Was the door correctly unlocked?
- Is the LOCK indicator word in the display?

"F" plus a number appears in the display

- This is a fault code. If a fault code appears in the display and a continuous beep sounds, press the CANCEL pad. If the beeps continue, call an authorized servicer. See page 27 for additional information.

HOW TO OBTAIN SERVICE

Do not attempt to service the appliance yourself unless directed to do so in this manual. Contact the dealer who sold you the appliance for service or call us. Our telephone number is found on the separate warranty sheet.

If your appliance should require service or replacement parts, contact your dealer or authorized servicer. Be sure to have the model and serial numbers of the appliance available. See the front cover of this manual for location of these numbers. Please review the separate warranty sheet that comes with your appliance to see if the service you are requesting is covered by the warranty.

If you are not satisfied with the local response to your service requirements, write to Maytag Customer Service, P.O. Box 2370, Cleveland, TN 37320-2370. Include your name,

address, phone number, the complete model and serial numbers of the appliance, the name and address of the dealer from whom you purchased the appliance, the date of purchase and details concerning your problem.

If you do not receive satisfactory service, you may contact the Major Appliance Consumer Action Program by letter. Include the information listed above.

Major Appliance Consumer Action Program
20 North Wacker Drive
Chicago, IL 60606

MACAP (Major Appliance Consumer Action Program) is an independent agency sponsored by three trade associations as a court of appeals on consumer complaints which have not been resolved satisfactorily within a reasonable period of time.