



Electrolux

Factory Parts Catalog

Product No.	E30EW7CGPS3
	37165373P70S3
Series	30" single
Color	stainless
Market	Canada
Wiring Diagram	318046263
Owner's Guide	318205130
Installation Instructions	318201524
Service Data Sheet	318047437
Quick Start Guide	318203413

Electrolux

Electrolux Major Appliances



P.O. BOX 8020
CHARLOTTE, NC 28262

Publication No.
5995580668
10/11/17
(EN/SERVICE/ECL)
377

30" SINGLE ELECTRIC WALL OVEN

Model No.
E30EW7CG

CONTROL PANEL

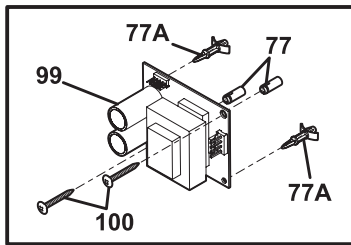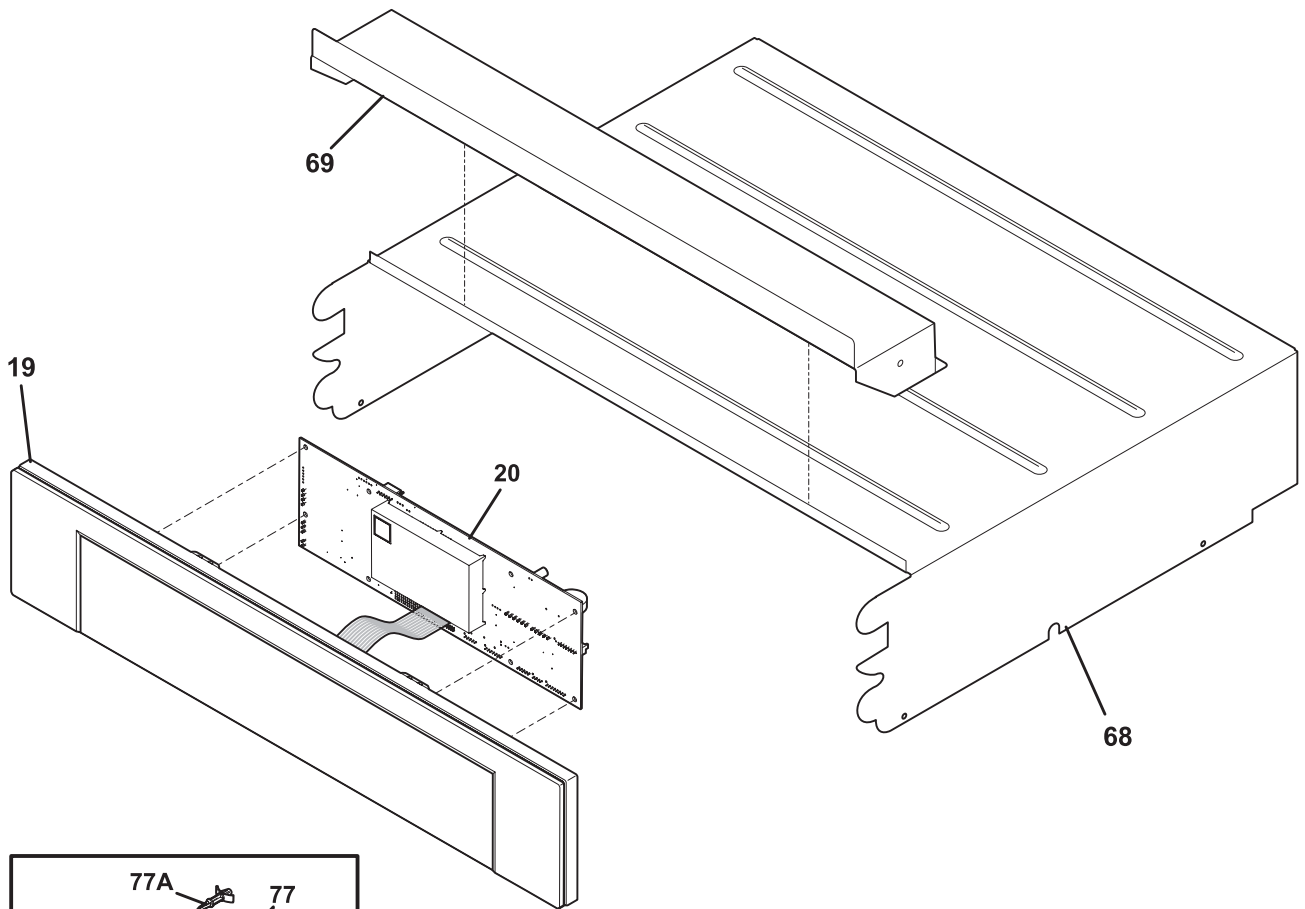


CE30EW75GSS1

CONTROL PANEL

POS. NO	PART NO.	DESCRIPTION
19	318244837	Control Panel, assembly, w/stainless trm
20 #	316576630	Clock/Timer, electronic, ES630
20*	316524400	Screw, control mtg, 6-32 x .25, (5)
68	318237224	Housing, top/control
69	318237320	Shield, control
77	318293702	Spacer, control
77A	316114100	Spacer
99 #	316535200	Board, power supply, 8V, (2)
100	5303297477	Screw, 6-20 x 1 1/4
* #	318532112	Harness, wiring, communication, 10 connectors
*	5303211311	Screw, 8-18 x 0.500

BODY

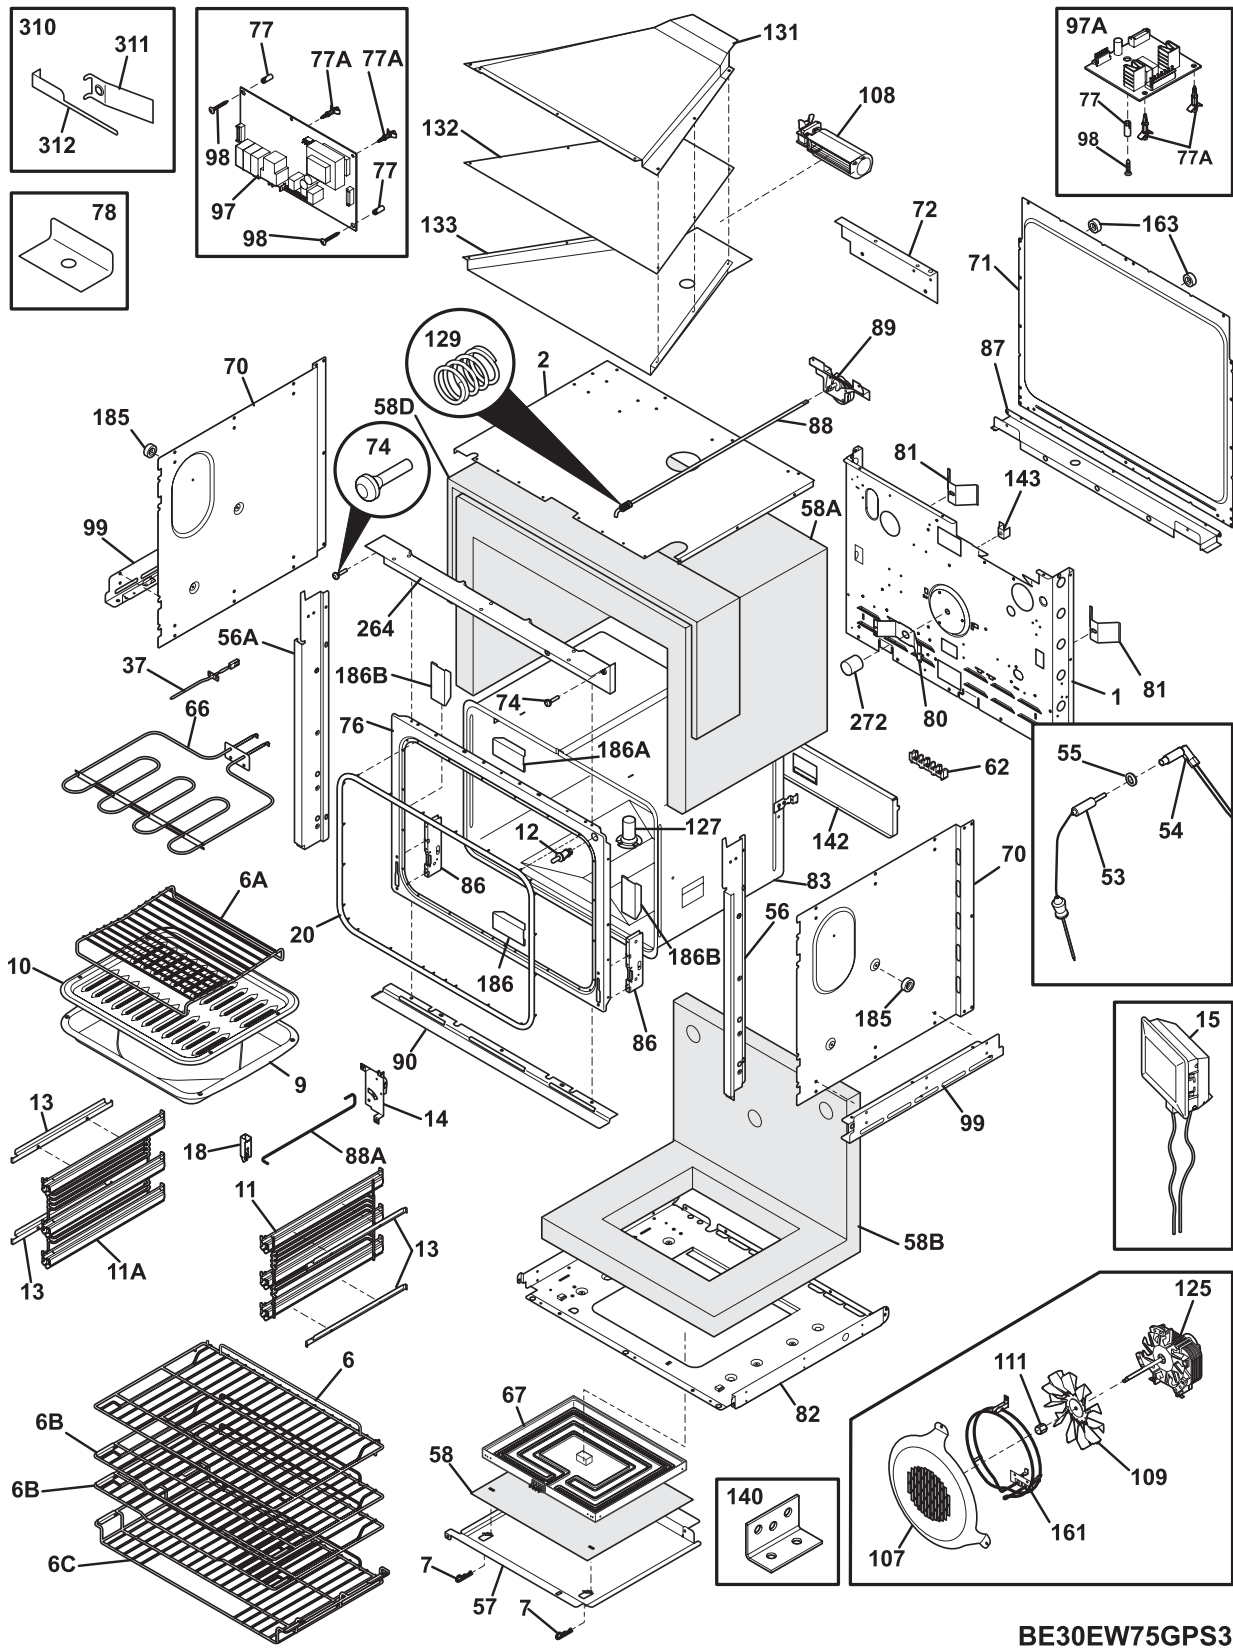

BE30EW75GPS3


BODY

POS. NO	PART NO.	DESCRIPTION
1	318259220	Back, main
2	318376700	Shield, oven top
6	318240104	Shelf, oven, fixed
6A	318365800	Rack, broiler pan
6B	318345405	Shelf, oven, extendable, (2)
6C	318345406	Shelf, oven, extendable
7	318368300	Pin, locking, (2)
9	318138801	Pan, broiler
10	318126401	Insert, broiler pan
11	318240014	Glide & Support assy, oven shelves, RH
11A	318240015	Glide & Support assy, oven shelves, LH
12	316445501	Switch, oven light, door frame
13	318603913	Bracket, ladder mtg., (4)
13*	5304456367	Rivet, ladder bracket, (8)
14 #	318562200	Sensor Assy, w/switch, and bracket
14*	318341201	Jumper, electronic, rack sensor
15	318241006	Lamp, oven, (2), halogen
18	318562300	Bracket, rod
20	318239001	Gasket, oven door
37 #	318562500	Sensor, oven temp probe
37*	318373001	Bracket, receptacle, temp probe
37*	5304435874	Plate, covering, probe
53 #	318601302	Probe, meat temp
54 #	318601206	Receptacle, probe
*	316247800	Washer, lock, mtg
55	316247700	Nut, mounting
56	318236522	Trim, side, black, RH
56A	318236523	Trim, side, black, LH
57	318361610	Panel, service
58	318330501	Insulation, service panel, 12.47 x 14.77
58A	318386100	Insulation, oven wrapper
58B	318362100	Insulation, rear & bottom, oven wrapper
58D	318362124	Insulation, 26 x 9.5 x .5
62	316056000	Terminal Block
62*	5303323139	Screw, 10-24 x 0.906
62*	5303323144	Nut, 10-32
66 #	318255806	Element, broil, 4000W
67 #	318601601	Element, hidden bake, upper oven
* #	318231870	Wiring Harness, bake element
70	318259114	Shield, insulation, sides, (2)
71	318376800	Panel, rear box
72	318377100	Cover, main back
74	318283600	Bumper
76	318056241	Front, oven
77	318293702	Spacer, control
77A	316114100	Spacer
78	318243601	Bracket, stopping
80	5303320846	Plate, oven mtg
81	318192400	Spring, oven
82	318258775	Shield, insulation, lower
83	318386001	Liner, oven assy

BODY

POS. NO	PART NO.	DESCRIPTION
86	318241406	Receptacle, hinge, (2)
86*	5304461333	Screw, 10-32 x 17/32
87	318260622	Bracket, cable mtg.
*	5303323136	Screw ground
88	318250203	Rod, latch, w/bushing
88*	318167300	Clip, rod
88A	318376505	Rod, latch
89 #	318095965	Motor, latch assy, w/brkt & switch
*	5303316982	Foam seal, (2)
90	318370403	Bracket, gutter, black
97 #	316443925	Board, relay
97A#	316519200	Board, variable speed
98	5303297477	Screw, 6-20 x 1 1/4
99	318256203	Bracket, side, bottom, (2)
107	318906601	Cover, fan
108#	318073019	Motor, blower
109	318398302	Fan Blade
111	316136600	Nut, fan retainer
125#	318398201	Motor, fan
127	318357003	Adapter Assembly, w/vent tube, and catalyst
129	5303311164	Spring
131	318376911	Channel, air, upper
132	318237603	Divider, air channel
133	318237501	Channel, air, lower
140	318399310	Bracket, holding
142	318123910	Deflector
143	318172904	Support, wire
161#	318255512	Element, convection, 1600 W
163	318531703	Spacer
185	318531800	Spacer, oven shield, (2)
186	318236901	Bracket, oven, lower
*	5304436875	Screw, 8-18 X 1/2, black, (3)
186A	318237001	Bracket, oven, upper
186B	318237101	Bracket, oven, side, (2)
264	318278611	Trim, vent
272	318249409	Tube, protector
310	5304435864	Kit, cabinet mtg, w/instructions
311	318246000	Bracket, cabinet, anti-tip
311*	5304438005	Screw, 6 x 1, black
312	318246702	Tool, oven release, RH key
312	318246703	Tool, oven release, LH key
* #	318394441	Box & wires assy
* #	318532108	Harness, wiring, main
* #	318532125	Harness, wiring, communication, relay board
*	5303211311	Screw, 8-18 x 0.500
*	5303311306	Screw, 8-18 x 0.375, (4)
*	5303323129	Screw, 8 X 0.750
*	5303323277	Screw, 8-18 X 13/32
*	5303324184	Screw, 8-18 x 5/16, black
*	5304415832	Screw, 8-18 x 0.406

DOOR

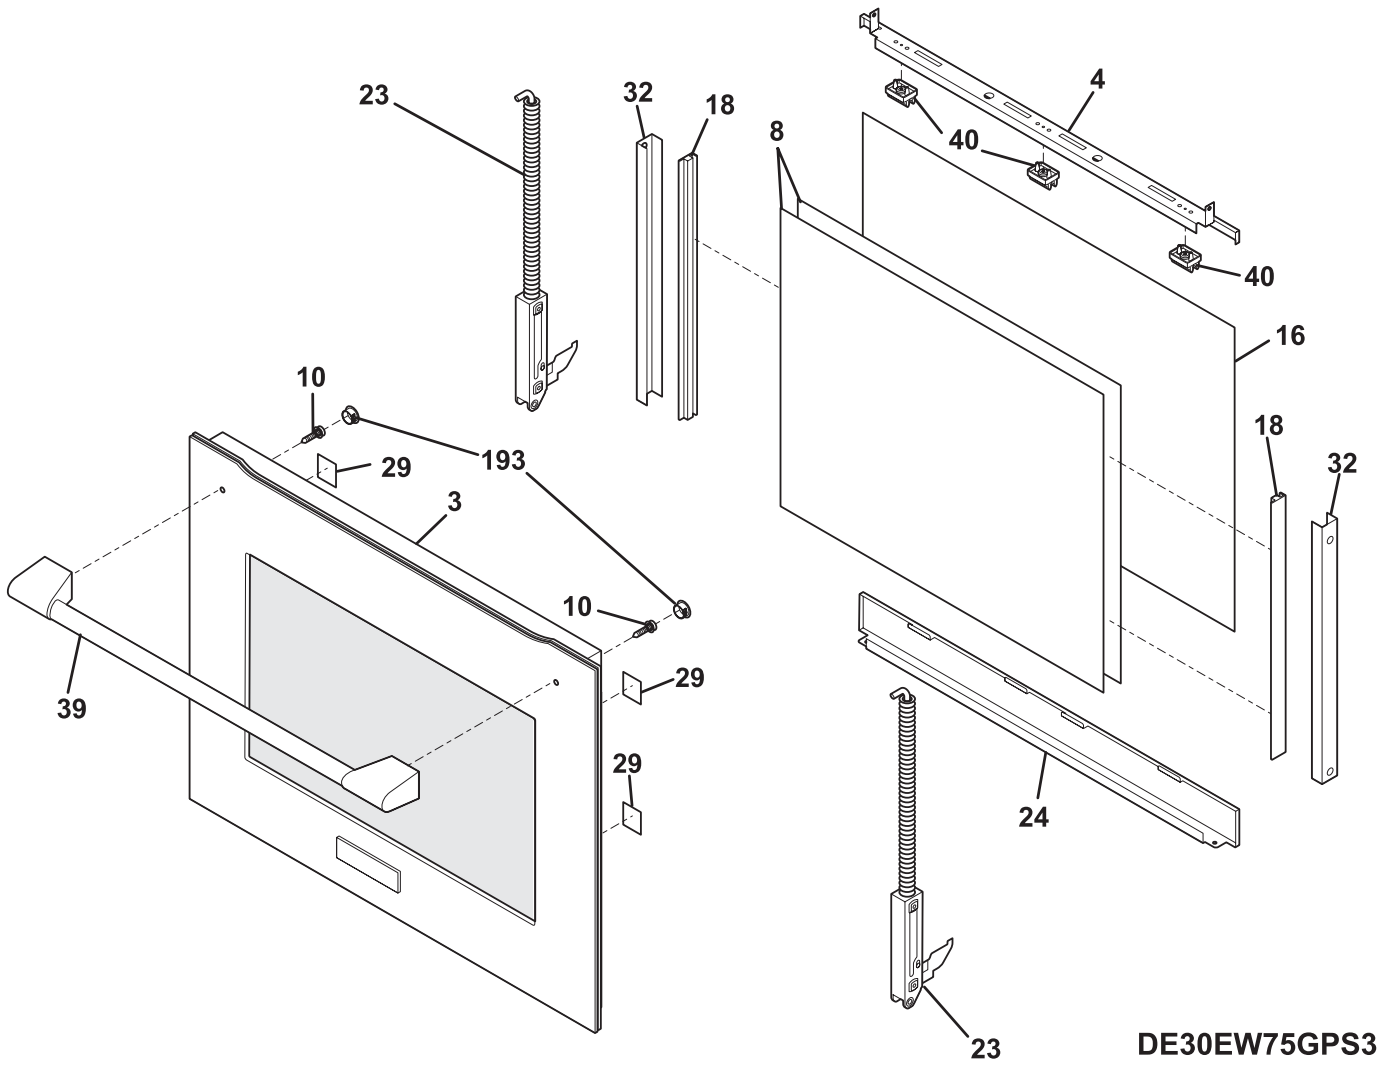


DE30EW75GPS3

DOOR

POS. NO	PART NO.	DESCRIPTION
3	318235906	Door Front Assembly, w/glass, stainless, w/frame & badge
4	318238314	Holder, glass, top
8	318238020	Glass, door, middle, (2)
10	5304400794	Screw, 10-32 x 3/4, (4)
*	3201899	Washer, flat
16	318237926	Glass, oven interior
18	318377501	Seal, middle glass, (2)
23	318244305	Hinge Assy, (2)
*	5304437044	Screw, 10-32 x 1/4, black, (4)
24	318390401	Trim, door, black, lower
29	5304436441	Bumper, base, (4)
32	318382601	Deflector, middle glass, (2)
39	318392423	Handle, door
40	318377400	Bracket, glass holder
193	316210800	Plug, button
*	318163602	Cleaner, stainless steel
*	5304436875	Screw, 8-18 X 1/2, black, (3)
*	5304443263	Screw, 6-20 x 3/8, black

WIRING DIAGRAM

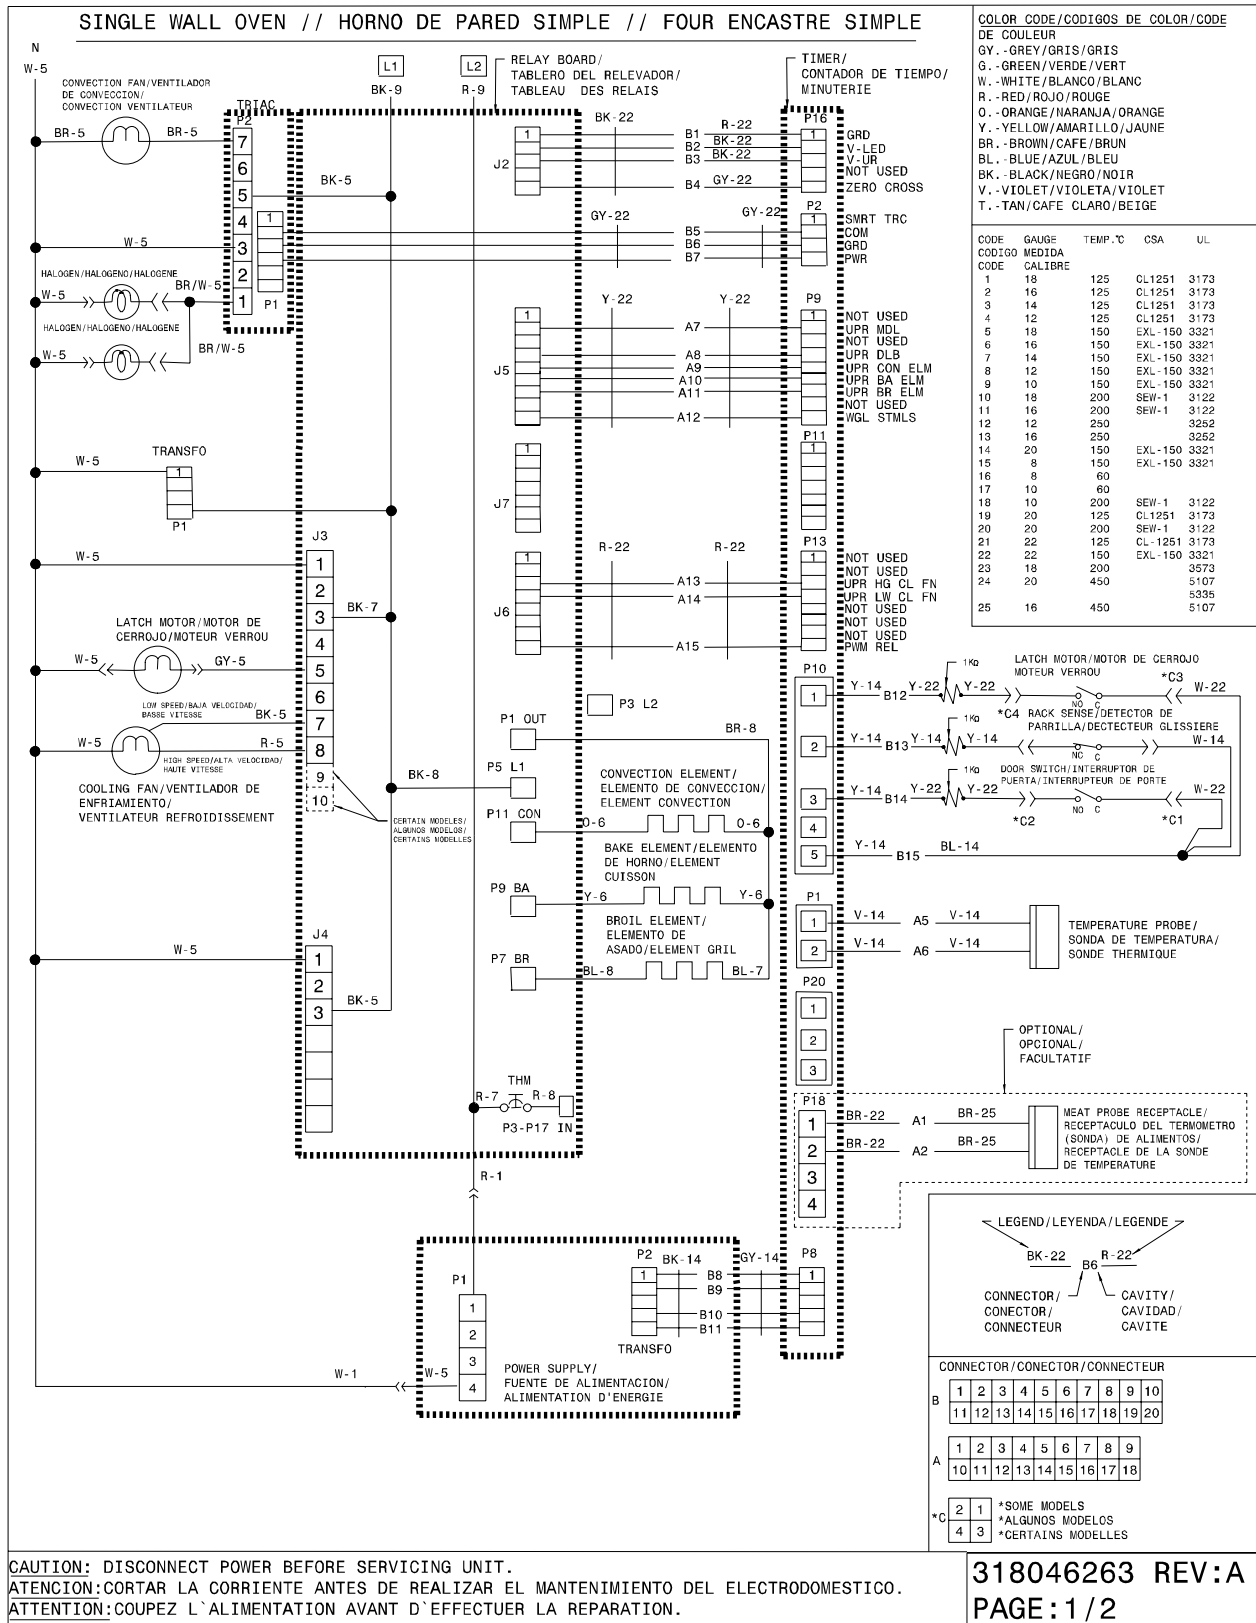

WIRING DIAGRAM

