



# use & care guide

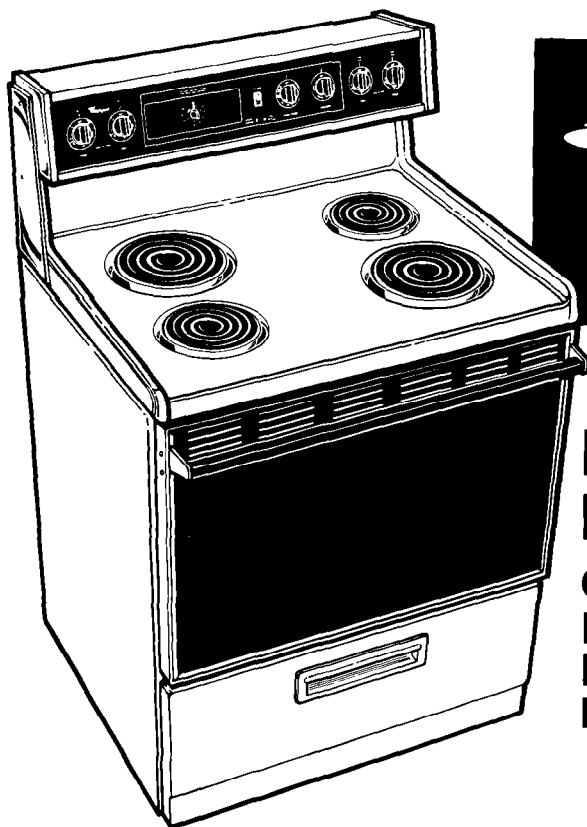

## ELECTRIC RANGE

Continuous-Cleaning  
Models  
RF330PXX (Shown)  
RF3305XX

Washers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-In Ovens and Surface Units, Ranges, Microwave Ovens, Trash Compactors

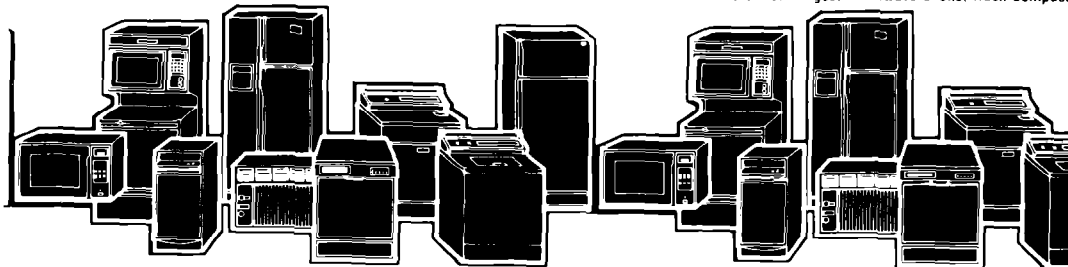

# Contents

	Page		Page
<b>BEFORE YOU USE YOUR RANGE</b> ..	2	The Oven Vent .....	15
<b>IMPORTANT SAFETY</b>		The Storage Drawer .....	16
<b>INSTRUCTIONS</b> .....	3	Optional Door Panel Pac ....	17
<b>PARTS AND FEATURES</b> .....	5	<b>CARING FOR YOUR RANGE</b> ....	17
<b>USING YOUR RANGE</b> .....	6	Control Panel and Knobs ....	17
Using the Surface Units .....	6	Surface Units and Reflector	
Home Canning Information ..	8	Bowls .....	18
Setting the Clock .....	9	Lift-Up Cooktop .....	20
Using the Minute Timer .....	9	The Oven Door .....	20
Baking or Roasting .....	10	The Oven Window .....	21
Setting the Oven Controls ..	10	The Continuous-Cleaning	
How To Position Racks		Oven .....	22
and Pans .....	11	Cleaning Chart .....	24
Broiling .....	12	The Oven Light .....	25
Setting the Oven Controls ..	12	<b>IF YOU NEED SERVICE</b>	
Custom Broil .....	13	<b>OR ASSISTANCE</b> .....	26
Broiling Tips .....	13	<b>WHIRLPOOL RANGE</b>	
Adjusting the Oven		<b>WARRANTY</b> .....	28
Temperature Control .....	14		

©1990 Whirlpool Corporation

## Before you use your range

### You are responsible for:


- Reading and following all safety precautions in this Use and Care Guide.
- Installing and leveling the range on a floor strong enough to support its weight, and where it is protected from the elements. (See the Installation Instructions.)
- Making sure the range is not used by anyone unable to operate it properly.
- Properly maintaining the range.
- Using the range only for jobs expected of a home range.
- Making sure the range is secured by a properly installed anti-tip bracket, with a rear leveling leg positioned under bracket.

# IMPORTANT SAFETY INSTRUCTIONS

## **⚠ WARNING**

**To reduce the risk of fire, electrical shock, injury to persons, or damage when using the range, follow basic precautions, including the following:**

- Read all instructions before using the range.
- Install or locate the range only in accordance with the provided Installation Instructions. It is recommended that the range be installed by a qualified installer. The range must be properly connected to electrical supply and grounded.

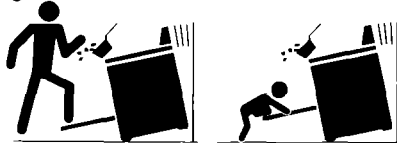

- To reduce the risk of tipping of the appliance, the appliance must be secured by a properly installed anti-tip bracket. To check if the bracket is installed properly, remove the storage drawer (see page 16) and verify that the anti-tip bracket is engaged.
- Do not use the range for warming or heating the room. Persons could be burned or injured, or a fire could start.
- Do not leave children alone or unattended in area where the range is in use. They should never be allowed to sit or stand on any part of the range. They could be burned or injured.
- Do not wear loose or hanging garments when using the range. They could ignite if they touch a hot surface unit or heating element and you could be burned.
- Do not repair or replace any part of the range unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Do not store flammable materials in or near the range. They could explode or burn.
- Do not use water on grease fires.
- Never pick up a flaming pan. Smother flaming pan on cooktop by covering with a well-fitted lid, cookie sheet or flat tray. Flaming grease outside of pan can be extinguished with baking soda or, if available, a multipurpose dry chemical or foam-type extinguisher.
- Use only dry potholders. Moist or damp potholders on hot surfaces may result in burns from steam. Do not let potholder touch hot heating elements. Do not use a towel or bulky cloth for a potholder. They could catch on fire.
- Select a pan with a flat bottom that is about the same size as the surface unit. If pan is smaller than the surface unit, some of the heating element will be exposed and may result in the igniting of clothing or potholders. Correct pan size also improves cooking efficiency.
- Never leave surface units unattended at high heat settings. A boil-over could result and cause smoking and greasy spill-overs that may ignite.
- Make sure the reflector bowls are in place during cooking. Cooking without reflector bowls may subject the wiring and components underneath them to damage.
- Do not line reflector bowls with aluminum foil or other liners. Improper installation of these liners may result in a risk of electric shock or fire.
- Check to be sure glass cooking utensils are safe for use on the cooktop. Only certain types of glass, glass-ceramic, ceramic, earthenware or other glazed utensils are suitable for cooktops without breaking due to the sudden change in temperature.

**continued on next page**

- Turn pan handles inward, but not over other surface units. This will help reduce the chance of burns, igniting of flammable materials, and spills due to bumping of the pan.
- Do not soak removable heating elements in water. The element will be damaged and shock or fire could result.
- Use care when opening oven door. Let hot air or steam escape before removing or replacing food.
- Do not heat unopened containers. They could explode. The hot contents could cause burns and container particles could cause injury.
- Keep range vents unobstructed.
- Always position oven racks in desired location while oven is cool. If rack must be moved while oven is hot, do not let potholder contact hot heating element in oven.
- Do not clean door seal. It is essential for a good seal. Care should be taken not to rub, damage, or move the seal. Clean only parts recommended in this Use and Care Guide.
- Do not use oven cleaners. No commercial oven cleaner or oven liner protective coating of any kind should be used in or around any part of the oven.
- Do not store things children might want above the range. Children could be burned or injured while climbing on it.
- Do not touch surface units, areas near units, heating elements or interior surfaces of oven. Surface units and heating elements may be hot even though they are dark in color. Areas near surface units and interior surfaces of an oven become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact surface units, areas near units, heating elements or interior surfaces of oven until they have had sufficient time to cool. Other surfaces of the range may become hot enough to cause burns; such as, the oven vent opening, the surface near the vent opening, the cooktop, the oven door and window.

• **FOR YOUR SAFETY** •

**DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. THE FUMES CAN CREATE A FIRE HAZARD OR EXPLOSION.**

– **SAVE THESE INSTRUCTIONS** –

**Thank you for buying a Whirlpool appliance. Please complete and mail the Owner Registration Card provided with this product.** Then complete the form below. Have this information ready if you need service or call with a question.

- Copy model and serial numbers from plate (behind the oven door on the oven frame) and purchase date from sales slip.
- Keep this book and the sales slip together in a handy place.

\_\_\_\_\_  
Model Number



\_\_\_\_\_  
Serial Number

\_\_\_\_\_  
Purchase Date

\_\_\_\_\_  
Service Company Phone Number


# Parts and features

Models RF330PXX and RF3305XX

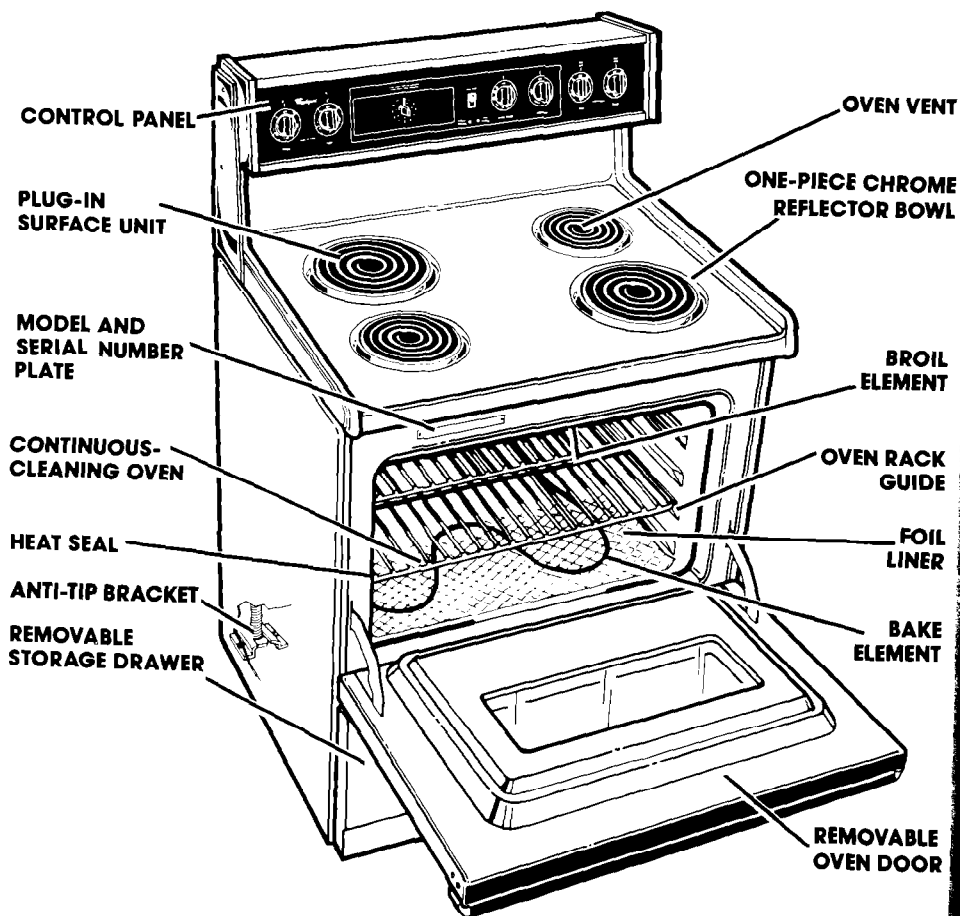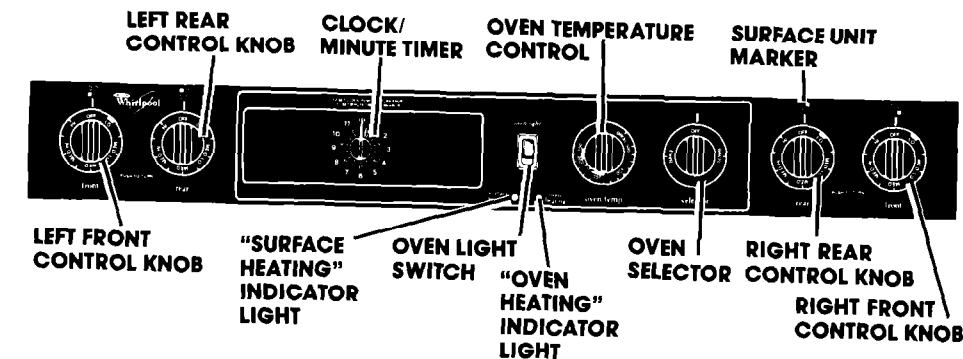

# Using your range

## Using the Surface Units

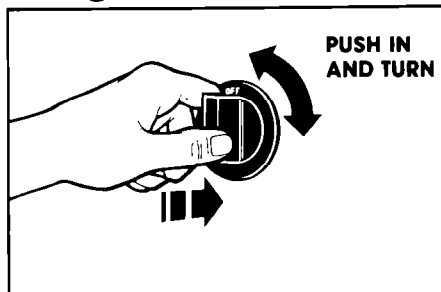

**Control knobs must be pushed in before turning** them to a setting. They can be set anywhere between HI and OFF.

### Surface Unit Markers

The solid dot in the surface unit marker shows which surface unit is turned on by that knob.

**Until you get used to the settings, use the following as a guide.** For best results, start cooking at the high settings; then turn the control knob down to continue cooking. Turn on the surface unit only after placing filled pan on unit.

**Use HI** to start foods cooking; to bring liquids to a boil.

**Use MED-HI** to hold a rapid boil; to fry chicken or pancakes.

**Use MED** for gravy, puddings and icing; to cook large amounts of vegetables.

**Use MED-LO** to keep food cooking after starting it on a higher setting.

**Use LO** to keep food warm until ready to serve. Set the heat higher or lower within the LO band to keep food at the temperature you want.

### Surface Heating Indicator Light

The SURFACE HEATING Indicator Light on the control panel will glow when a surface unit is on.

### **⚠ WARNING**

#### **Burn and Fire Hazard**

**Be sure all control knobs are turned to OFF and all indicator lights are OFF when you are not cooking. Someone could be burned or a fire could start if a surface unit is accidentally left ON.**

### Cookware

There is no one brand of utensil that is best for all people. Knowing something about pan materials and construction will help you select the right cooking utensils for your needs.

- 1.** Use only flat-bottomed utensils that make good contact with the surface units. To check the flatness of a utensil:
  - Turn it over and check the bottom of the pan by placing a ruler across it.
  - Rotate the ruler in all directions. There should be no gaps between the pan and the ruler.
- 2.** The pan should have straight sides and a tight-fitting lid.
- 3.** Choose medium to heavy gauge (thickness) pans that are fairly lightweight. Remember that a very heavy pan will be even heavier when filled with food.

4. The pan material (metal or glass) affects how fast heat transfers from the surface unit through the pan material and how evenly heat spreads over the pan bottom.
5. Handles should be made of a sturdy, heat-resistant material and be securely attached to the pan.

## **⚠ WARNING**

### **Burn, Personal Injury and Product Damage Hazard**

- If the pan is too small for the surface unit, you could be burned by the heat from the exposed section of the surface unit. Use correctly sized cooking utensils to prevent injury.
- Not all glass, glass-ceramic, ceramic, earthenware and other glazed utensils are safe for cooktop cooking. Some will crack or break with sudden temperature changes, which could result in personal injury.
- If a surface unit stays red for a long time, the bottom of the pan is not flat enough or is too small for the surface unit. Prolonged usage of incorrect utensils for long periods of time can result in damage to the surface unit, cooktop, wiring and surrounding areas. To prevent damage, use correct utensils, start cooking on HI and turn control down to continue cooking.
- Do not leave an empty utensil, or one which has boiled dry, on a hot surface unit. It can overheat and may damage the utensil or surface unit.
- Do not use canners, woks and specialty utensils with rounded, warped, ridged or dented bottoms. These could cause severe overheating which damages the utensil and/or surface unit.

## Home Canning Information

### To Protect Your Range:

- 1.** Use flat-bottomed canners for best results. Do not use canners with dented or ridged (porcelain enamel-ware) bottoms. They do not make good contact with the surface unit and cause severe over-heating which damages the cooktop.
- 2.** For best results, use a canner which can be centered over the surface unit. Large diameter canners, if not properly centered, trap heat and can cause damage to the cooktop.
- 3.** Do not place canner on two surface units at the same time. Excessive heat build-up will damage the cooktop.
- 4.** Alternate surface units. This allows the surface units to cool down between batches.
- 5.** Start with hot water. This reduces the time the control is set on high. Reduce heat setting to lowest position needed to keep water boiling.
- 6.** Keep reflector bowls clean for best heat reflection.
- 7.** To prolong the life of the elements:
  - Prepare small batches at a time.
  - Do not use elements for canning all day.

### Optional Canning Kit (Part No. 242905)


The large diameter of most water-bath or pressure canners combined with high heat settings for long periods of time can shorten the life of regular surface units and cause damage to the cooktop.

If you plan to use the cooktop for canning, we recommend the installation of a Canning Kit. Order the kit from your Whirlpool dealer or authorized Whirlpool<sup>SM</sup> service company.




## Setting the Clock

Push In and turn the Minute Timer Knob to set the Clock.

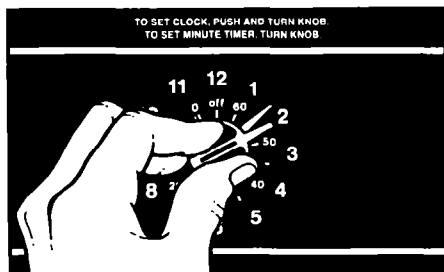

1. Push In Minute Timer Knob and turn clockwise until clock shows the right time of day.

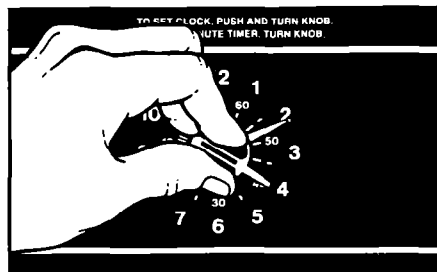


2. Let the Minute Timer Knob pop out. Turn clockwise until Minute Timer hand points to OFF. The clock setting will change if you push in the knob when turning.


## Using the Minute Timer

The Minute Timer does not start or stop the oven. It works like a kitchen timer. Set it in minutes up to an hour. You will hear a buzzer when the set time is up.

**DO NOT PUSH IN THE KNOB** when setting the Minute Timer.

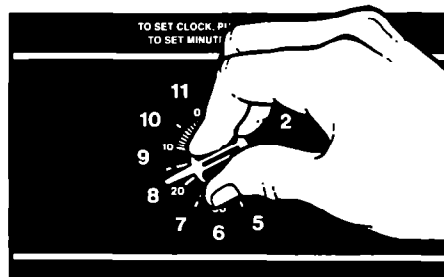

1. Without pushing it in, turn the Minute Timer Knob until the timer hand passes the setting you want.

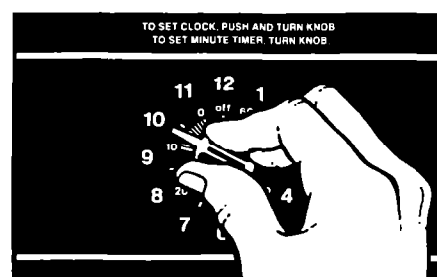


2. Without pushing in, turn the knob back to the setting you want. When the time is up, a buzzer will sound. To stop the buzzer, turn the Minute Timer hand to OFF.


**PUSHING IN AND TURNING THE MINUTE TIMER KNOB CHANGES THE CLOCK SETTING.**

## Baking or Roasting Setting the Oven Controls

1. Position the rack(s) properly **before** turning on the oven. To **change rack position**, lift rack at front and pull out. For information on positioning racks, see "How To Position Racks and Pans" on page 11.

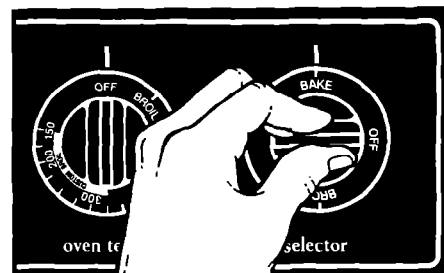


2. Set the Oven Selector to BAKE.

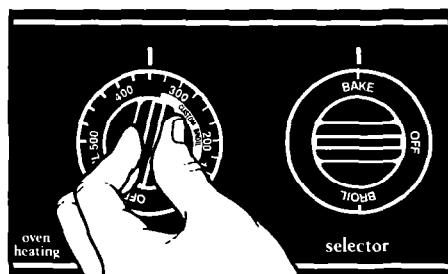


3. Set the Oven Temperature Control to the baking temperature you want. The OVEN HEATING Indicator Light will come on. The oven is preheated when the OVEN HEATING Indicator Light first goes off.

**NOTE:** Do not preheat oven when roasting or cooking items such as casseroles.

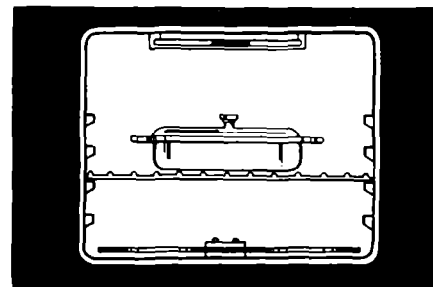

4. Put food in the oven. During baking, the elements will turn on and off to keep the oven temperature at the setting. The OVEN HEATING Indicator Light will turn on and off with the elements.

**The top element helps heat during baking, but does not turn red.**

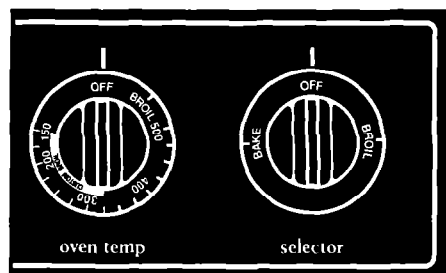

5. When baking is done, turn **both** the Oven Selector and Oven Temperature Control to OFF. The OVEN HEATING Indicator Light will go off.

## How To Position Racks and Pans

The rack(s) should be placed so the top of the food will be centered in the oven. Always leave at least 1½ to 2 inches (4-5 cm) between the sides of the pan and the oven walls and other pans.

### For proper cooking, follow these guidelines for specific foods:

- Angel and bundt cake pans, yeast breads, frozen pies, large roasts and turkeys – place rack on lowest level
- Casseroles, muffins, most quick breads and meats – place rack on second level from bottom
- Cookies, biscuits, cakes and non-frozen pies – place rack on second or third level from bottom

When baking on two racks, arrange racks on bottom and third level from bottom.

## WARNING

### Fire and Personal Injury Hazard

- Always position oven racks in desired location before turning oven on. Be sure the racks are level.
- If racks must be moved while oven is hot, use potholders or oven mitts to protect hands.
- Do not let potholders or oven mitts contact hot heating elements.
- Always use a dry potholder or oven mitt to change racks or handle utensils in the oven. Do not use a damp potholder or oven mitt. Steam burns could result.

Failure to follow the above precautions may result in fire or personal injury.

The hot air must circulate around the pans in the oven for even heat to reach all parts of the oven.

**For Best Air Circulation:**

- Place the pans so that one is not directly over the other.
- Allow 1½-2 inches (4-5 cm) of space around each pan and between pans and oven walls.
- Use only one cookie sheet in the oven at one time.

Use the following as a guide to determine where to place the pans.

**One Pan**

Place in the center of the oven rack.

**Two Pans**

Place in opposite corners of the oven rack.


**NOTE:** "Oven peeking" may cause heat loss, longer cooking times and unsatisfactory baking or roasting results. Rely on your timer.




---

## Broiling

### Setting the Oven Controls

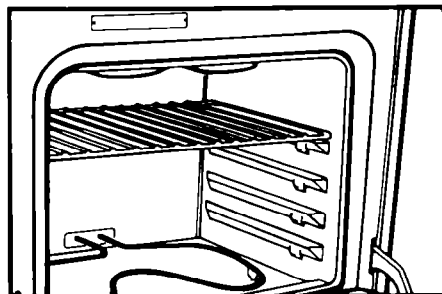


- 1.** Position the rack properly **before** turning on the oven. The oven rack should be positioned so that the surface of the food is at least 3 inches (7.4 cm) away from the broil element.
- 2.** Put the broiler pan and food on the rack.

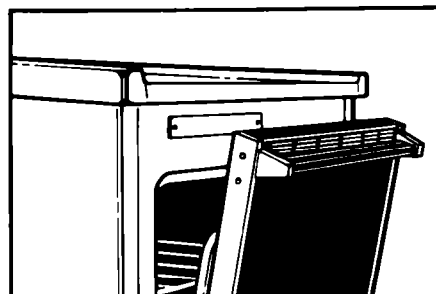

- 3.** Close the door to the Broil Stop position (open about 4 inches, 10.2 cm). The door will stay open by itself.

**NOTE:** The door must be partly open whenever the oven is set to BROIL. Leaving the door open allows the oven to maintain proper temperatures.

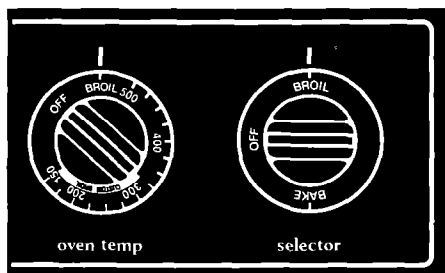

4. Set the Oven Selector and Oven Temperature Control to BROIL. The OVEN HEATING Indicator Light will come on.

**NOTE:** Do not preheat oven when broiling.

5. When broiling is done, turn **both** the Oven Selector and Oven Temperature Control to OFF. The OVEN HEATING Indicator Light will go off.

## Custom Broil

- If food is cooking too fast, turn the Oven Temperature Control **counter-clockwise** until the OVEN HEATING Indicator Light goes off.
- If you want the food to broil slower from the start, set the Oven Temperature Control between 150° and 325°F (65.5° and 162.7°C). The lower the temperature, the slower the cooking.

## Broiling Tips

- Use the broiler pan and grid for broiling. They are designed to drain excess liquid and fat away from the cooking surface to help prevent spatter, smoke or fire.
- Refer to a broiling chart in a reliable cookbook for correct broiling times.
- After broiling, remove the broiler pan from the oven when you remove the food. Drippings will bake on the pan if it is left in the heated oven.

## ⚠ WARNING


### Fire Hazard

- Place meat the correct distance from the element. Meat placed too close to the element may spatter, smoke, burn or catch fire during broiling.
- To ensure adequate grease drainage, do not use cookie sheets or similar pans for broiling. Also, covering the broiler grid with foil is not recommended. Poor drainage of grease may result in fire. If foil is used, cut slits in foil to correspond with all openings in broiler grid. Grease can then drain away and cool in pan.


## Adjusting the Oven Temperature Control

Does your oven seem hotter or colder than your old oven? The temperature of your old oven may have shifted gradually without your noticing the change. Your new oven is properly adjusted to provide accurate temperatures. But when compared to your old oven, the new design may give you different results.


If after using the oven for a period of time, you are not satisfied with the temperature settings, they can be adjusted by following these steps:

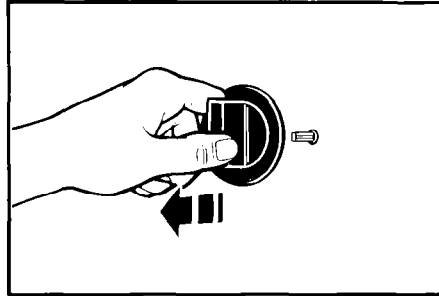


1. Pull the Oven Temperature Control Knob straight off.

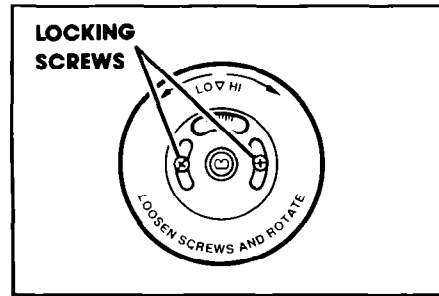

2. Loosen the locking screws inside the control knob. **Note the position of the notches.**

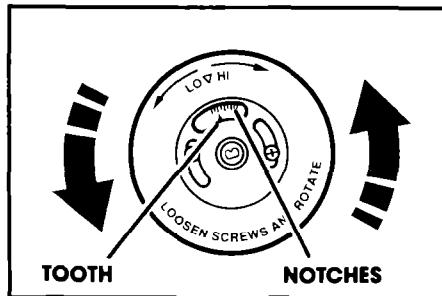

3. To lower the temperature, move the tooth a notch closer to LO. Each notch equals about 10°F (5°C).

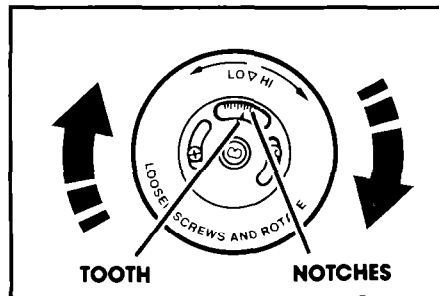

4. To raise the temperature, move the tooth a notch closer to HI. Each notch equals about 10°F (5°C). **Tighten the locking screws and replace the control knob.**


## The Oven Vent

Hot air and moisture escape from the oven through a vent under the right rear surface unit. You can cook on the unit, or keep food warm on it while the oven is on.

### **⚠ WARNING**

#### **Burn Hazard**

**If you leave a utensil on the right rear surface unit, use potholders when removing it. Pan handles can become hot enough to burn. Plastic utensils left over the vent can melt.**

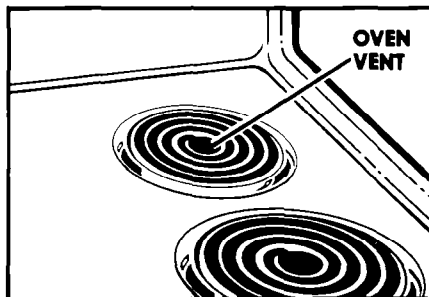


The vent is needed for air circulation. **Do not block the vent.** Poor baking can result.

## The Storage Drawer


The storage drawer is for storing pots and pans. The drawer can be removed to make it easier to clean under the range, and to check for installation of the anti-tip bracket.

**Use care when handling the drawer.**

### Removing the storage drawer

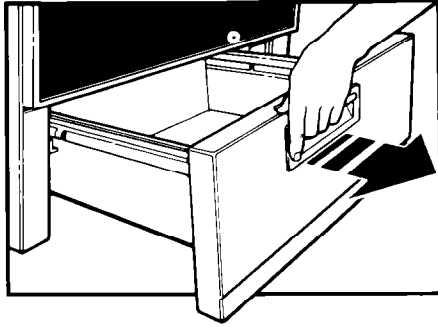


1. Empty drawer of any pots and pans before removing drawer. Pull drawer straight out to the first stop. Lift front and pull out to the second stop.

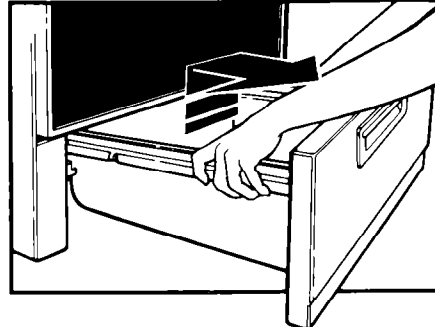


2. Lift back slightly and slide drawer all the way out.


### Replacing the storage drawer

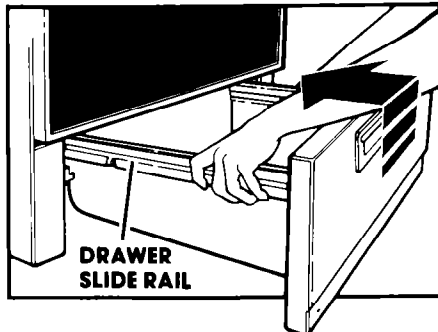

1. Fit ends of drawer slide rails into the drawer guides on both sides of opening.

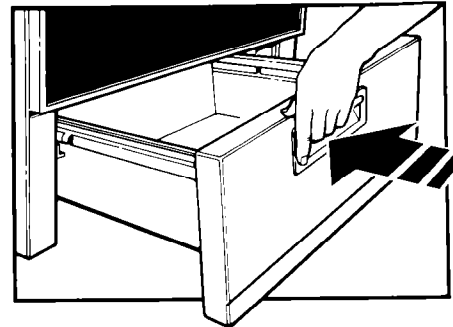

2. Lift drawer front and push in until metal stops on drawer slide rails clear white stops on drawer guides. Lift drawer front again to clear second stop and slide drawer closed.

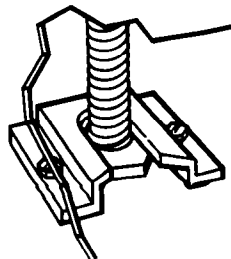

#### To verify the anti-tip bracket is engaged:

- Remove the storage drawer.
- Look to see if the anti-tip bracket is attached to floor with screws.
- Make sure one rear leveling leg is positioned under the anti-tip bracket.
- See Installation Instructions for further details.




## Optional Door Panel Pac (Model RF330PXX)

If you would like to change the color of your oven door glass to white or almond, you can order one of these kits: White (Kit No. 814069) or Almond (Kit No. 814070) from your Whirlpool Dealer. The kits include easy installation instructions.

## Caring for your range

### Control Panel and Knobs

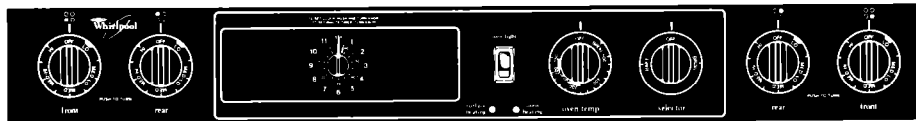

### **⚠ WARNING**

#### **Burn and Electrical Shock Hazard**

**Make sure all controls are OFF and the range is cool before cleaning. Failure to do so can result in burns or electrical shock.**

1. Turn control knobs to the OFF position.
2. Pull control knobs straight off.
3. Use warm soapy water or spray glass cleaner, and a soft cloth, to wipe the control panel. Rinse and wipe dry.
4. Wash control knobs in warm soapy water. Rinse well and dry. Do not soak.
5. Replace control knobs by pushing them firmly into place.


**NOTE:** When cleaning, never use steel wool, abrasives, or commercial oven cleaners which may damage the finish. After cleaning, make sure all control knobs point to the OFF position.

## Surface Units and Reflector Bowls


### Removing

#### **⚠ WARNING**


**Burn and Electrical Shock Hazard**  
Make sure all surface units are **OFF** before removing surface units and reflector bowls. Failure to do so can result in burns or electrical shock.

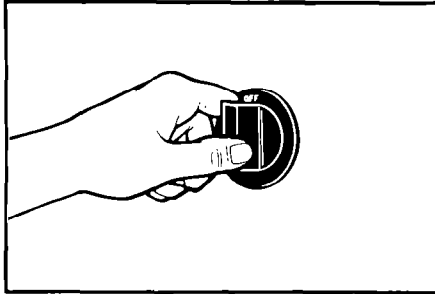


**1.** Turn off all surface units.

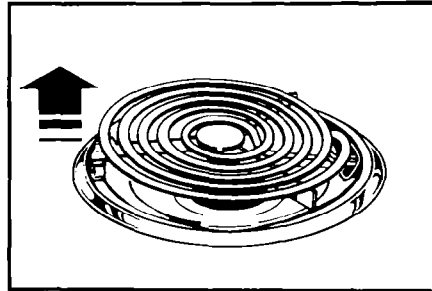

**2.** Lift the edge of the unit, opposite the receptacle, just enough to clear the element hold down clip and the reflector bowl.

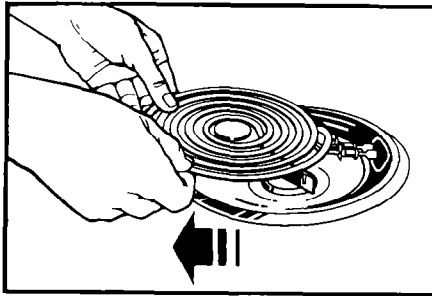

**3.** Pull the surface unit straight away from the receptacle.

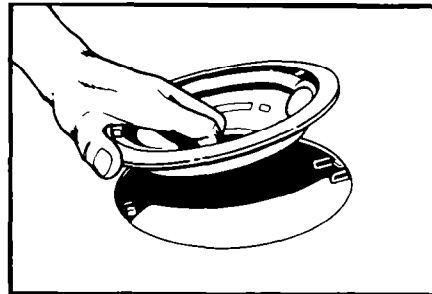


**4.** Lift out the reflector bowl. See "Cleaning Chart" on page 24 for cleaning instructions.

## Replacing


### ⚠ WARNING

#### Burn, Electrical Shock and Fire Hazard


- Make sure all surface units are OFF before replacing surface units and reflector bowls. Failure to do so can result in burns or electrical shock.
- Do not line the reflector bowls with foil. Fire or electrical shock could result.

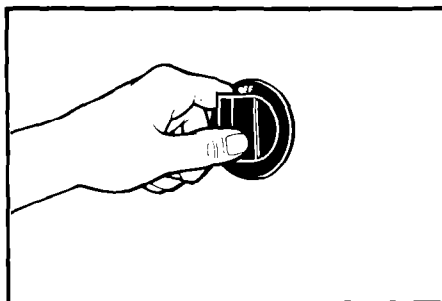


1. Turn off all surface units.

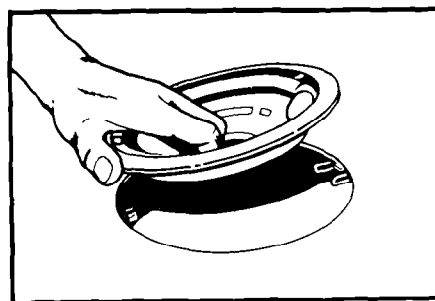

2. Line up openings in the reflector bowl with the surface unit receptacle and the element hold down clip.

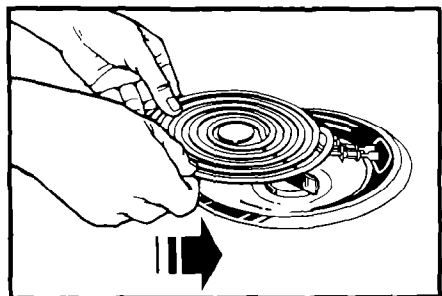

3. Hold the surface unit as level as possible with the terminal just started into the receptacle. Push the surface unit terminal into the receptacle.

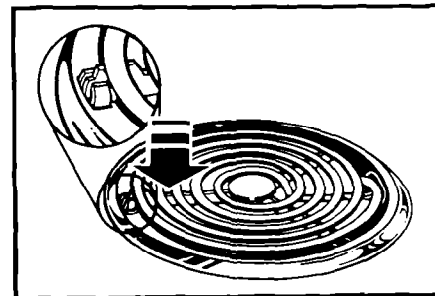

4. When terminal is pushed into the receptacle as far as it will go, push down the edge of the surface unit opposite the receptacle. The element hold down clip will keep the surface unit from moving around.

**NOTE:** Reflector bowls reflect heat back to the utensils on the surface units. They also help catch spills. When they are kept clean, they reflect heat better and look new longer.

If a reflector bowl gets discolored, some of the utensils may not be flat enough, or some may be too large for the surface unit. In either case, some of the heat that's meant to go into or around a utensil goes down and heats the reflector bowl. This extra heat can discolor it.


## Lift-Up Cooktop

1. Lift front of cooktop at both front corners until the support rods lock into place.

### **⚠ WARNING**

#### **Personal Injury and Product Damage Hazard**

- Be sure both support rods are fully extended and in the locked position. Failure to do so could result in personal injury from the cooktop accidentally falling.
- Do not drop the cooktop. Damage can result to the porcelain and the cooktop frame.

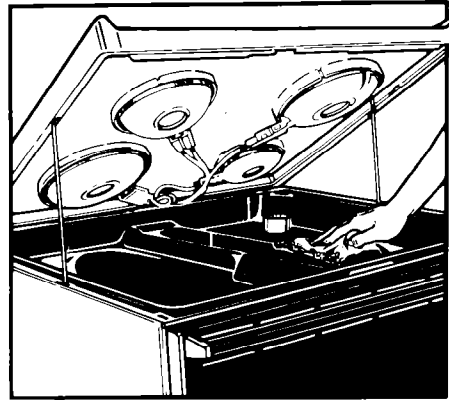

2. Wipe with warm, soapy water. Use a soapy steel wool pad on heavily-soiled areas.
3. To lower the cooktop, lift cooktop from both sides while pressing the support rods back to unlock them. Lower the cooktop into place.

## The Oven Door


Removing the oven door will help make it easier to clean the oven.

### **⚠ WARNING**

#### **Burn and Electrical Shock Hazard**

**Make sure all controls are OFF and the oven is cool before removing oven door. Failure to do so can result in burns or electrical shock.**

1. Open the door to the first stop position.
2. Hold the door at both sides and lift it at the same angle it is in.
3. To replace, fit the bottom corners of the door over the ends of the hinges.  
Push the door down evenly. The door will close only when it is on the hinges correctly.

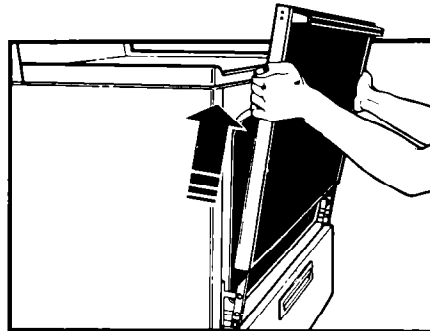


## The Oven Window

If your range has an oven window instead of the black glass door, the outer glass and frame can be removed for cleaning. **DO NOT TAKE APART A BLACK GLASS DOOR.**


### To remove the outer window:

#### **⚠ WARNING**

**Burn and Electrical Shock Hazard**  
Make sure all controls are OFF and the oven is cool before removing the outer window. Failure to do so can result in burns or electrical shock.

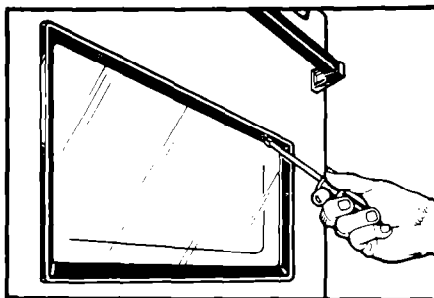


1. Turn off all controls. With the door closed, remove the screws from the top of the outer window frame.

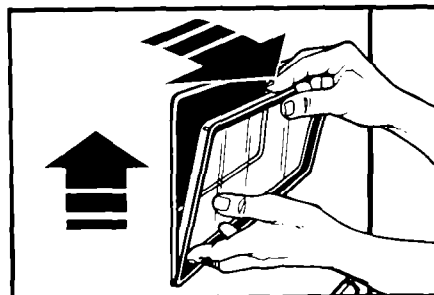


2. Slightly tip the window and frame out from the top.
3. With both hands, lift up on both sides of the frame.

### To replace the outer window:

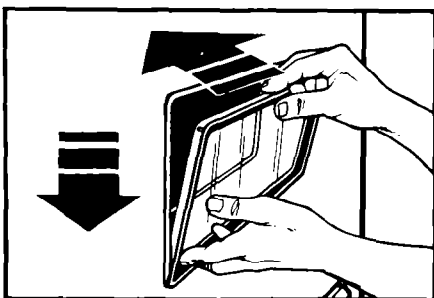



1. Fit the bottom tabs of the frame into the bottom of the window opening.
2. Push the top of the frame into place while pushing down.

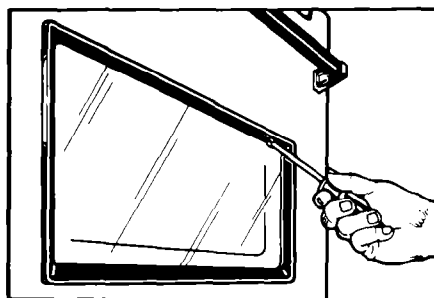

3. Replace the screws.

## The Continuous-Cleaning Oven

Standard oven walls are coated with smooth porcelain. Your Continuous-Cleaning oven walls are coated with a special, rougher porcelain. A fat spatter beads up on the smooth surface, but spreads out on the rougher surface. The bead of fat on the smooth surface chars and turns black. The spread-out fat on the rough surface **gradually** burns away at **medium to high baking temperatures** so the oven can return to a presentably clean condition.

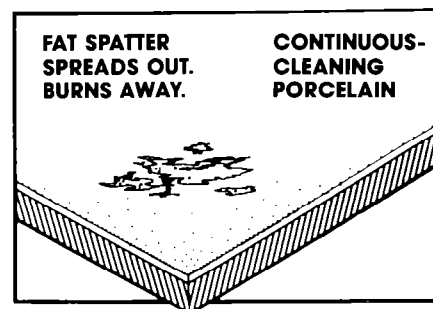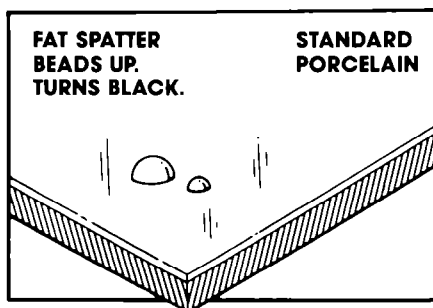

## Using Foil

Using foil on the oven bottom is recommended to catch sugar and starchy spills from pies and casseroles. **It must be used properly.** Cut foil from a roll of heavy-duty 18-inch (45 cm) aluminum foil, or buy a foil kit (Part No. 241430) from your Whirlpool Appliance dealer.

### ⚠ WARNING

#### Burn, Electrical Shock and Product Damage Hazard


- **Make sure all controls are OFF and the oven is cool before using foil. Failure to do so can result in burns or electrical shock.**
- **Do not let foil touch the bake element. It could damage the element. Make sure foil is flat on the bottom and away from the bake element.**

1. Turn off all controls.
2. Lift the cool bake element **slightly to lift the feet off the oven bottom.**
3. **Slide the foil under the bake element.** Make sure the foil is centered and long enough to start up both side oven walls without wrinkling. For proper baking, **lower the bake element so all feet rest solidly on the foil.**

## Cleaning Tips


1. The oven window and racks are not coated. Clean them by hand.
2. The oven door does not get as hot as the walls. Some hand cleaning may be needed.
3. If you do more broiling than baking, hand cleaning may be needed.
4. Use aluminum foil on the oven bottom according to instructions. Spill-overs may not burn away and could stain the bottom.

### Hand Cleaning

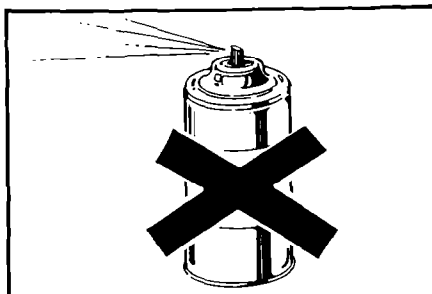


#### ⚠ WARNING


**Personal Injury Hazard**  
Do not use oven cleaning products. Some can become trapped in the porcelain surface and give off harmful fumes.

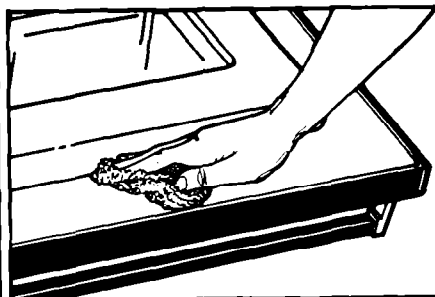

**WINDOW** – Keep clean with hot soapy water. Use a plastic scrubbing pad for heavily-soiled areas. Rinse well. **Do not use steel wool or abrasive cleansers.**

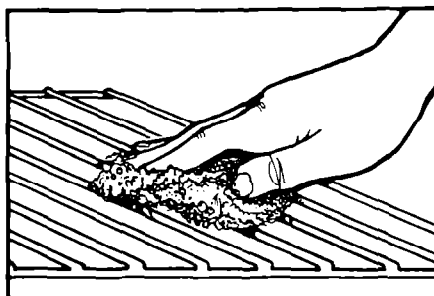

**RACKS** – Use a soapy steel wool pad for best cleaning results. Rinse well.

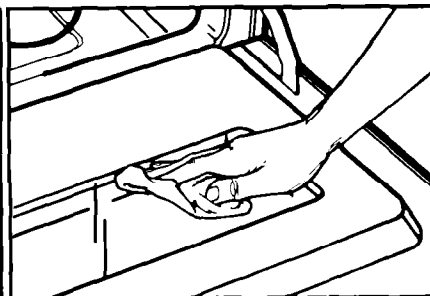

**WALLS AND DOOR** – Wash with hot soapy water. Use a steel wool pad or plastic scrubbing pad for heavily-soiled areas. Rinse well.

## Cleaning Chart

PART	WHAT TO USE	HOW TO CLEAN
<b>Exterior surfaces</b>	Warm soapy water and a soft cloth. Non-abrasive plastic scrubbing pad for heavily-soiled areas.	<ul style="list-style-type: none"> <li>• Wipe off regularly when range is cool.</li> <li>• <b>Do not allow food containing acids (such as vinegar, tomato, lemon juice or milk) to remain on surface. Acids may remove the glossy finish.</b></li> <li>• <b>Do not use abrasive or harsh cleansers.</b></li> </ul>
<b>Surface units</b>	No cleaning required.	<ul style="list-style-type: none"> <li>• Spatters or spills will burn off.</li> <li>• <b>Do not immerse in water.</b></li> </ul>
<b>Chrome reflector bowls</b>	Warm soapy water and a non-abrasive plastic scrubbing pad.	<ul style="list-style-type: none"> <li>• Wash, rinse and dry well.</li> <li>• Clean frequently.</li> <li>• <b>Do not use abrasive or harsh cleansers.</b></li> </ul>
<b>Control knobs</b>	Warm soapy water and a soft cloth.	<ul style="list-style-type: none"> <li>• Wash, rinse and dry well.</li> <li>• <b>Do not soak.</b></li> </ul>
<b>Control panel</b>	Warm soapy water or spray glass cleaner and a soft cloth.	<ul style="list-style-type: none"> <li>• Wash, rinse and dry well.</li> <li>• Follow directions provided with the cleaner.</li> </ul>
<b>Broiler pan and grid</b>	Warm soapy water or a soapy steel wool pad.	<ul style="list-style-type: none"> <li>• <b>Clean after each use.</b></li> <li>• Wash, rinse and dry well.</li> </ul>
<b>Oven racks</b>	Warm soapy water or soapy steel wool pads.	<ul style="list-style-type: none"> <li>• Wash, rinse and dry. Use soapy steel wool pads for heavily-soiled areas.</li> </ul>
<b>Oven door glass</b>	Spray glass cleaner or warm soapy water and a non-abrasive plastic scrubbing pad.	<ul style="list-style-type: none"> <li>• <b>Make sure oven is cool.</b></li> <li>• Follow directions provided with the cleaner.</li> <li>• Wash, rinse and dry well.</li> </ul>
<b>Continuous-Cleaning Oven</b>	Warm soapy water or a soapy steel wool pad.  Heavy-duty aluminum foil.	<ul style="list-style-type: none"> <li>• Remove door for easier access.</li> <li>• Clean heavily-soiled areas or stains. Rinse well with water.</li> <li>• Place piece of foil on oven floor to catch spillovers. Make sure the foil is centered and long enough to start up both side oven walls without wrinkling.</li> <li>• <b>Do not use commercial oven cleaners.</b></li> <li>• <b>Most fat splatters on oven walls and floor will gradually reduce to a presentably clean condition during baking.</b></li> </ul>



## The Oven Light


The oven light will come on when you push the Oven Light Switch on the control panel. Push it again to turn off the light.

### To replace:


#### **⚠ WARNING**

##### **Electrical Shock and Personal Injury Hazard**


- **Make sure oven and light bulb are cool and power to the range has been turned OFF before replacing the light bulb. Failure to do so could result in electrical shock or burns.**
- **The bulb cover must be in place when using the oven. The cover protects the bulb from breaking, and from high oven temperatures. Since bulb cover is made of glass, be careful not to drop it. Broken glass could cause injury.**

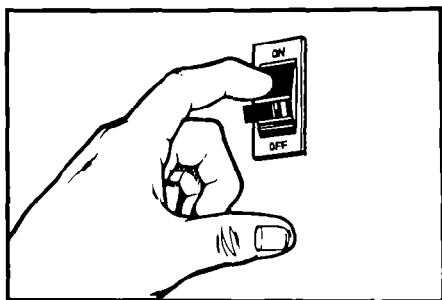


- 1.** Unplug appliance or disconnect at the main power supply.

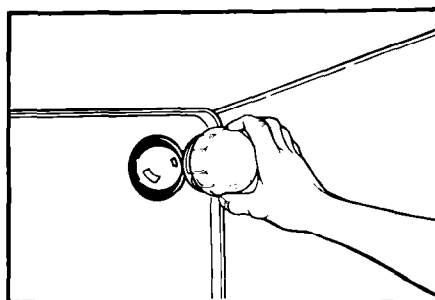

- 2.** Remove the glass bulb cover in the back of the oven by screwing it out counterclockwise.

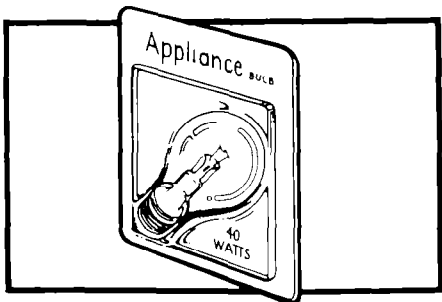

- 3.** Remove the light bulb from its socket. Replace the bulb with a 40-watt appliance bulb.

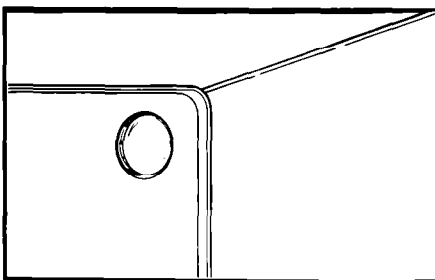

- 4.** Replace the bulb cover by screwing it in clockwise. Plug in appliance or reconnect at the main power supply.

# If you need service or assistance, we suggest you follow these steps:

## 1. Before calling for assistance...

Performance problems often result from little things you can find and fix without tools of any kind.

### If nothing operates:

- Is the power supply cord plugged into a live circuit with the proper voltage? (See Installation Instructions.)
- Have you checked your home's main fuses or circuit breaker box?

### If the oven will not operate:

- Is the Oven Selector turned to a setting (BAKE or BROIL)?
- Is the Oven Temperature Control turned to a temperature setting?

### If surface units will not operate:

- Have you checked your home's main fuses or circuit breaker box?
- Are surface units plugged in all the way?
- Do the control knobs turn?

### If surface unit control knob(s) will not turn:

- Did you push in before trying to turn?

### If soil is visible on Continuous-Cleaning oven finish:

- The special finish is designed to **gradually reduce oven soil** during normal baking or roasting. It is not designed to keep your oven spotless, only presentably clean.
- If you broil often, you may see oven soil.
- The door is cooler than the oven walls. Soil will be more visible on the door than other areas in the oven. See page 23 for how to clean.
- Sugar and starchy spills may leave stains. See page 23 for hand cleaning tips. **Keep foil on oven bottom to catch these spills.**

### If cooking results aren't what you expected:

- Is the range level?
- Does the oven temperature seem too low or too high? See page 14.
- If needed, have you preheated the oven as the recipe calls for?
- Are you following a tested recipe from a reliable source?
- Are you using pans recommended in the "Cookware" section on page 6?
- If baking, have you allowed 1½ to 2 inches (4-5 cm) on all sides of the pans for air circulation?
- Are the pans the size called for in the recipe?
- Do the cooking utensils have smooth, flat bottoms and fit the surface elements being used?

## 2. If you need assistance\*...

**Call Whirlpool COOL-LINE® service assistance telephone number. Dial free from anywhere in the U.S.: 1-800-253-1301**

and talk with one of our trained consultants. The consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

If you prefer, write to:

Mr. Donald Skinner  
Director of Consumer Relations  
Whirlpool Corporation  
2000 M-63  
Benton Harbor, MI 49022

Please include a daytime phone number in your correspondence.

### 3. If you need service\*...



Whirlpool has a nationwide network of authorized Whirlpool<sup>SM</sup> service companies. Whirlpool service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate the authorized Whirlpool service company in your area, call our COOL-LINE<sup>®</sup> service assistance telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

APPLIANCES - HOUSEHOLD - ELECTRICAL APPLIANCES -  
MAJOR - SERVICE & REPAIR MAJOR - REPAIRING & PARTS  
OR  
WASHING MACHINES, DRYERS  
& IRONERS - SERVICING  
WHIRLPOOL APPLIANCES  
AUTHORIZED WHIRLPOOL SERVICE  
SERVICE COMPANIES  
XYZ SERVICE CO 999-9999  
123 MAPLE

### 4. If you need FSP<sup>®</sup> replacement parts\*...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.

To locate FSP replacement parts in your area, refer to Step 2 above or call the Whirlpool COOL-LINE service assistance number in Step 3.

### 5. If you are not satisfied with how the problem was solved\*...

- Contact the Major Appliance Consumer Action Panel (MACAP). MACAP is a group of independent consumer experts that voices consumer views at the highest levels of the major appliance industry.
- Contact MACAP only when the dealer, authorized servicer or Whirlpool have failed to resolve your problem.  
Major Appliance Consumer  
Action Panel  
20 North Wacker Drive  
Chicago, IL 60606
- MACAP will in turn inform us of your action.

\* When requesting assistance, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request.

# WHIRLPOOL<sup>®</sup> RANGE PRODUCT WARRANTY

ER001

LENGTH OF WARRANTY	WHIRLPOOL WILL PAY FOR
<b>FULL ONE-YEAR WARRANTY</b> From Date of Purchase	FSP <sup>®</sup> replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by an authorized Whirlpool <sup>SM</sup> service company.
WHIRLPOOL WILL NOT PAY FOR	
<p><b>A.</b> Service calls to:</p> <ol style="list-style-type: none"> <li>1. Correct the installation of the range product.</li> <li>2. Instruct you how to use the range product.</li> <li>3. Replace house fuses or correct house wiring or plumbing.</li> <li>4. Replace owner accessible light bulbs.</li> </ol> <p><b>B.</b> Repairs when range product is used in other than normal, single-family household use.</p> <p><b>C.</b> Pick up and delivery. This product is designed to be repaired in the home.</p> <p><b>D.</b> Damage to range product caused by accident, misuse, fire, flood, acts of God or use of products not approved by Whirlpool.</p>	

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may apply. For details, please contact your franchised Whirlpool distributor or military exchange.

If you need service, first see the "Service and Assistance" section of this book. After checking "Service and Assistance," additional help can be found by calling our COOL-LINE<sup>®</sup> service assistance telephone number, **1-800-253-1301**, from anywhere in the U.S.

® Registered Trademark/SM Service Mark of Whirlpool Corporation

Part No. 3150258

©1990 Whirlpool Corporation

Printed in U.S.A.

Whirlpool Corporation  
e Makers: Dishwashers, Built-In Ovens and Surface Units, Ranges, Microwave Ovens, Trash Compactors, Room Air Conditioners, Dehumidifiers, Automatic W

