


# **Amana**

A **Raytheon** Company

## **Use and Care Guide Home Laundry Automatic Dryer**

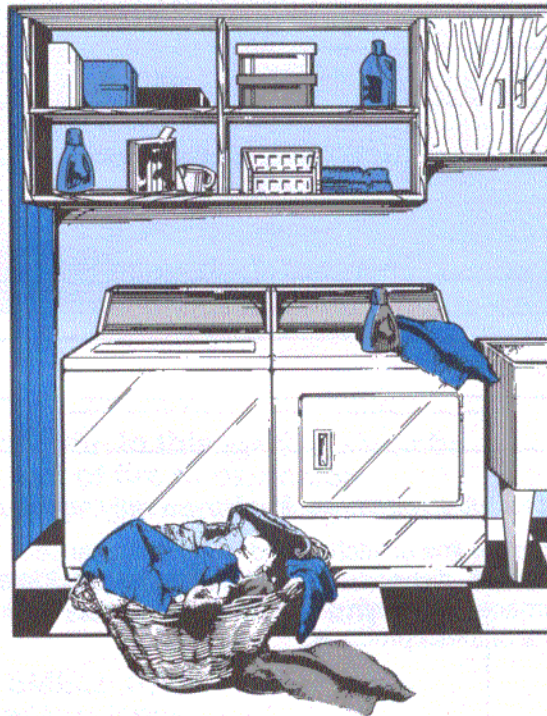

**Models:**  
**(Electric Heat)**  
**LE1007**

**(Gas Heat)**  
**LG1009**

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. (If the dryer changes ownership, be sure this manual accompanies the dryer.)

**Part No. 501547**  
**2/93**

# How To Use Your Dryer . . .

Do not fill the dryer cylinder more than half way full of wet clothes. The load will expand and take up more room as it dries. Overloading can cause wrinkling.

All suggested settings are approximate. Your load size, dryer installation, room conditions and drying requirements will effect how fast the clothes dry. If clothes are too dry, the timer has been "overset". Choose a lower setting next time you dry a similar load.

To dry for ironing dampness, use less time. For wringer washer loads, increase the time 10-15 minutes.

Do not crowd the dryer when drying permanent press clothes or they may be wrinkled. The load must be large enough so clothes will tumble. When tumbling stops, remove clothes and hang.

Do not wash or dry clothes that shed lint in the same load with permanent press or knit garments.

Do not overdry knits. Some may shrink.

## Suggested Dryer Settings


LOAD TYPE	MINUTES (Timer Setting) 240 Volt Electric and Gas Models
<b>Cotton</b>	
Heavyweight Heavy rugs, quilts, Denim, etc.	50-70 Very heavyweight items may require more time.
Normalweight Bath towels, mattress pads, bedspreads, work clothes, rugs, diapers, knits, mixed loads, etc.	40-60 Remove lighter items when dry. Knits will require more time.
Lightweight Sheets, dress shirts, blouses, dresses, table linen, etc.	20-30
<b>Permanent Press/Knits</b>	
Work clothes, jackets, etc.	25-30
Dress shirts, dresses, sheets, table linen, play clothes, etc.	15-25
<b>Synthetic Fibers (Nylon, Orlon, etc.)</b>	
Quilted robes, snow suits, jackets, knits, etc.	20-30
Lingerie, blouses, baby clothes, sheer curtains, etc.	10-20
<b>Wool - Machine Washable</b>	
Blankets	Remove damp.

## Operation Instructions

### ▲WARNING

To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS**, Pages 2 and 3, before operating the dryer.

TIME DRY

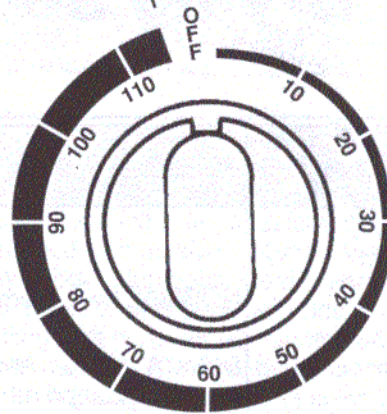

CP001-N

PUSH KNOB TO START

## To Dry Clothes

**IMPORTANT:** Please read instructions before using dryer. Before using dryer for the first time, wash out the inside of the dryer cylinder with a sudsy cloth, then wipe dry. Install the dryer according to the **INSTALLATION INSTRUCTIONS**. **KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

1. **CLEAN LINT FILTER** after each use.
2. **LOAD DRYER.** Open dryer door. Shake out laundry and place in dryer.
3. **CLOSE DOOR.** Dryer will not operate with the door open.

4. **SELECT DRYING TIME:** The numbers on the timer dial (0 to 110) represent the minutes of drying time.

See **SUGGESTED DRYER SETTINGS**, Page 6. The timer setting may be changed at any time during the drying period. The last five minutes of the cycle is an automatic cool-down (no heat) period to condition the clothes and to lessen wrinkling for permanent press loads. Dryer will not heat if set for five minutes or less. Do not remove load until cool-down period is complete and dryer stops.

5. **START DRYER:** Push the timer knob in. Dryer will operate until the end of the cycle (when timer knob indicator reaches the OFF position).

6. **TO STOP DRYER AT ANY TIME,** open door or turn timer knob to an OFF position.

**TO RESTART DRYER,** close door, reset timer if necessary, and push the timer knob in. Your dryer is designed so that it will not operate if the door is open.

### ▲WARNING

To reduce the risk of bodily injury, the dryer will stop tumbling when the door is opened. Do not use the dryer if it does not stop tumbling when the door is opened or starts tumbling without pushing the timer knob in. Remove the dryer from use and call the serviceman.